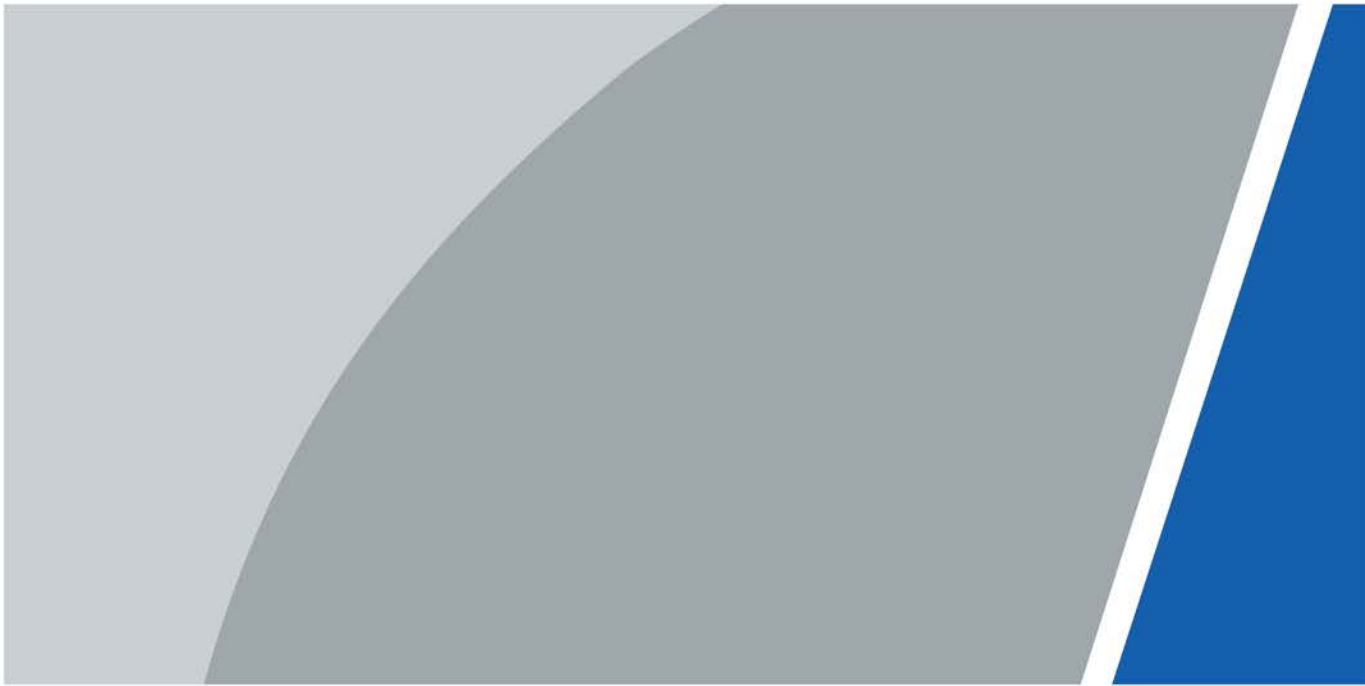


Access Standalone

User's Manual








Foreword

General

This manual introduces the functions and operations of the Access Standalone. Read carefully before using the device, and keep the manual safe for future reference.

Safety Instructions

The following signal words might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, reductions in performance, or unpredictable results.
 TIPS	Provides methods to help you solve a problem or save time.
 NOTE	Provides additional information as a supplement to the text.

Revision History

Version	Revision Content	Release Time
V1.0.0	First Release.	November 2022

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.
- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper user's manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please

contact customer service for the latest program and supplementary documentation.

- There might be errors in the print or deviations in the description of the functions, operations and technical data. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and company names in the manual are properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the Access Standalone, hazard prevention, and prevention of property damage. Read carefully before using the Access Standalone, and comply with the guidelines when using it.

Transportation Requirement



Transport, use and store the Access Standalone under allowed humidity and temperature conditions.

Storage Requirement



Store the Access Standalone under allowed humidity and temperature conditions.

Installation Requirements



WARNING

- Do not connect the power adapter to the Access Standalone while the adapter is powered on.
- Strictly comply with the local electric safety code and standards. Make sure the ambient voltage is stable and meets the power supply requirements of the Access Standalone.
- Do not connect the Access Standalone to two or more kinds of power supplies, to avoid damage to the Access Standalone.
- Improper use of the battery might result in a fire or explosion.



- Personnel working at heights must take all necessary measures to ensure personal safety including wearing a helmet and safety belts.
- Do not place the Access Standalone in a place exposed to sunlight or near heat sources.
- Keep the Access Standalone away from dampness, dust, and soot.
- Install the Access Standalone on a stable surface to prevent it from falling.
- Install the Access Standalone in a well-ventilated place, and do not block its ventilation.
- Use an adapter or cabinet power supply provided by the manufacturer.
- Use the power cords that are recommended for the region and conform to the rated power specifications.
- The power supply must conform to the requirements of ES1 in IEC 62368-1 standard and be no higher than PS2. Please note that the power supply requirements are subject to the Access Standalone label.
- The Access Standalone is a class I electrical appliance. Make sure that the power supply of the Access Standalone is connected to a power socket with protective earthing.

Operation Requirements



- Check whether the power supply is correct before use.

- Do not unplug the power cord on the side of the Access Standalone while the adapter is powered on.
- Operate the Access Standalone within the rated range of power input and output.
- Use the Access Standalone under allowed humidity and temperature conditions.
- Do not drop or splash liquid onto the Access Standalone, and make sure that there is no object filled with liquid on the Access Standalone to prevent liquid from flowing into it.
- Do not disassemble the Access Standalone without professional instruction.

Table of Contents

Foreword	I
Important Safeguards and Warnings.....	III
1 Product Overview.....	1
1.1 Introduction	1
1.2 Application.....	1
2 Local Configuration	3
2.1 Configuration Process.....	3
2.2 Keypad Functions.....	3
2.3 Standby Screen.....	3
2.4 Initialization	4
2.5 Logging in.....	5
2.6 Network Communication	6
2.6.1 Configuring IP.....	6
2.6.2 Configuring Wi-Fi.....	7
2.6.3 Configuring Wiegand	8
2.6.4 Configuring Serial Port	8
2.6.5 Configuring Modes	8
2.7 User Management	9
2.7.1 Adding New User	9
2.7.2 Viewing User information	11
2.7.3 Setting Administrator Password.....	12
2.8 Access Control Management	12
2.8.1 Configuring Unlocking Modes	13
2.8.2 Configuring the Lock Holding Time	13
2.9 Unlocking the Door.....	13
2.9.1 Unlocking by Cards.....	13
2.9.2 Unlocking by Fingerprint.....	14
2.9.3 Unlocking by User Password.....	14
2.9.4 Unlocking by Administrator Password.....	14
2.10 Configuring the System	15
2.10.1 Configuring Time	15
2.10.2 Setting the Volume	15
2.10.3 Restoring Factory Defaults.....	15
2.10.4 Restarting the Device.....	16
2.11 USB Management	16

2.11.1	Exporting to USB	16
2.11.2	Importing From USB	17
2.11.3	Updating System	17
2.11.4	Exporting Unlocking Records	18
2.11.5	Exporting/Importing User Information	18
2.12	System Information	19
3	Web Configurations	20
3.1	Web on Computer	20
3.1.1	Initialization	20
3.1.2	Logging In.....	21
3.1.3	Resetting the Password	22
3.1.4	Configuring Door Parameter	24
3.1.5	Alarm Linkage	26
3.1.5.1	Setting Alarm Linkages.....	26
3.1.5.2	Viewing Alarm Logs.....	28
3.1.6	Time Sections.....	29
3.1.6.1	Configuring Time Sections.....	29
3.1.6.2	Configuring Holiday Groups	29
3.1.6.3	Configuring Holiday Plans	30
3.1.7	Data Capacity.....	31
3.1.8	Setting Volume	31
3.1.9	Configuring Network	32
3.1.9.1	Configuring TCP/IP.....	32
3.1.9.2	Configuring Port.....	32
3.1.9.3	Configuring Automatic Registration.....	32
3.1.9.4	Configuring P2P	33
3.1.10	Setting Date.....	34
3.1.11	Safety Management.....	35
3.1.11.1	Configuring IP Authority	35
3.1.11.1.1	Network Access	35
3.1.11.1.2	Prohibit PING.....	37
3.1.11.1.3	Anti Half Connection	37
3.1.11.2	Configuring System	38
3.1.11.2.1	System Service.....	38
3.1.11.2.2	Creating Server Certificate	39
3.1.11.2.3	Downloading Root Certificate	40
3.1.12	User Management	44
3.1.12.1	Adding Users	44

3.1.12.2 Adding ONVIF Users	45
3.1.13 Maintenance	46
3.1.14 Configuration Management	47
3.1.14.1 Exporting Configuration File	47
3.1.14.2 Importing Configuration File	47
3.1.14.3 Setting Features	48
3.1.14.4 Setting Fingerprint	48
3.1.14.5 Restoring Factory Defaults	49
3.1.14.6 Configuring Port Functions	49
3.1.15 Updating the System	51
3.1.15.1 File Update	51
3.1.15.2 Online Update	51
3.1.16 Version Information	52
3.1.17 Viewing Online Users	52
3.1.18 Viewing System Logs	52
3.1.18.1 System Logs	52
3.1.18.2 Admin Logs	53
3.1.18.3 Unlock Records	53
3.1.19 Logging Out	53
3.2 Web on Phone	53
4 Smart PSS Lite Configuration	55
4.1 Installing and Logging In	55
4.2 Adding Devices	55
4.2.1 Adding Individually	55
4.2.2 Adding in Batches	56
4.3 User Management	57
4.3.1 Configuring Card Type	57
4.3.2 Adding Users	58
4.3.2.1 Adding Individually	58
4.3.2.2 Adding in Batches	60
4.3.3 Assigning Access Permission	62
4.4 Access Management	64
4.4.1 Remotely Opening and Closing Door	64
4.4.2 Setting Always Open and Always Close	65
4.4.3 Monitoring Door Status	65
Appendix 1 Important Points of Fingerprint Registration Instructions	67
Appendix 2 Cybersecurity Recommendations	69

1 Product Overview

1.1 Introduction

Integrated with a powerful processor and a deep-learning algorithm, the can identify fingerprints instantly and accurately. The also supports unlocking the door by cards, passwords, fingerprints, or their combinations. To meet different needs, it also works with a management software to perform more functions.



The fingerprint function is available on select models.


1.2 Application

The is applicable to a variety of scenarios, such as office buildings, schools, industrial parks, apartment complexes, factories, public stadiums, and business centers.




The diagram below is for reference only, and might differ from the actual product.

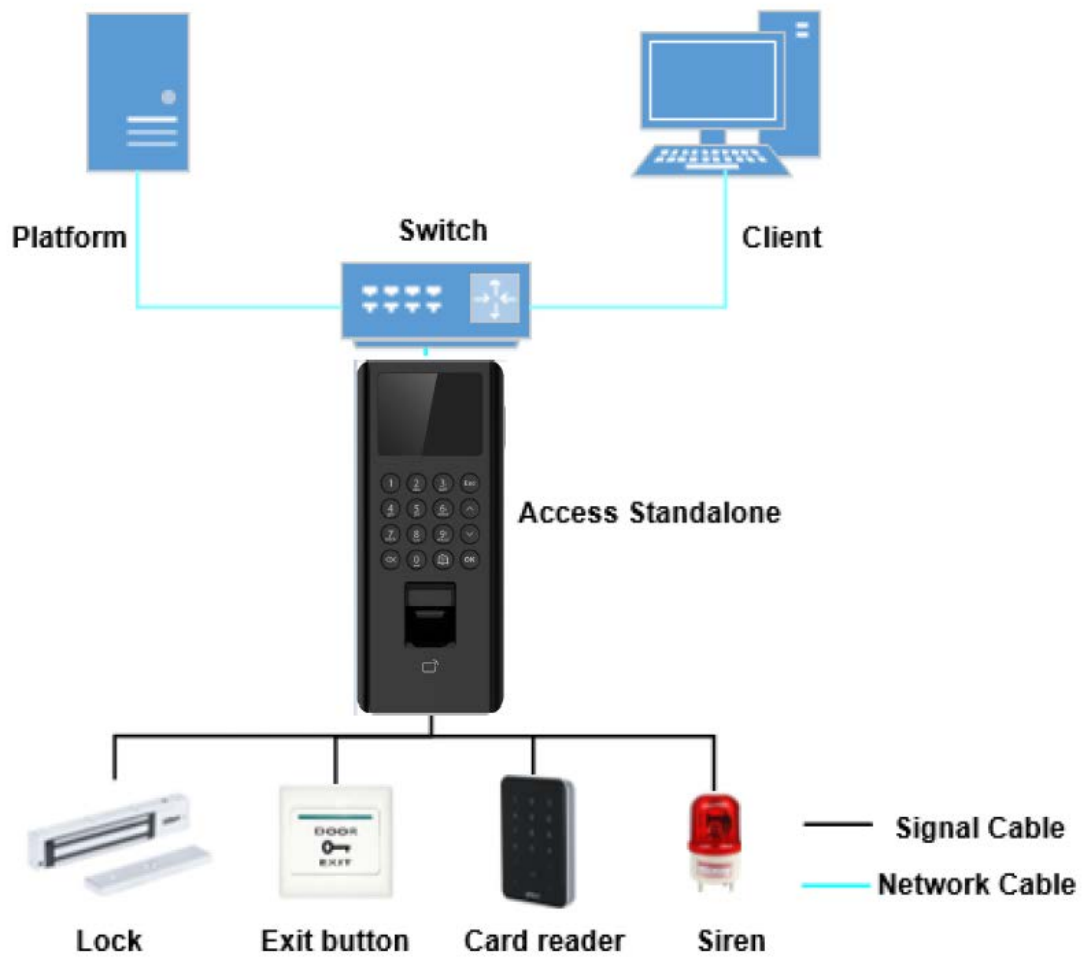Figure 1-1 Network diagram



2 Local Configuration

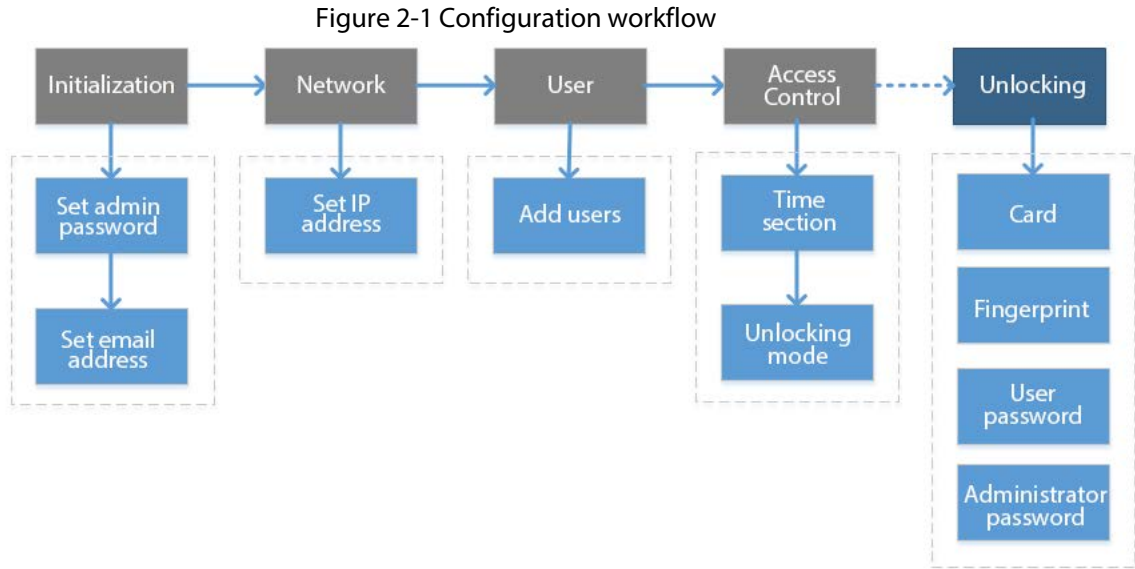2.1 Configuration Process



2.2 Keypad Functions

Table 2-1 Description of keypad

Keypad	Description
Number or letter	Enter information or select menus.
^	Use the arrow keys to navigate the menus.
v	
Esc	Cancel the selection or go back to the previous screen.
OK	Go to the selected screen or confirm the changes.
	Go to the main menu screen.
	Backspace.
	Ring the bell, turn to the next page, or change the input method. The doorbell can function only when the Access Standalone is on the standby screen.

2.3 Standby Screen

You can unlock the door on the standby screen with your card, password, or fingerprint.



- The Access Standalone goes back to the standby screen if there is no operation in 30 seconds.
- The Access Standalone turns off the screen if it stays on the standby screen for 30 seconds.
- The screen below is for reference only, and might differ from the actual product.

Figure 2-2 Standby screen

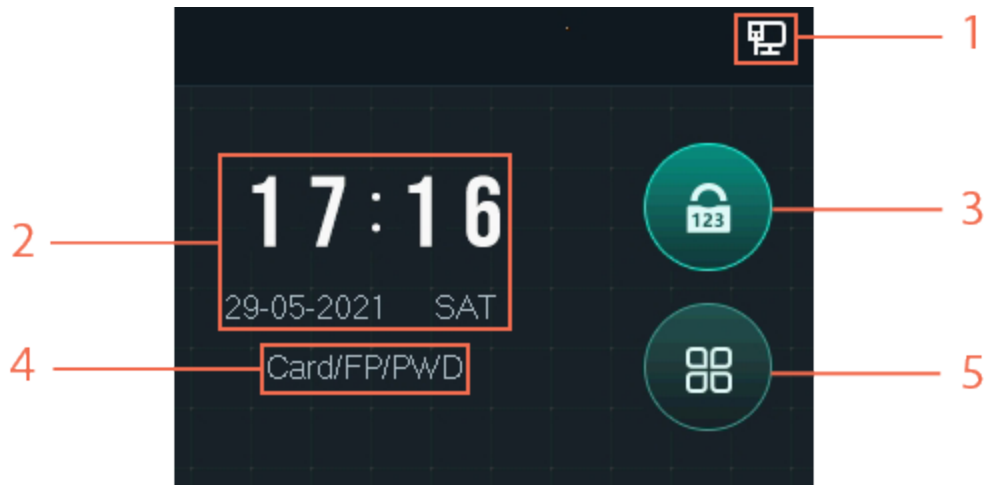
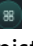



Table 2-2 Standby screen description

No.	Item	Description
1	Status	Displays the status of Wi-Fi, wired network (if any), and USB drive.
2	Date & Time	Time and date.
3	Unlock the door with password	Enter the user ID and password, or enter the administrator password to unlock the door.
4	Unlocking methods	Displays the unlocking methods available on the Access Standalone.
5	Main menu	Tap  to enter the main menu. Only Admin account and users with the administrator permission can access the main menu screen. For details, see "2.5 Logging in".

2.4 Initialization

For the first-time use or after restoring factory defaults, you need to set the password and email address for the admin account. You can use the admin account to log in to the main menu of the Access Standalone and its webpage.

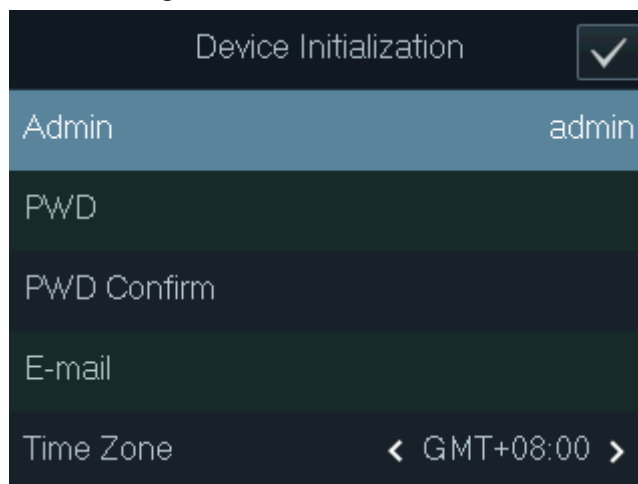Figure 2-3 Initialization



- If you forget the administrator password, send a reset request to your associated e-mail address.
- The password must consist of 8 to 32 non-blank characters and contain at least two types of the following characters: Upper case, lower case, numbers, and special characters (excluding ' " ; : &). Set a high-security password by following the password strength prompt.

2.5 Logging in

Log in to the main menu to configure the Access Standalone. Only admin account and administrator account can enter the main menu of the Access Standalone. For the first-time use, use the admin account to enter the main menu screen and then you can create the other administrator accounts.

Background Information

- Admin account: Can log in to the main menu screen of the Access Standalone, but has no door access permission.
- Administrator account: Can log in to the main menu of the Access Standalone and has door access permissions.

Procedure

Step 1 On the standby screen, tap \wedge and \vee to select  and then tap **OK**.

Step 2 Select a verification method to enter the main menu.



Verification methods might differ depending on the models of the Access Standalone.

- Card: Enter the main menu by swiping card.
- FP: Enter the main menu through the fingerprint.
- PWD: Enter the user ID and password of the administrator account.
- Admin: Enter the Admin password to enter the main menu.


Step 3 On the main menu, tap \wedge or \vee to navigate the menus, and then tap **OK** to configure the parameters.



Use the shortcuts to select the menus by simply tapping 1–6.

- To configure user management, tap 1.
- To configure access control, tap 2.
- To configure communication, tap 3.
- To configure system, tap 4.
- To configure USB, tap 5.
- To view system information, tap 6.

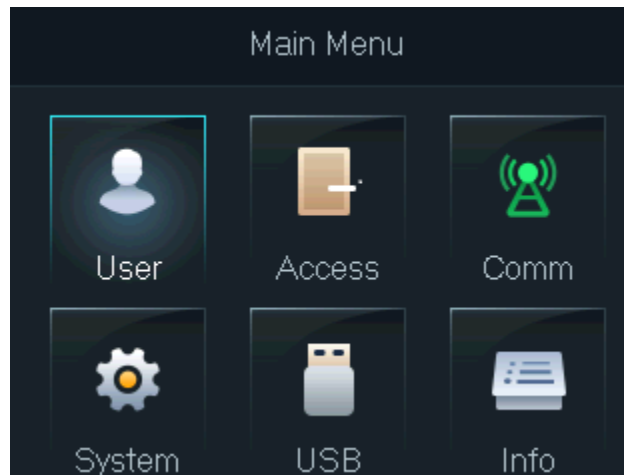Figure 2-4 Main menu



2.6 Network Communication

Configure the network, serial port and Wiegand port parameters to connect the Device to the network or other devices.

2.6.1 Configuring IP

Set IP address for the Access Standalone to connect it to the network. After that, you can log in to the webpage and the management platform to manage the Access Standalone.

Procedure

- Step 1 On the main menu, select **CommIP Address**, and then tap **OK**.
- Step 2 Select **IP Address** and tap **OK** to configure parameters.

Figure 2-5 Configure IP

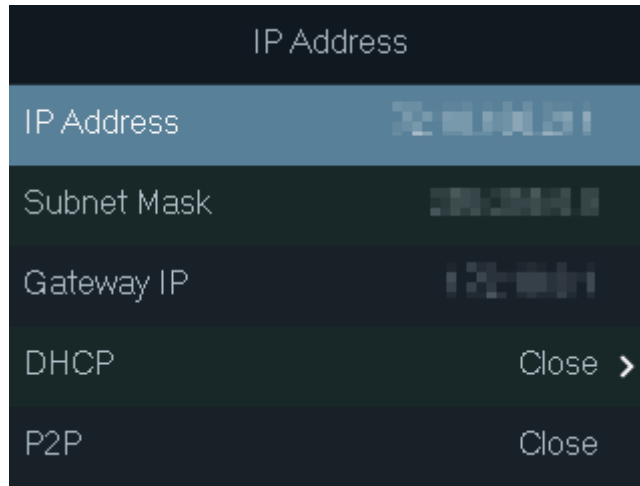


Table 2-3 Description of network parameters

Parameter	Description
IP Address/Subnet Mask/Gateway IP	The IP address, subnet mask, and gateway IP address must be on the same network segment.
DHCP	It stands for Dynamic Host Configuration Protocol. When DHCP is turned on, the Access Standalone will automatically be assigned with IP address, subnet mask, and gateway.
P2P	P2P (peer-to-peer) technology enables users to manage devices without applying for DDNS, setting port mapping or deploying transit server.


2.6.2 Configuring Wi-Fi

Connect the Access Standalone to a wireless network. Wi-Fi is only available on select models.

Procedure

Step 1 On the main menu, select **CommWi-Fi**, and then tap **OK**.

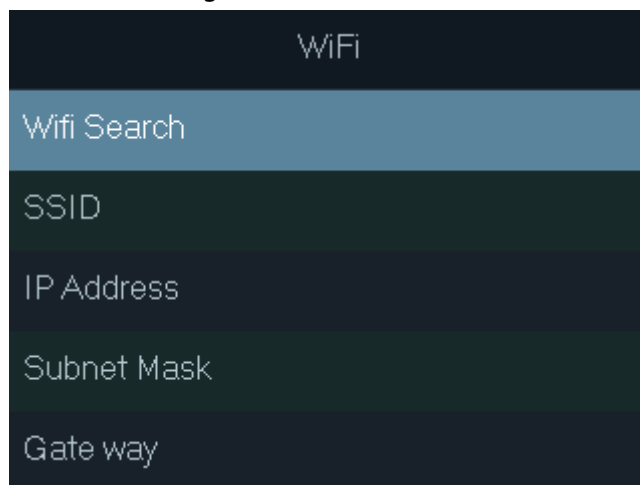Figure 2-6 Wi-Fi





Step 2 Select **Wifi** > **Search**, and then tap **OK**.

Step 3 Select **WiFi**, and then tap **OK** to enable the Wi-Fi function.

The Access Standalone will search for and display all available wireless networks.



Tap  or  to go to the previous or next page.

Step 4 Select a wireless network, tap **OK**, and enter the password.

2.6.3 Configuring Wiegand

Configure Wiegand input or output to connect a card reader or Access Standalone.

On the main menu, select **Comm > Wiegand**, and then tap **OK**.

- Select **Wiegand Input** when you connect an external card reader to the Access Standalone.
- Select **Wiegand Output** when the Access Standalone functions as a card reader, and you need to connect it to a controller or another access terminal.

Table 2-4 Description of Wiegand parameters

Parameter	Description
Output Type	Select a Wiegand format to read card numbers or ID numbers. <ul style="list-style-type: none">• Wiegand26: Reads 3 bytes or 6 digits.• Wiegand34: Reads 4 bytes or 8 digits.• Wiegand66: Reads 8 bytes or 16 digits.
Pulse Width	Enter the pulse width and pulse interval of Wiegand output.
Pulse Interval	
Output Data Type	Select the type of output data. <ul style="list-style-type: none">• User ID: Outputs data based on user ID.• Card No.: Outputs data based on user's first card number, and the data format is hexadecimal or decimal.

2.6.4 Configuring Serial Port

On the main menu, select **CommSerial Port**, and then tap **OK**.

- Select **Serial Input** when the Access Standalone connects to a card reader.
- Select **Serial Output** when the Access Standalone functions as a card reader, and the Access Standalone will send data to the Access Standalone to control door access.
 - ◇ **UserID**: Outputs data based on the ID of the user.
 - ◇ **Card No.:** Outputs data based on card number when users swipe card to unlock door.
- Select **OSDP Input** when the Access Standalone is connected to a card reader based on OSDP protocol.

2.6.5 Configuring Modes

Set the Access Standalone to card reader mode or controller mode.

Procedure

Step 1 On the main menu, select **Comm > Mode Setting**, and then tap **OK**.

Step 2 Select the mode.

- Select **Controller** when it connects to a card reader.
- Select **Card Reader** when the Access Standalone functions as a card reader, and you need to connect it to a controller or another access terminal. In this mode, RS-485 is not supported.



In the **Card Reader** mode, you cannot set the serial input. DOOR_COM and DOOR_NC connect to the CASE and GND of the external Access Standalone for anti-tampering alarm.

Step 3 Select **Baud Rate Setting** to set the baud rate.


- In the **Card Reader** mode, the baud rate automatically adjust according to the Access Standalone.
- In the **Controller** mode, you can set the baud rate. The baud of the Access Standalone must be the same to the external device for successful communication.

2.7 User Management

You can add new users, view user/admin list and edit user information.

2.7.1 Adding New User

Procedure

Step 1 Tap \wedge or \vee to select  on the standby screen, and then tap **OK**.

Step 2 Log in with the administrator account, and then select **User > New User**.



The screens in this manual are only for reference, and might differ from the actual product.


Figure 2-7 Add a new user

New User(1/2)		New User(2/2)	
User ID	1	Permission	User >
Name		Period	255-Default
FP	0	Holiday Plan	255-Default
Card	0	Valid Date	2037-12-31
PWD		User Type	General >

Step 3 Configure the parameters.

Table 2-5 Description of user parameters

Parameter	Description
ID	Each user ID is unique. It can be 18 characters of numbers, letters, or their combination.
Name	Enter the name (a maximum of 32 characters, including numbers, symbols, and letters).

Parameter	Description
Fingerprint	<p>Each user can add up to 3 fingerprints. Follow the on-screen instructions and voice prompts to add fingerprints.</p> <p>You can enable the duress fingerprint function under each fingerprint. After the duress alarm function is enabled, an alarm will be triggered if the door is unlocked by the duress fingerprint.</p>  <ul style="list-style-type: none"> • We do not recommend you set the first fingerprint as the duress fingerprint. • Only Access Standalone of fingerprint model supports the fingerprint function.
Card	<p>You can register 5 cards for each user. On the card registration page, swipe your card on the card reader, and then the card information will be read by the Device.</p> <p>You can enable the duress card function on the card registration page. After the duress alarm function is enabled, an alarm will be triggered if the door is unlocked by the duress card.</p>
PWD	Enter password to unlock the door. The maximum length of the ID digits is 8.
Permission	<p>You can select a user permission for the new user.</p> <ul style="list-style-type: none"> • Normal users only have door unlock permissions. • Administrators can configure the Access Standalone and unlock the door.
Period	A user can only have door access within the defined period. The default value is 255, which means no period is configured.
Holiday Plan	A user can only have door access within the scheduled holidays. The default value is 255, which means no holiday plan is configured.
Valid Date	Define a period during which the user has door access permissions.
User Type	<ul style="list-style-type: none"> • General: General users can unlock the door normally. • Blocklist: When users in the blocklist unlock the door, service personnel receive a notification. • Guest: Guests can unlock the door within a defined period or for a certain number of times. After the defined period expires or the unlocking times runs out, they cannot unlock the door. • Patrol: Paroling users can have their attendance tracked, but they have no unlocking permissions. • VIP: When VIP unlock the door, service personnel will receive a notification. The VIP user is not restricted by unlock modes, such as Multi-card and Time Section. • Others: When they unlock the door, the door will stay unlocked for 5 more seconds. • Custom User 1/2: Same as General.

Step 4 After you have configured all the parameters, tap **Esc**.

Step 5 Tap **OK** to save the changes.

2.7.2 Viewing User information

You can view and search all the general users and admin users, and edit user information. On the main menu, select **User** > **User List/Admin List**, all added users are displayed.

Figure 2-8 User list


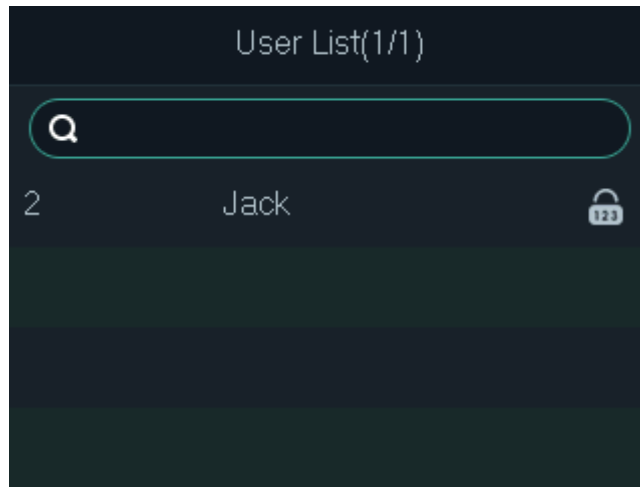





Figure 2-9 Admin list

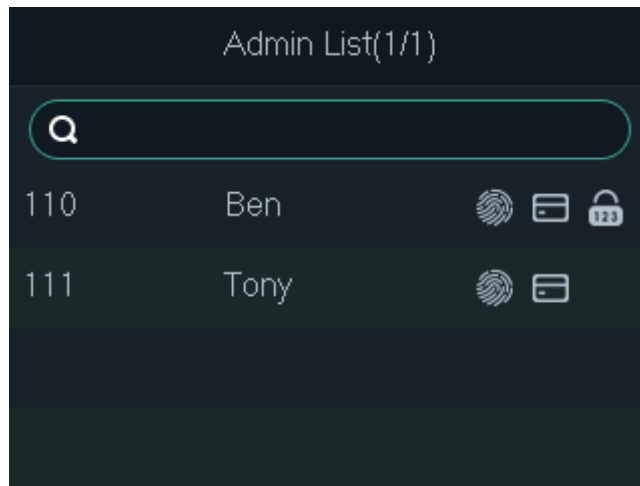


- : Fingerprint
- : Card
- : Password

Edit User information


1. Select the user and then tap **OK**.
2. Edit the user information.
3. Tap **Esc**, and then tap **OK** to save changes.

Search for users

1. Select , and then tap **OK**.
2. Enter the ID of the user, swipe the card or place the finger on the fingerprint scanner to search for the user.

Delete users

1. Select the user, and then tap **OK**.

2. Select  to delete the user.


2.7.3 Setting Administrator Password

You can unlock the door by only entering the admin password. Admin password is not limited by user types. Only one admin password is allowed for the device, but you can set 100 admin passwords through the platform.

Procedure

- Step 1 On the main menu, Select **User > Administrator PWD**
- Step 2 Enter the administrator password, and then tap **OK**.

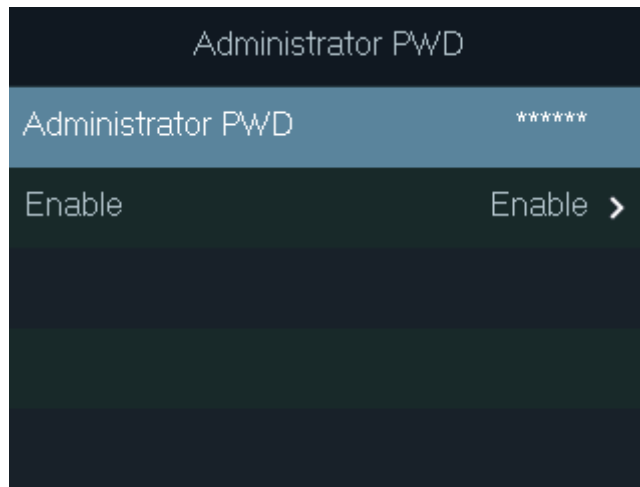Figure 2-10 Administrator password




- Step 3 Select **Enable**, and then tap **OK** to enable the function.

2.8 Access Control Management

Configure the unlocking mode and the unlocking duration.

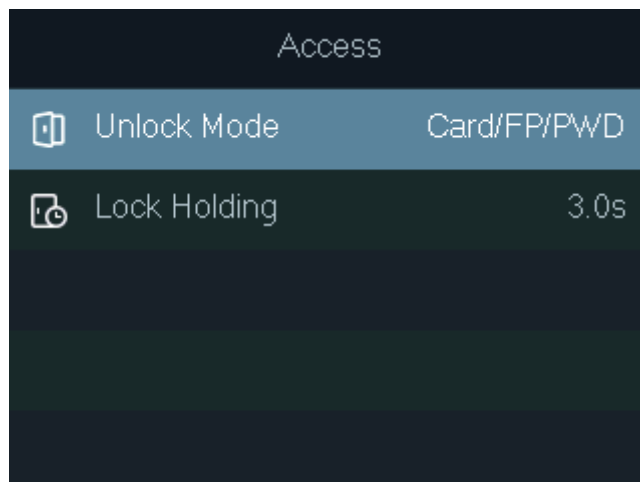Figure 2-11 Access control management




2.8.1 Configuring Unlocking Modes

Configure the unlocking combinations. Use card, fingerprint, password, or their combinations to unlock the door. The unlocking methods might differ depending on the models of the Access Standalone.

Procedure

- Step 1 On the main menu, select **Access > Unlock Mode**, and then tap **OK**.
- Step 2 Tap **OK** to configure the unlocking combinations.
- **And:** You have to verify all the selected unlocking methods to open the door.
 - **Or:** You can verify one of the selected unlocking methods to open the door.

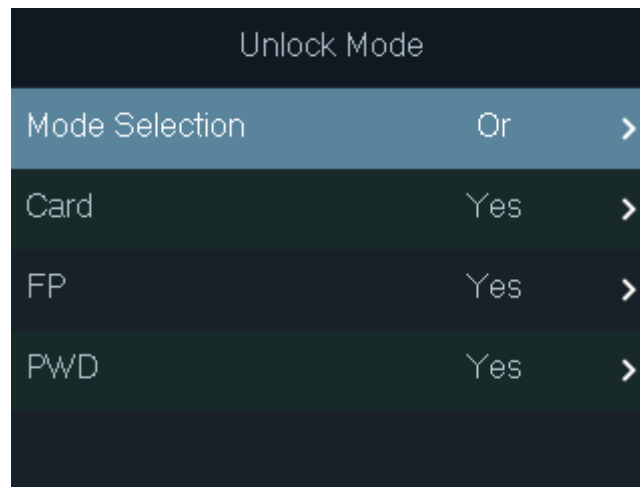Figure 2-12 Element (Multiple Choice)



- Step 3 Tap **Esc**.
- Step 4 Tap **OK** to save changes.


2.8.2 Configuring the Lock Holding Time

The door will remain unlocked for the defined period for people to pass through.

Procedure

- Step 1 On the main menu, select **Access > Lock Holding**.
- Step 2 Tap **OK**, and then enter the time.



Tap  to change the input method.

2.9 Unlocking the Door

2.9.1 Unlocking by Cards

Swipe your card to unlock the door.





2.9.2 Unlocking by Fingerprint

Place your finger on the fingerprint scanner to unlock the door.






2.9.3 Unlocking by User Password

Enter the user ID and password to unlock the door. Unlocking procedure might differ depending on the series of the Access Standalone.

ASI22XXH series

1. On the standby screen, tap  and  to select , and then tap **OK**.
2. Select **PWD**, and then tap **OK**.
3. Enter the user ID, and then tap **OK**.
You can tap  to change the input method.
4. Select **PWD**, enter the password, and then tap **OK**.
5. Select **OK**, and then tap **OK**.

ASI22XXJ series

1. On the standby screen, tap  and  to select , and then tap **OK**.
2. Select **PWD**, and then tap **OK**.
3. Enter the user ID, and then tap **OK**.
 - You can tap  to change the input method.
 - You can tap  to delete.
4. Enter the password, and then tap **OK**.
5. Tap **OK**

2.9.4 Unlocking by Administrator Password


Background Information

After you set your administrator password and enable it, you can unlock the door by simply entering the administrator password. Using administrator password to unlock the door without being subject to user levels, unlock modes, periods, holiday plans, and anti-passback except for normally closed door.



To use the administrator password for door access, you need to turn on the function. For details, See "2.7.3 Setting Administrator Password".

Procedure

- Step 1 Select  on the standby screen.
- Step 2 Select **Admin PWD**, and then tap **OK**.
- Step 3 Enter the administrator password.
- Step 4 Select **OK**, and then tap **OK**.
The door is unlocked.

2.10 Configuring the System

2.10.1 Configuring Time

Configure the time of the Access Standalone, such as date, time, and date format.

Procedure

- Step 1 On the main menu, select **System > Time**, and then tap **OK**.
- Step 2 Select a parameter, and then tap **OK** to edit it.

Figure 2-13 Time settings

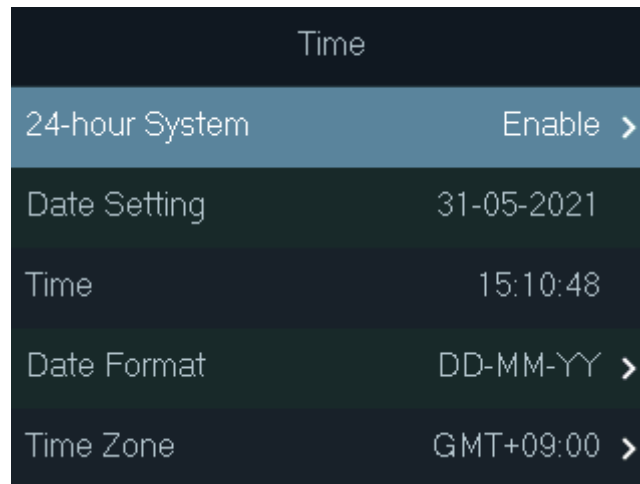


Table 2-6 Description of time parameters

Parameter	Description
24-hour System	Enable 24-hour format.
Date Setting	Set up the date.
Time	Set up the time.
Date Format	Select a date format.
Time Zone	Select a time zone.

2.10.2 Setting the Volume

Adjust the volume of the voice prompt.

Procedure

- Step 1 On the main menu, select **System > Volume**, and then tap **OK**.
- Step 2 Tap the up arrow or down arrow to adjust the volume.

2.10.3 Restoring Factory Defaults

Procedure


- Step 1 On the main menu, select **System > Restore Factory**, and then tap **OK**.
- Step 2 Select an option, and then tap **OK**.



Restoring factory defaults might will cause data loss. Please be advised.

- **Default:** Restores factory defaults and deletes all data, including users, device information, and logs.
- **Default (Save user&log):** Restores factory defaults and deletes all data except user information and logs.

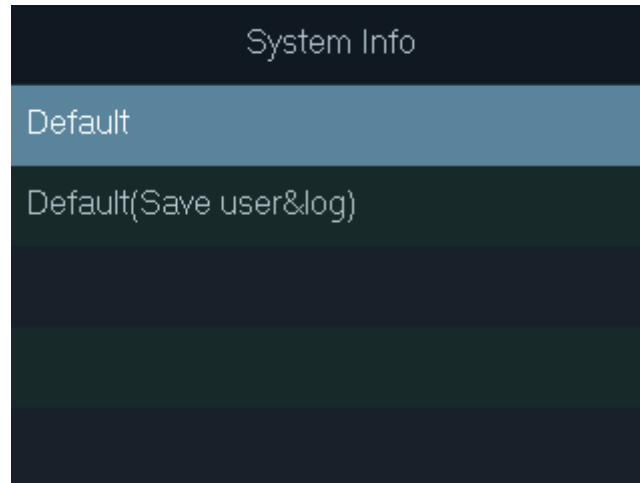Figure 2-14 Restore to default settings



2.10.4 Restarting the Device

On the main menu, select **System** > **Reboot**, and then tap **OK** to restart the device.

2.11 USB Management



- Make sure that a USB flash drive is inserted to the before exporting user information or updating system. To avoid failure, do not pull out the USB flash drive or perform any operation during the process.
- If you want to import data from one to another, you must export the data to a USB flash drive first.

You can use a USB flash drive to update the Access Standalone, and export or import user information.


2.11.1 Exporting to USB

Export data from the Device to a USB flash drive. The exported data is encrypted and cannot be edited.

Procedure

- Step 1 On the main menu, select **USBUSB Export**, and then tap **OK**.
- Step 2 Select the type of data you want to export, and then tap **OK**.

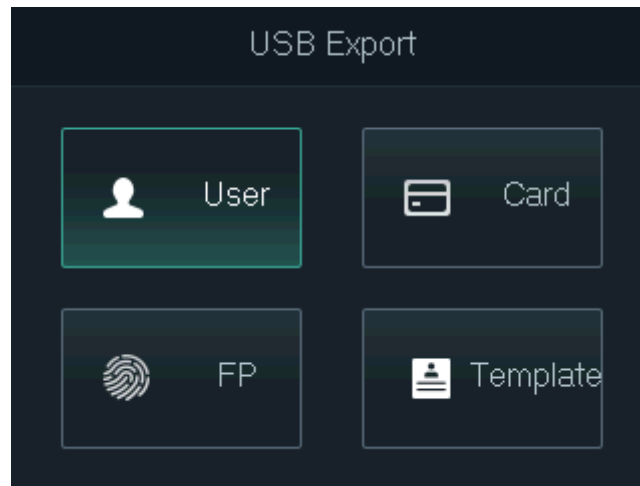Figure 2-15 Export data to the USB drive



- Step 3 Tap **OK**.
The selected data is exported to the USB flash drive.


2.11.2 Importing From USB

You can import data from USB to the Device.

Procedure

- Step 1 On the main menu, select **USBUSB Import**, and then tap **OK**.
Step 2 Select the type of data you want to import, and then tap **OK**.

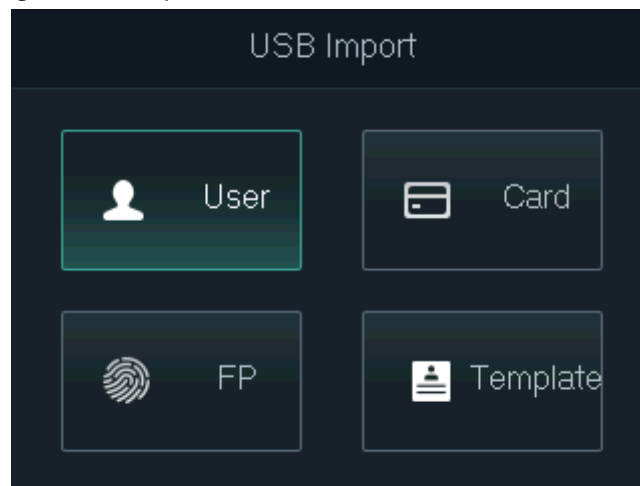Figure 2-16 Import data from the USB flash drive



- Step 3 Tap **OK**.
The selected data is imported to the Device.

2.11.3 Updating System

You can use a USB flash drive to update the system of the Device.

Procedure

- Step 1 Rename the update file to "update.bin", put it in the root directory of the USB flash drive, and then insert the USB flash drive to the Device.

Step 2 On the main menu, select **USBUSB Update**.

Step 3 Tap **OK**.

The Device will restart when update is complete.

2.11.4 Exporting Unlocking Records


Export unlocking records to a USB flash drive.

Procedure

Step 1 On the main menu, select **USB > Export Records**, and then tap **OK**.

Step 2 Select the time.

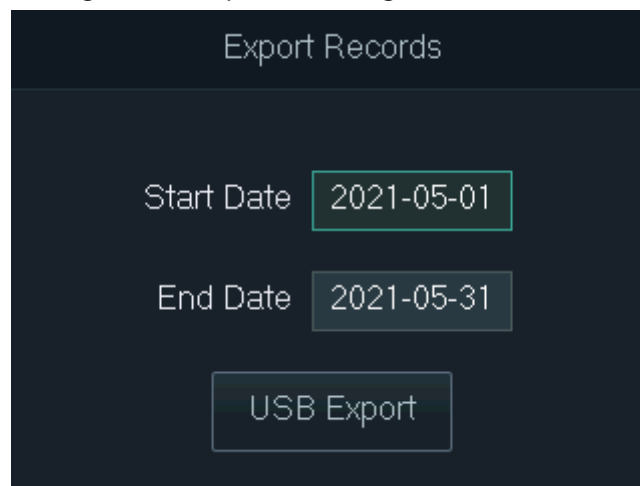Figure 2-17 Export unlocking records



Step 3 Select **USB Export**, and then tap **OK**.

The unlocking records are exported to the USB flash drive.

2.11.5 Exporting/Importing User Information

You can import or export user information, including cards and fingerprints.


Procedure

Step 1 On the main menu, select **USB > One-click Operation**, and then tap **OK**.

Step 2 Select **Import** or **Export**, and then tap **OK**.

- **Import:** Import user information, including cards and fingerprints.
- **Export:** Export user information, including cards and fingerprints.

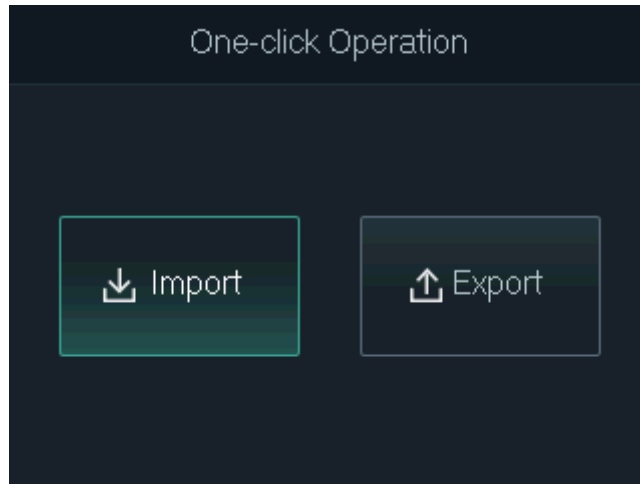Figure 2-18 Import/export user information



2.12 System Information

On the main menu, select **Info**, and then tap **OK**. You can view data capacity and system information of the Device.

- **Data Capacity:** Displays the number of general users, admin users, cards, fingerprints, unlocking records, and alarm records that have been stored, and the storage capacity.
- **Device Version:** Displays software and hardware information of the Device.

3 Web Configurations

Open the web browser on your computer or phone. Log in to the webpage to configure and update the Device.

3.1 Web on Computer

3.1.1 Initialization

You need to set a password and link an email address before logging in to the web for the first time.

Procedure

Step 1 Go to the IP address (192.168.1.108 by default) of the Device in the browser.



Make sure the computer is on the same LAN as the Device.

Figure 3-1 Initialization

Boot Wizard

1 Device Initialization 2 Auto Check

Username admin

New Password

Low Medium High

Confirm Password

Password shall be at least 8 digits, and shall at least include two types, including number, letter and common character

Bind Email

(It will be used to reset password. Please fill in or complete it timely)


Next

Step 2 Enter the new password, confirm password, enable **Bind Email**, enter an email address, and then click **Next**.



- The password must consist of 8 to 32 non-blank characters and contain at least two types of the following characters: Upper case, lower case, numbers, and special characters (excluding ' " ; : &). Set a high-security password by following the password strength prompt.
- Keep the password properly after initialization and change the password regularly to improve security.
- When you need to reset the administrator password by scanning the QR code, you need the associated email address to receive the security code.

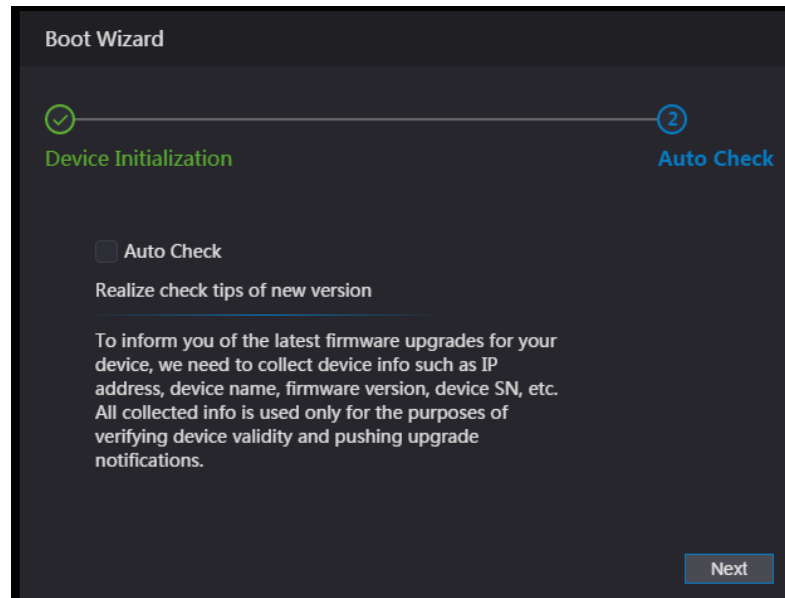Figure 3-2 Auto check



Step 3 Click **Next**.

Step 4 (Optional) Select **Auto Check**.



We recommend you to select **Auto Check** to get the latest version in time.

Step 5 Click **Next**.

Step 6 Click **Complete**.

3.1.2 Logging In

Procedure

Step 1 Go to the IP address (192.168.1.108 by default) of the Access Standalone in the browser, and press the Enter key.



Make sure that the computer is on the same LAN as the Access Standalone.

Figure 3-3 Login

WEB SERVICE

Username:

Password:

Forgot Password?

Login

Step 2 Enter the user name and password.



- The default administrator name is admin, and the password is the one you set during initialization. We recommend you to change the administrator password regularly to increase security.
- If you forgot the administrator password, click **Forgot Password?** to reset it. For details, see "3.1.3 Resetting the Password".

Step 3 Click **Login**.


3.1.3 Resetting the Password

When resetting the password of the admin account, your email address is required.

Procedure

- Step 1 On the login page, click **Forgot Password**.
- Step 2 Read the prompt carefully and click **OK**.

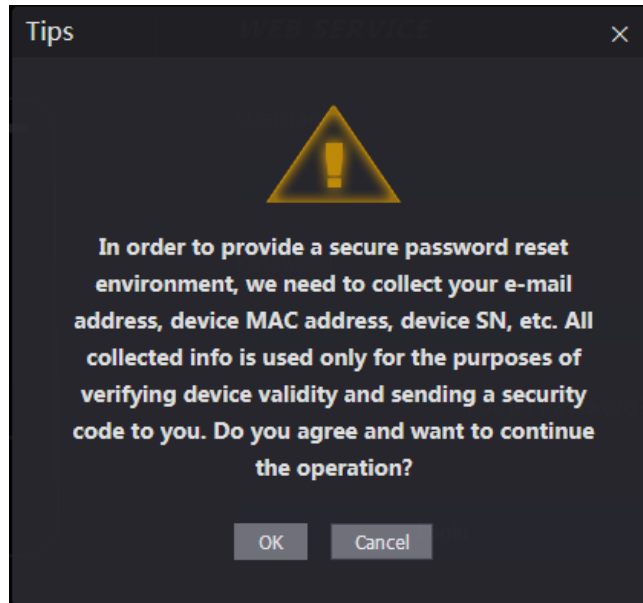Figure 3-4 Reset prompt




Step 3 Scan the QR code on the window, and you will get the security code.



- A maximum of two security codes will be generated by scanning the same QR code. If security codes become invalid, refresh the QR code and scan again.
- After you scanned the QR code, send the content that you received to the designated email address, and then you will receive a security code.
- Use the security code within 24 hours after you receive it. Otherwise, it will become invalid. If wrong security codes are entered for consecutive five times, the administrator will be frozen for five minutes.

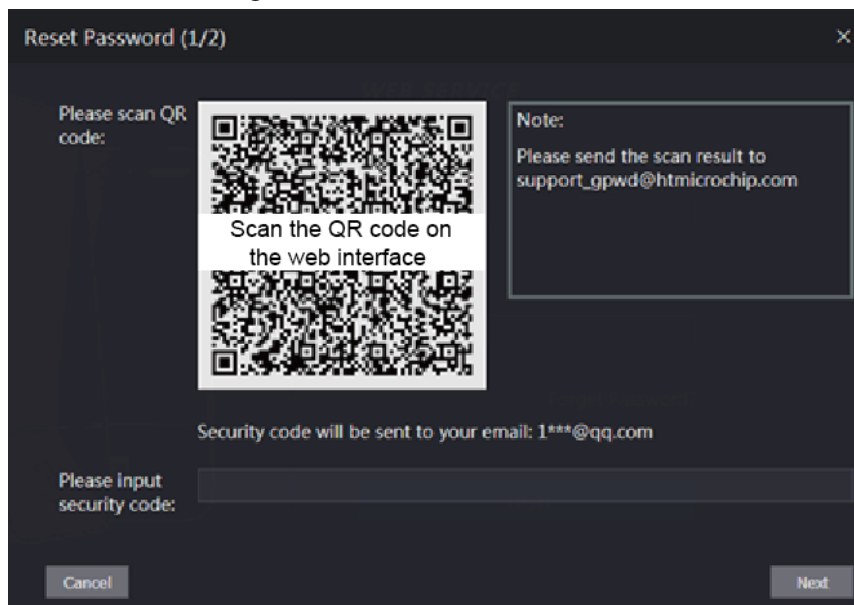Figure 3-5 Reset Password



Step 4 Enter the security code you have received.

Step 5 Click **Next**.

Step 6 Reset and confirm the new password.



The password must consist of 8 to 32 non-blank characters and contain at least two types of the following characters: Upper case, lower case, numbers, and special characters (excluding ' " ; : &). Set a high-security password by following the password strength prompt.

Step 7 Click **OK** to complete resetting.

3.1.4 Configuring Door Parameter

Configure the access control parameters.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Door Parameter**.

Figure 3-6 Door parameter

Table 3-1 Description of door parameters

Parameter	Description
Name	Enter a name for the door that the Device controls.
State	Select NC for normally closed, or NO for normally open. If either is selected, the defined opening method will not be effective.
Opening Method	<ul style="list-style-type: none"> • Time Section: Set different unlock method for defined periods. • Multi-card: The user can unlock the door when multiple users and multiple user groups grant access. • Unlock mode: set unlock combinations.
Hold Time (Sec.)	Unlock duration. The door will be locked again after the duration. It ranges from 0.2 to 600 seconds.
Normally Open Time	The door remains open or closed during the defined period.

Parameter	Description
Normally Close Time	
Timeout (Sec.)	A timeout alarm will be triggered if the door remains unlocked for longer time than this value.
Remote Verification	Set the remote verification door opening period. For details, see "3.1.6.1 Configuring Time Sections". When opening a door is authorized on the device, it needs to be confirmed on the platform before it can be opened.
Duress Alarm	An alarm will be triggered when a duress card or duress password is used to open the door.
Door Sensor	Intrusion and overtime alarms can be triggered only after Door Sensor is enabled.
Intrusion Alarm	When Door Sensor is enabled, an intrusion alarm will be triggered if the door is opened abnormally.
Overtime Alarm	A timeout alarm will be triggered if the door remains unlocked for longer time than the Timeout(Sec) , which ranges from 1 to 9999 seconds.
Anti-passback Alarm	If enabled, users need to verify identities both for entry and exit; otherwise an alarm will be triggered. <ul style="list-style-type: none"> • If a person enters with verification and exits without verification, an alarm will be triggered when they attempt to unlock again, and access is denied at the same time. • If a person enters without verification and exits with verification, an alarm will be triggered when they attempt to unlock again, and access is denied at the same time.

Step 3 Configure unlock method.


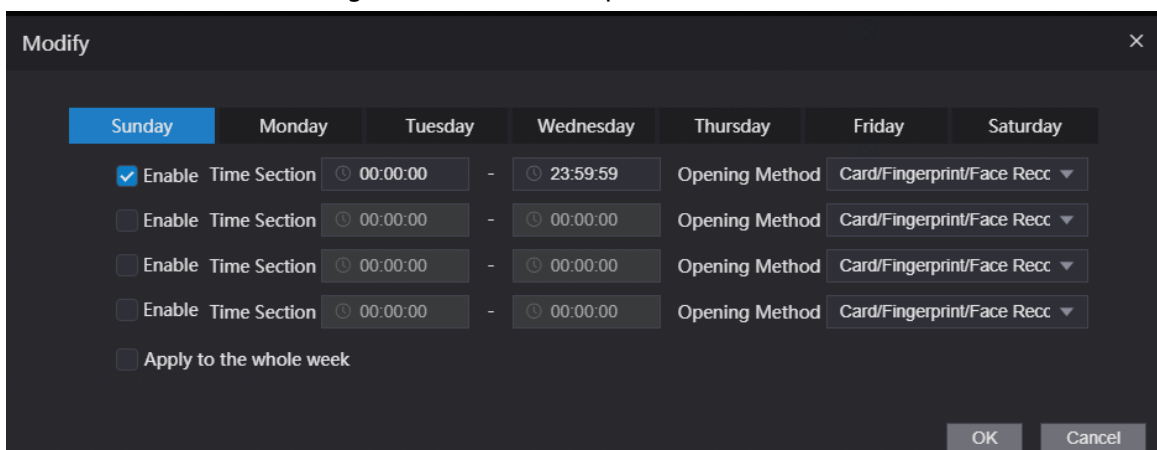
- Time section
 - 1) In the **Opening Method** list, select **Time Section**, and then click .

Figure 3-7 Time section parameter



- 2) Configure the time and opening method for a time section. You can configure up to four time sections for a single day.
- 3) (Optional) Select **Apply to the whole week** to copy the configuration to the rest of days.
- 4) Click **OK**.

- Multi-card
- 1) Click **Add**.
 - 2) Select an unlocking method in the **Opening Method** list., and enter a number for the valid user.

Figure 3-8 Multi-card parameter

- 3) In the **User List** area, enter user ID. For details, see "2.7.1 Adding New User".



- VIP, patrol, and blocklist users cannot be added.
 - All the users in different groups must all verify their identities in the group order to unlock the door.
- Unlock mode
 - 1) In the **Combination** list, select **Or** or **And**.
 - **And** means you must use all the selected methods to open the door.
 - **Or** means you can open the door with any of the selected methods.
 - 2) In the **Element** list, select the unlock method.

Step 4 Configure other parameters.

Step 5 Click **OK**.

3.1.5 Alarm Linkage

3.1.5.1 Setting Alarm Linkages

Alarm input devices can be connected to the Device, and you can modify the alarm linkage parameters.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Alarm Linkage** > **Alarm Linkage**.

Figure 3-9 Alarm linkage

Alarm Linkage				
Refresh				
Alarm Input	Name	Alarm Input Type	Alarm Output Channel	Modify
1	Zone1	NO	1	
2	Zone2	NO	1	

Step 3 Click to configure alarm linkage.

Figure 3-10 Modify linkage parameters

Modify ✕

Alarm Input:

Name:

Alarm Input Type:

Fire Link Enable:

Alarm Output Enable:

Duration (Sec.): (1~300)


Alarm Output Channel: 1

Access Link Enable:

Channel Type:

Table 3-2 Description of alarm linkage parameters

Parameter	Description
Alarm Input	You cannot modify the value. Keep it default.
Name	Enter a zone name.
Alarm Input Type	Select the type according to the alarm device. <ul style="list-style-type: none"> • NO: The circuit of the alarm device is normally open, and it closes when an alarm is triggered. • NC: The circuit of the alarm device is normally closed, and it opens when an alarm is triggered.

Parameter	Description
Fire Link Enable	If fire linkage is enabled, the device will generate fire alarms when being triggered. The alarm messages are displayed in the alarm log.  If fire link is enabled, alarm output and access linkage are NO by default.
Alarm Output Enable	If alarm output is enabled, the relay can generate alarm messages.
Duration (Sec.)	Alarm duration. It ranges from 1 s through 300 s.
Alarm Output Channel	The Device has only one output channel. Select the output channel according to your alarm device.
Access Link Enable	If access linkage is enabled, the Device will be normally on or normally closed when there are input alarm signals.
Channel Type	There are two options: NO and NC.

Step 4 Click **OK** to save changes.




The configurations on the web will be synchronized with the software client if the Device is added to the client.

3.1.5.2 Viewing Alarm Logs

Procedure

- Step 1** Log in to the webpage.
- Step 2** Select **Alarm Linkage > Alarm Log**.
- Step 3** Select a time range and alarm type, and then click **Query**.

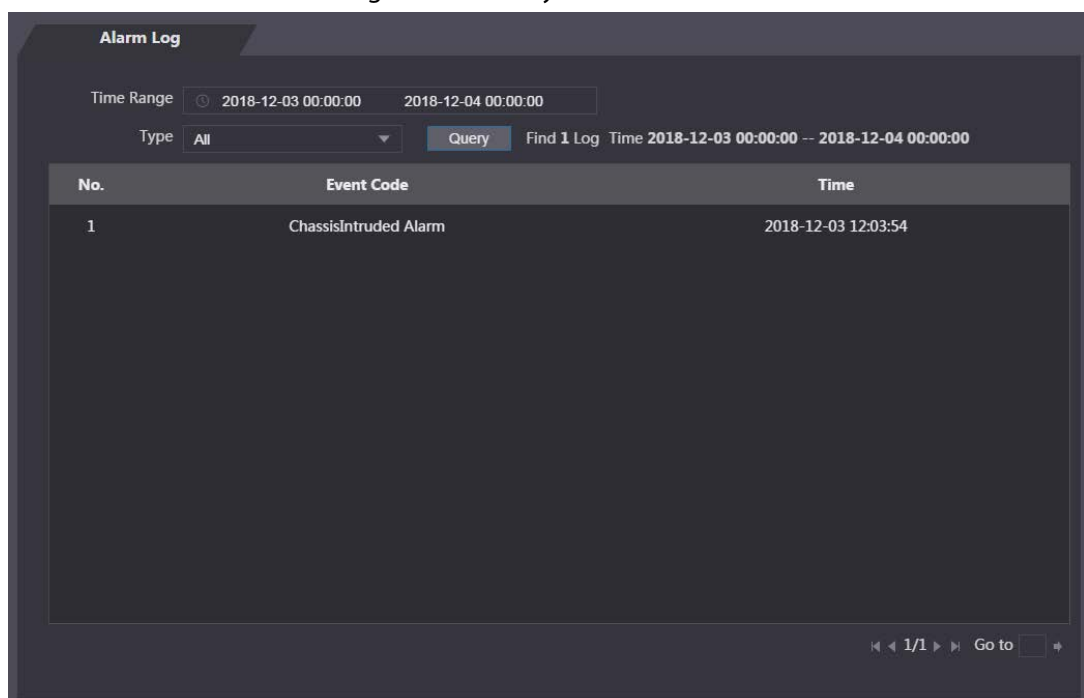Figure 3-11 Query results



3.1.6 Time Sections

Configure time sections and holiday plans, and then you can define when a user has the permissions to unlock doors.

3.1.6.1 Configuring Time Sections

You can configure up to 128 groups (from No.0 through No.127) of time section. In each group, you need to configure door access schedules for a whole week. A user can only unlock the door during the scheduled time.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Time Section** > **Time Section**.
- Step 3 Click **Add**.

Figure 3-12 Time section parameters

The screenshot shows a dark-themed dialog box titled "Add" with a close button (X) in the top right corner. It contains the following elements:

- No.:** A text input field containing the number "0".
- Time Section Name:** An empty text input field.
- Period Config:** A section with seven tabs labeled "Sunday", "Monday", "Tuesday", "Wednesday", "Thursday", "Friday", and "Saturday". The "Sunday" tab is currently selected and highlighted in blue.
- Time Section Configuration:** A table with four rows. Each row has an "Enable" checkbox, a "Time Section:" label, and two time input fields separated by a hyphen. The first row has the "Enable" checkbox checked and shows a time range from "00:00:00" to "23:59:59". The other three rows have the "Enable" checkboxes unchecked and show a time range from "00:00:00" to "00:00:00".
- Apply to the whole week:** A checkbox located below the table, which is currently unchecked.
- Buttons:** "OK" and "Cancel" buttons are located at the bottom right of the dialog.

- Step 4 Enter No. and name for the time section.
 - **No.:** Enter a section number It ranges from 0 through 127.
 - **Time Section Name:** Enter a name for each time section. You can enter a maximum of 32 characters (contain number, special characters and English characters).
- Step 5 Configure time sections for each day.
- Step 6 You can configure up to four time sections for a single day.
- Step 7 (Optional) Click **Apply to the whole week** to copy the configuration to the rest of days.
- Step 8 Click **OK** to save the changes.

3.1.6.2 Configuring Holiday Groups

Set time sections for different holiday groups. You can configure up to 128 holiday groups (from No.0 through No.127). and up to 16 time sections for a single holiday group. Users can unlock doors

in the defined time sections.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Time Section > Holiday Group > Config.**

Step 3 Click **Add.**

Step 4 Enter a number and a name for the holiday group.

- **No.:** Enter a section number. It ranges from 0 through 127.
- **Time Section Name:** Enter a name for each time section. You can enter a maximum of 32 characters (contain numbers, special characters and English characters).

Step 5 Click **Add.**

Step 6 Enter a name in the **Time Section Name** box, select the start date and end date, and then click **OK.**



You can add multiple holidays for one holiday group.

Figure 3-13 Add a holiday

The screenshot shows a dark-themed dialog box titled "Add". It has a close button (X) in the top right corner. The dialog contains two input fields: "Time Section Name" with an empty text box, and "Time Section" with a date range "2021-04-30 - 2021-05-01". At the bottom right, there are two buttons: "OK" and "Cancel".

Step 7 Click **OK.**

3.1.6.3 Configuring Holiday Plans

Assign the configured holiday groups to the holiday plan. Users can only unlock the door in the defined time in the holiday plan.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Time Section > Holiday Plan > Config.**

Step 3 Click **Add.**

Figure 3-14 Add a holiday plan

The screenshot shows a dark-themed dialog box titled "Add". It has a close button (X) in the top right corner. The form contains the following fields and options:

- No.:** A text input field containing the number "0".
- Time Section Name:** An empty text input field.
- Holiday Group No.:** A dropdown menu with "Select" as the current selection.
- Holiday Period:** A section containing four rows, each with an "Enable" checkbox and a "Time Section" range.
 - Row 1: Enable, Time Section: 00:00:00 - 23:59:59
 - Row 2: Enable, Time Section: 00:00:00 - 00:00:00
 - Row 3: Enable, Time Section: 00:00:00 - 00:00:00
 - Row 4: Enable, Time Section: 00:00:00 - 00:00:00

At the bottom right of the dialog are two buttons: "OK" and "Cancel".

Step 4 Enter a number and name for the holiday plan.

- **No.:** Enter a section number. It ranges from 0 through 127.
- **Time Section Name:** Enter a name for each time section. You can enter a maximum of 32 characters (contain numbers, special characters and English characters).

Step 5 In the **Holiday Group No.** list, select the holiday group that you have configured.



Select **255** if you do not want to select a holiday group.

Step 6 In the **Holiday Period** area, configure time sections in the holiday group. You can configure up to four time sections.

Step 7 Click **OK**.

3.1.7 Data Capacity

View data capacity such as users, cards, and fingerprints that the Device can store.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Data Capacity**.

3.1.8 Setting Volume

Procedure

Step 1 Log in to the webpage.

Step 2 Click **Volume Setting**, and adjust the volume.

Step 3 Click **OK**.

3.1.9 Configuring Network

3.1.9.1 Configuring TCP/IP

You need to configure IP address and DNS server so that the Device can communicate with other devices.

Prerequisites

Make sure that the Device is connected to the network.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Network Setting** > **TCP/IP**.

3.1.9.2 Configuring Port

You can limit access to the Access Standalone at the same time through the webpage, desktop client and more.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Network Setting** > **Port**.
- Step 3 Configure the port number.



Except **Max Connection** and **RTSP Port**, you need to restart the Access Standalone to make the configurations effective after you change other parameters.

Table 3-3 Description of ports

Parameter	Description
Max Connection	You can set the maximum number of clients (such as the webpage, desktop client) that can access the Access Standalone at the same time.
TCP Port	Default value is 37777.
HTTP Port	Default value is 80. If you want to change the port number, add the new port number after the IP address when you log in to the webpage.
HTTPS Port	Default value is 443.
RTSP Port	Default value is 554.

- Step 4 Click **OK** to complete the setting.

3.1.9.3 Configuring Automatic Registration

The Access Standalone reports its address to the designated server so that you can get access to the Access Standalone through the management platform.


Procedure

- Step 1 Log in to the webpage.

Step 2 Select **Network Setting > Auto Register**.

Step 3 Select **Enable**, and enter host IP, port, and sub device ID.

Table 3-4 Auto register description

Parameter	Description
Host IP	The IP address or the domain name of the server.
Port	The port of the server used for automatic registration.
Sub-Device ID	Enter the sub-device ID (user defined).  When you add the Access Standalone to the management platform, the sub-device ID on the management platform must conform to the defined sub-device ID on the Access Standalone.

Step 4 Click **OK**.

3.1.9.4 Configuring P2P


Peer-to-peer computing or networking is a distributed application architecture that partitions tasks or workloads between peers. Users can download mobile application by scanning QR code, and then register an account. You can manage multiple devices on the mobile application. Dynamic domain name, port mapping, and transit server are not required.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Network Setting > P2P**.

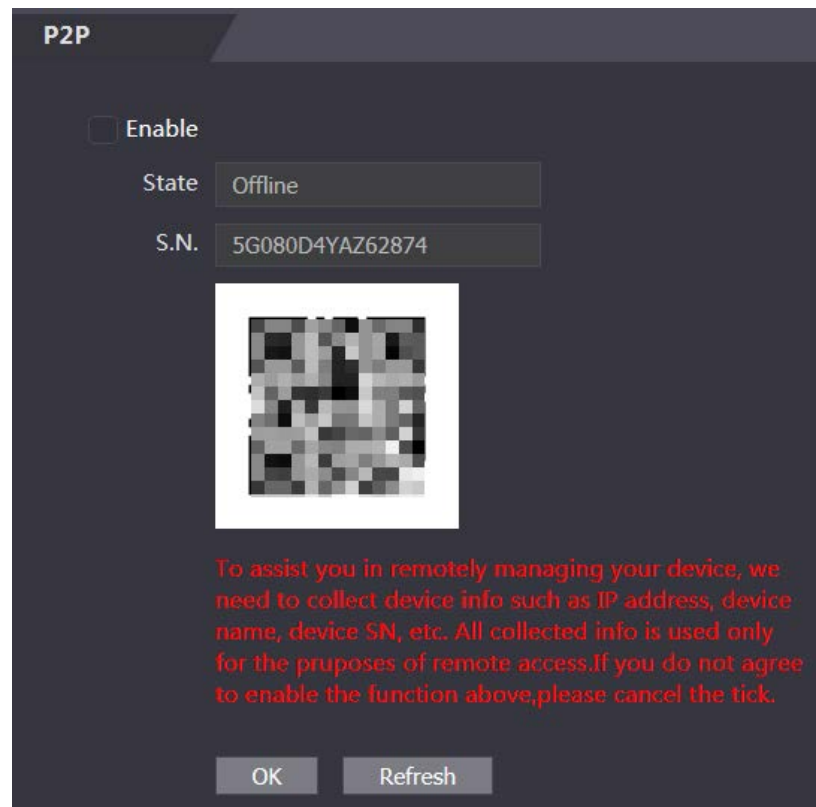Figure 3-15 P2P





If you want to use P2P, you must connect the Device to the Internet; otherwise this function cannot work properly.

Step 3 Select **Enable** to enable the P2P function.

Step 4 Click **OK**.



Scan the QR code on your webpage to get the serial number of the Device.

3.1.10 Setting Date

Procedure

Step 1 Log in to the webpage.

Step 2 Click **Date Setting**.

Figure 3-16 Date setting

The screenshot shows the 'Date Setting' configuration interface. At the top, the title 'Date Setting' is displayed. Below it, there are several configuration options:

- Time Zone:** A dropdown menu set to 'GMT+08:00'.
- System Time:** A date and time field showing '2021-05-27 16 : 42 : 20' and a 'Sync with PC' button.
- DST:** Radio buttons for 'Enable' and 'Close', with 'Close' selected.
- Date Setting:** Radio buttons for 'Date' and 'Week', with 'Date' selected.
- Starting Time:** A dropdown for 'January', a number field '1', and a time field '00 : 00'.
- Ending Time:** A dropdown for 'January', a number field '2', and a time field '00 : 00'.
- NTP Setting:** An unchecked checkbox.
- Server:** A text field containing a redacted IP address and '.org'.
- Port:** A text field containing '1'.
- Update Cycle:** A text field containing '10' and the unit 'Min.'.

 At the bottom of the page, there are three buttons: 'OK', 'Refresh', and 'Default'.

Table 3-5 Data setting description

Parameter	Description
Time Zone	Configure the time zone.
System Time	Configure system time. Click Sync with PC , and the system time changes to the PC time.
DST	<ol style="list-style-type: none"> (Optional) Enable DST. Select Date or Week in Sate Setting. Configure start time and end time.

Parameter	Description
NTP Setting	<ol style="list-style-type: none"> 1. Select the NTP Setting checkbox. 2. Configure parameters. <ul style="list-style-type: none"> • Server: Enter the domain of a NTP server, and the Device will automatically sync time with NTP server. • Port: Enter the port of the NTP server. • Update Cycle: Enter time synchronization interval.

Step 3 Click **OK**.

3.1.11 Safety Management


3.1.11.1 Configuring IP Authority

Procedure

Step 1 Log in to the webpage.

Step 2 Click **Safety Mgmt.IP Authority**.

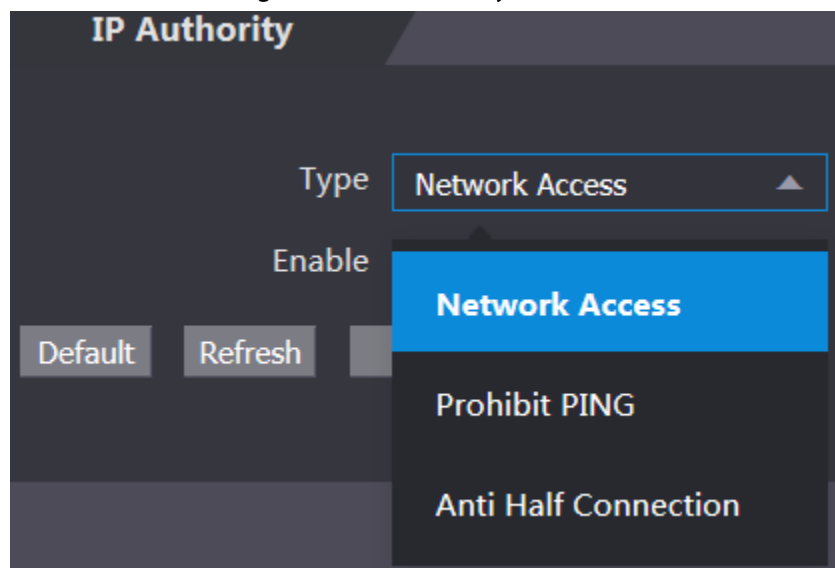Figure 3-17 IP authority



Step 3 Select a cybersecurity mode in the **Type** list.

- **Network Access:** Set allowlist and blocklist to control access to the Device.
- **Prohibit PING:** Enable **PING prohibited** function, and the Device will not respond to the Ping request.
- **Anti Half Connection:** Enable **Anti Half Connection** function, and the Device can still function properly under half connection attack.


3.1.11.1.1 Network Access

Procedure

Step 1 Select **Network Access** in the **Type** list.

Step 2 Select the **Enable** checkbox.

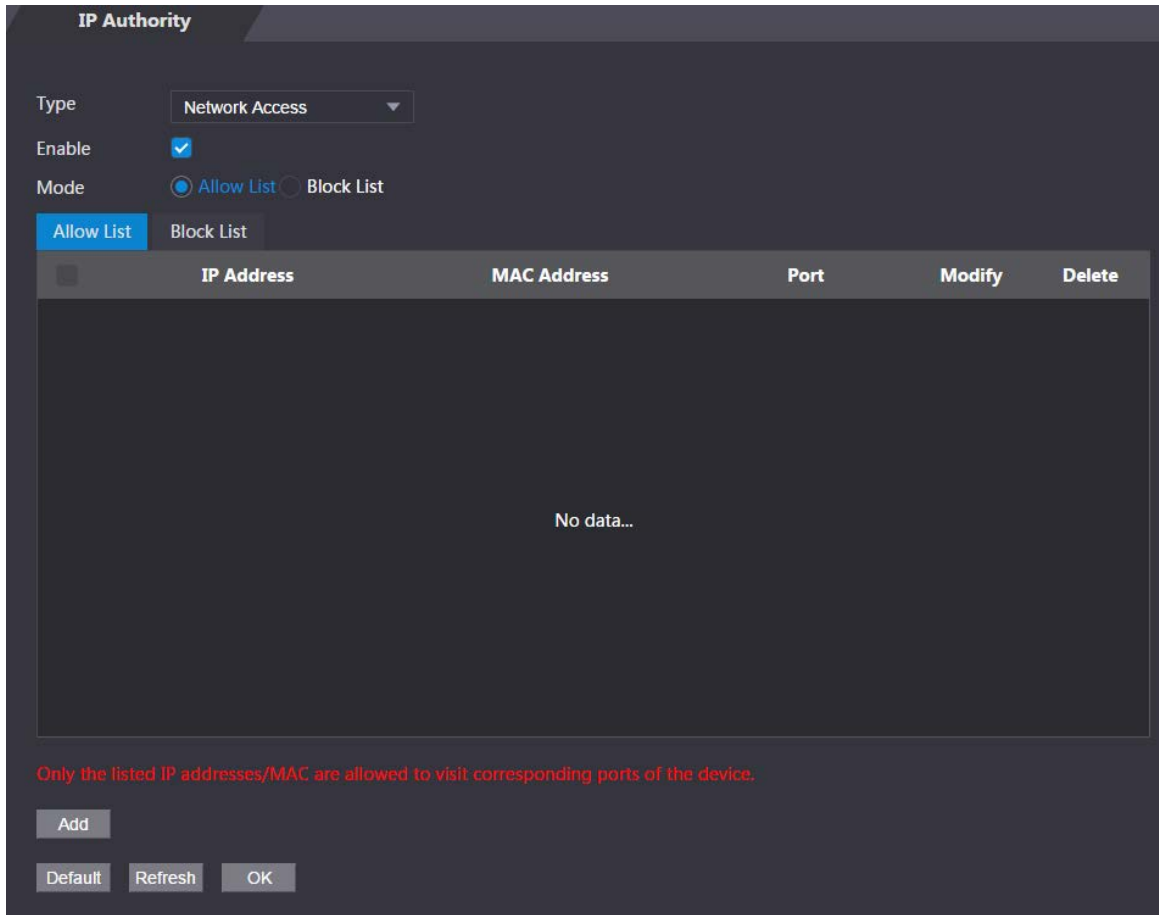
Figure 3-18 Network access



Step 3 Select **Allow List** or **Block List**.

Step 4 Click **Add**.

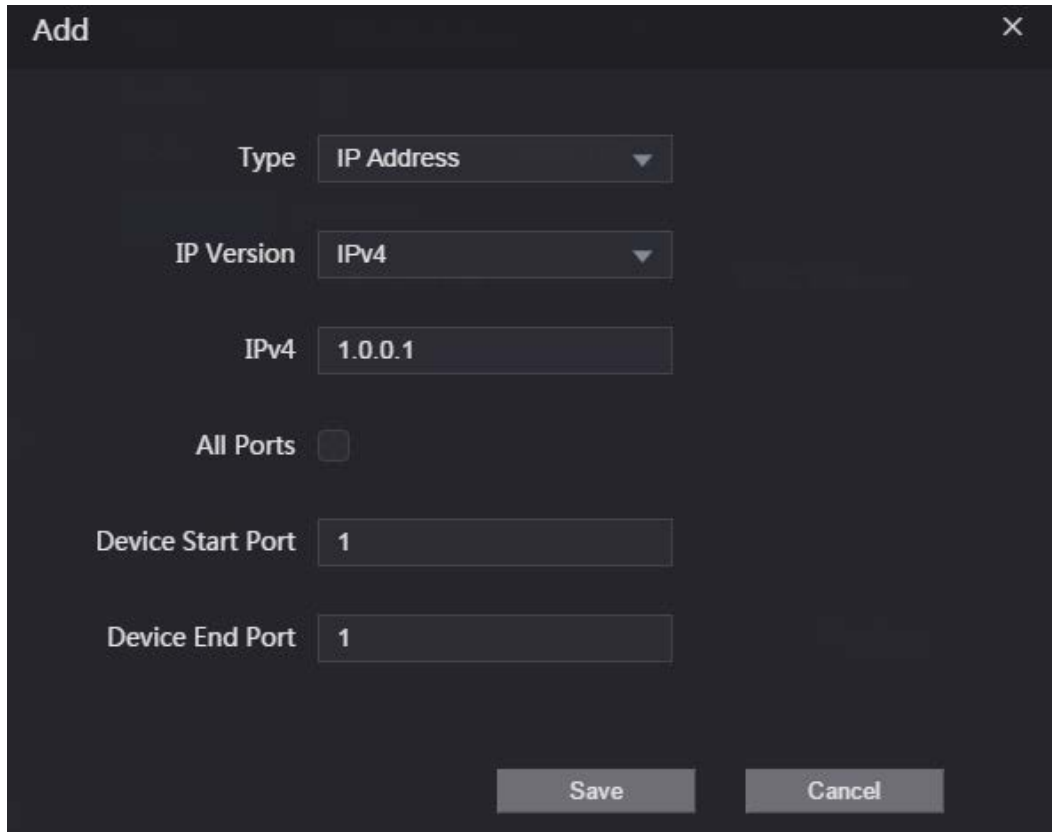Figure 3-19 Add IP



Step 5 Configure parameters.



Table 3-6 Description of adding IP parameters

Parameter	Description
Type	Select the address type in the Type list.
IP Version	IPv4 by default.
All Ports	Select All Ports checkbox, and your settings will apply to all ports.
Device Start Port	If you clear All Ports checkbox, set the device start port and device end port.
Device End Port	

Step 6 Click **Save**, and the **IP Authority** window is displayed.

Step 7 Click **OK**.

Related Operations

- Click  to edit the allowlist or blocklist.
- Click  to delete the allowlist or blocklist


3.1.11.1.2 Prohibit PING

Procedure

Step 1 Select **Prohibit PING** in the **Type** list.

Step 2 Select the **Enable** checkbox.

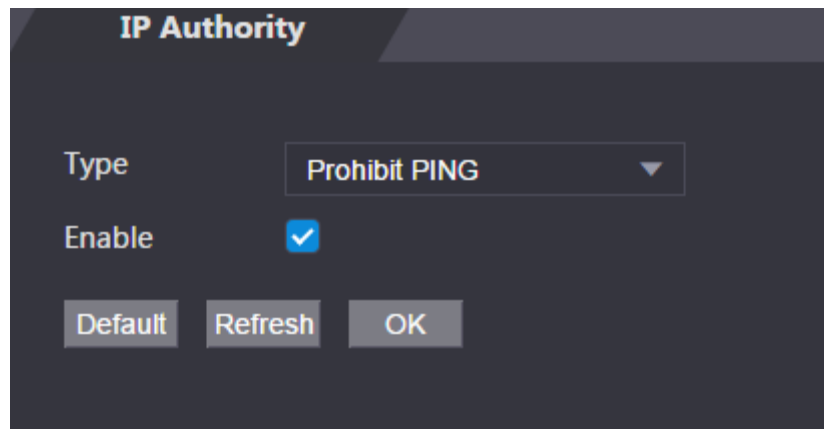Figure 3-20 Prohibit PING



Step 3 Click **OK**.


3.1.11.1.3 Anti Half Connection

Procedure

Step 1 Select the **Anti Half Connection** in the **Type** list.

Step 2 Select the **Enable** checkbox.

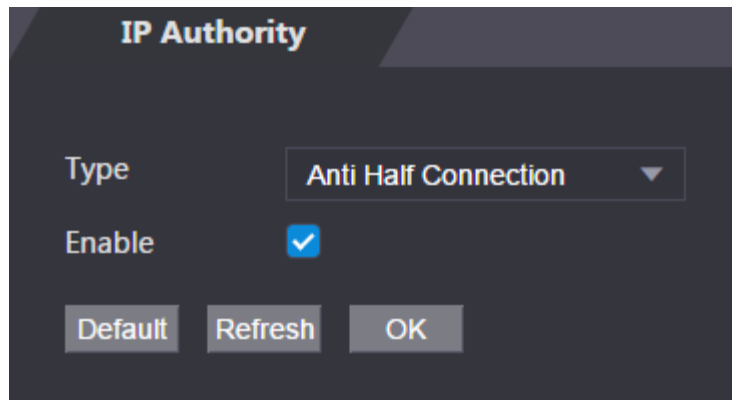Figure 3-21 Network access



Step 3 Click **OK**.

3.1.11.2 Configuring System

3.1.11.2.1 System Service

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Safety Mgmt.** > **System Service**.
- Step 3 Enable or disable the system services.

Figure 3-22 System service

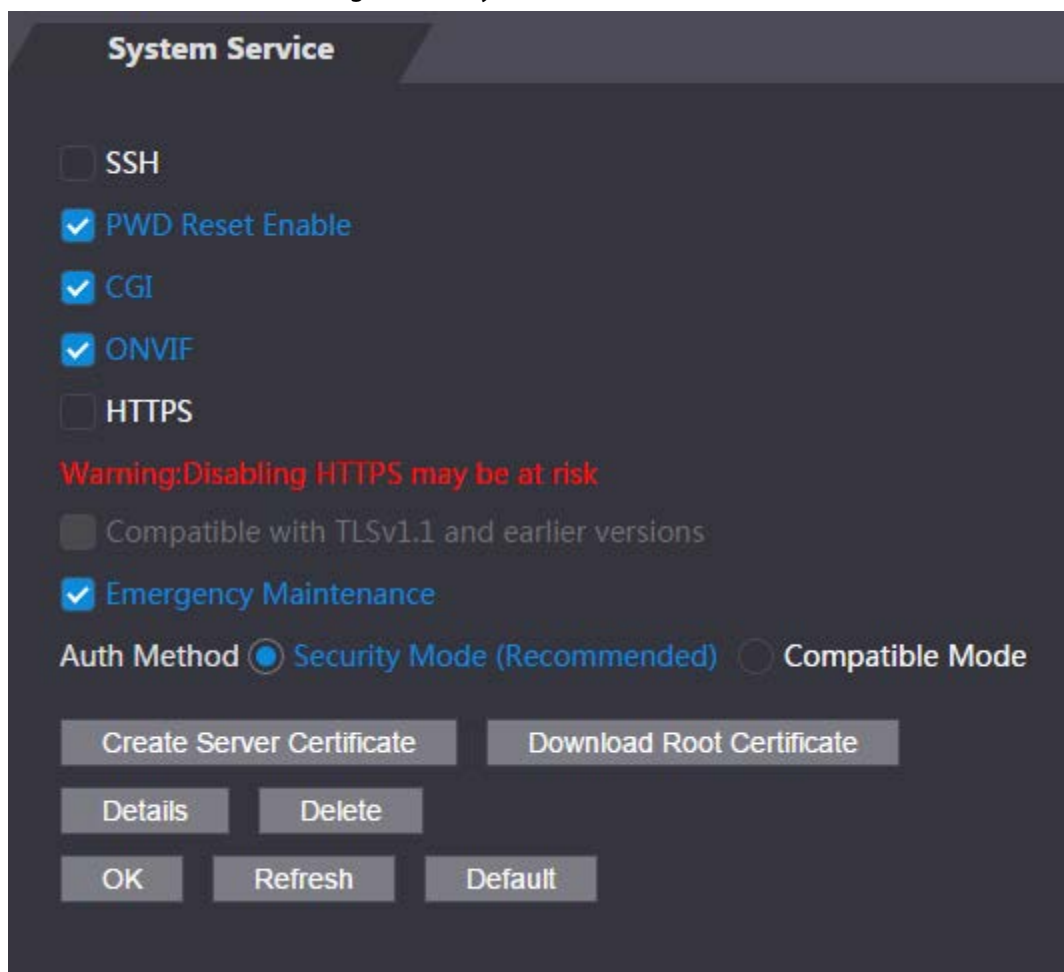


Table 3-7 Description of system service

Parameter	Description
SSH	Secure Shell (SSH) is a cryptographic network protocol for operating network services securely over an unsecured network. When SSH is enabled, SSH provides cryptographic service for the data transmission.
PWD Reset Enable	If enabled, you can reset the password. This function is enabled by default.
CGI	Common Gateway Interface (CGI) offers a standard protocol for web servers to execute programs similarly to console applications running on a server that dynamically generates webpages. When CGI is enabled, CGI commands can be used. The CGI is enabled by default.
ONVIF	Enable other devices to pull video stream of the VTO through the ONVIF protocol.
HTTPS	Hypertext Transfer Protocol Secure (HTTPS) is a protocol for secure communication over a computer network. When HTTPS is enabled, HTTPS will be used to access CGI commands; otherwise HTTP will be used.
Compatible with TLSv1.1 and earlier versions	Enable this function if your browser is using TLS V1.1 or earlier versions.
Emergency Maintenance	Enable it for faults analysis and maintenance.
Auth Method	<ul style="list-style-type: none"> • Security Mode (recommended): Supports logging in with Digest authentication. • Compatible Mode: Compatible with the login method of old devices.

3.1.11.2.2 Creating Server Certificate

Procedure

- Step 1 On the **System Service** page, click **Create Server Certificate**.
- Step 2 Enter information and click **OK**, and then the Device will restart.

Figure 3-23 Create server certificate

The image shows a 'Create Server Certificate' dialog box with the following fields and values:

- Region: xx
- Province: xx
- Location: xx
- Oragnization: xx
- Oragnization Unit: xx
- IP or Domain Name: (empty)


Buttons: OK, Cancel

3.1.11.2.3 Downloading Root Certificate

Procedure


- Step 1 On the **System Service** page, click **Download Root Certificate**.
- Step 2 Double-click the file that you have downloaded, and then click **Open**.

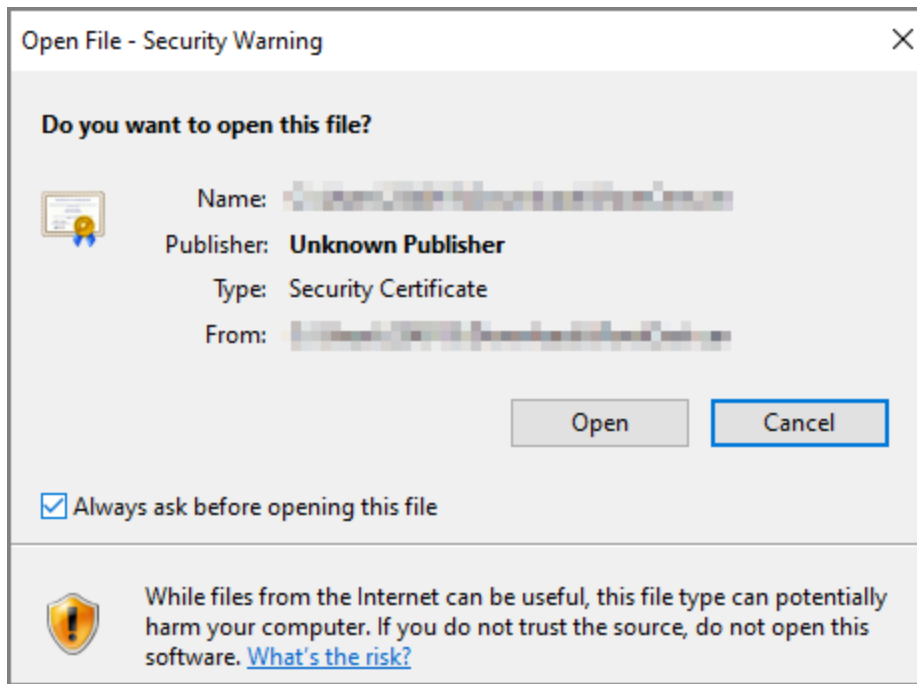Figure 3-24 File download




Step 3 Click **Install Certificate**.

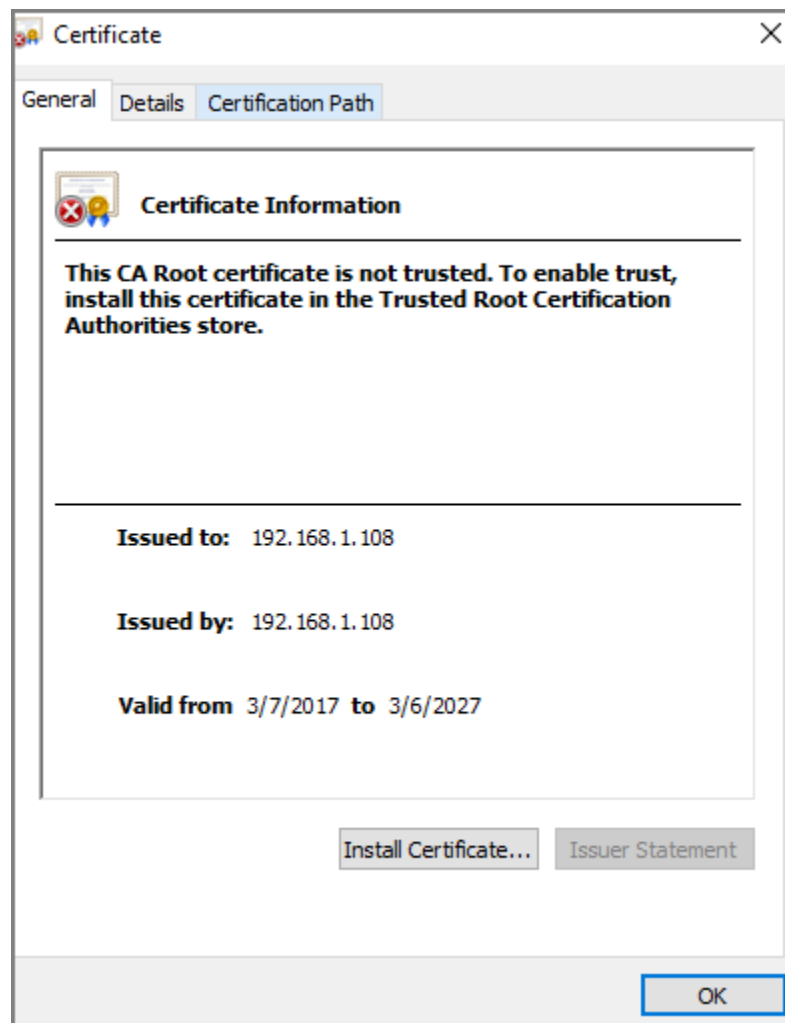Figure 3-25 Certificate information



Step 4 Select **Current User** or **Local Machine**, and then click **Next**.

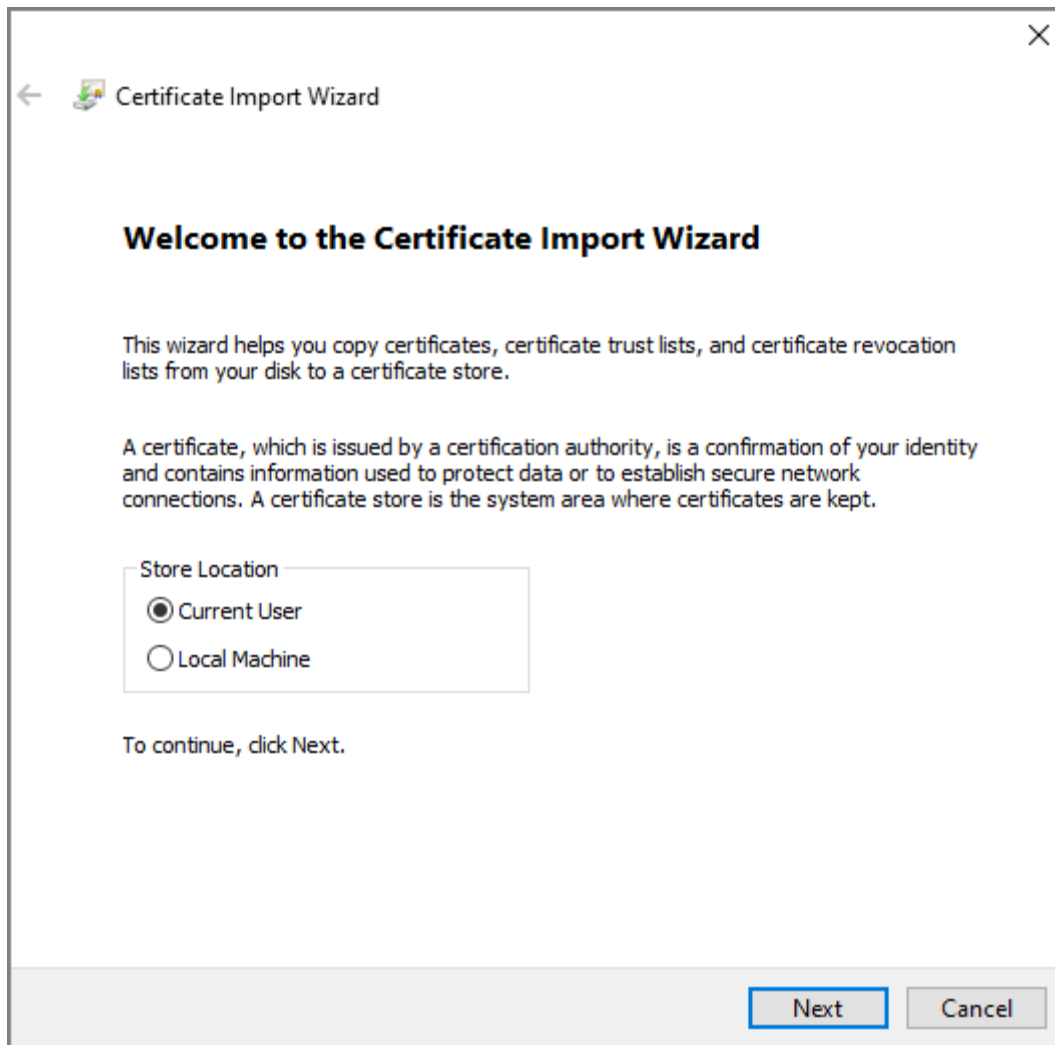Figure 3-26 Store Location




- **Current User:** Applies to the user that has logged in to the PC.
- **Local Machine:** Applies to all users that have logged in to the PC

Step 5 Select the appropriate storage location.


- 1) Select **Place all certificates in the following store.**

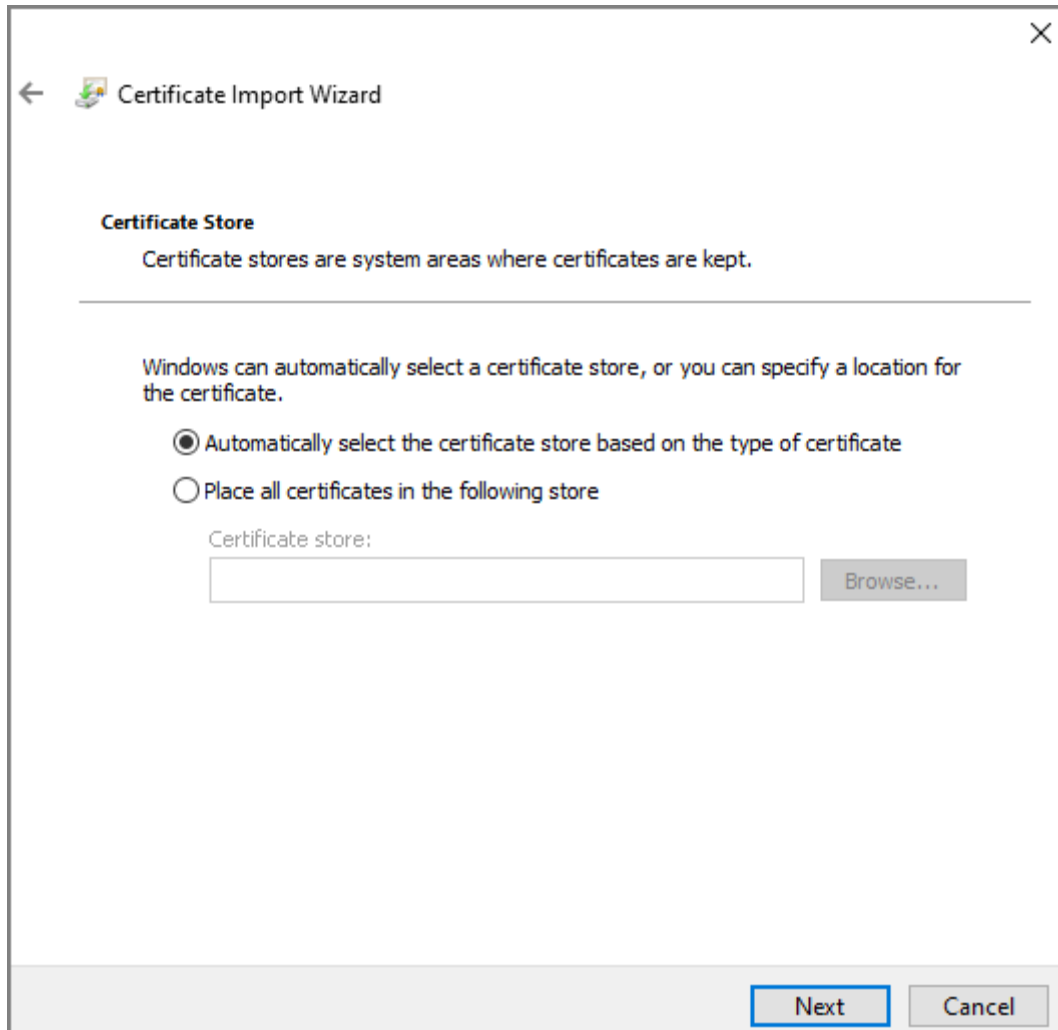Figure 3-27 Certificate store



- 2) Click **Browse** to import the certificate to the **Trusted Root Certification Authorities** store, and then click **Next**.

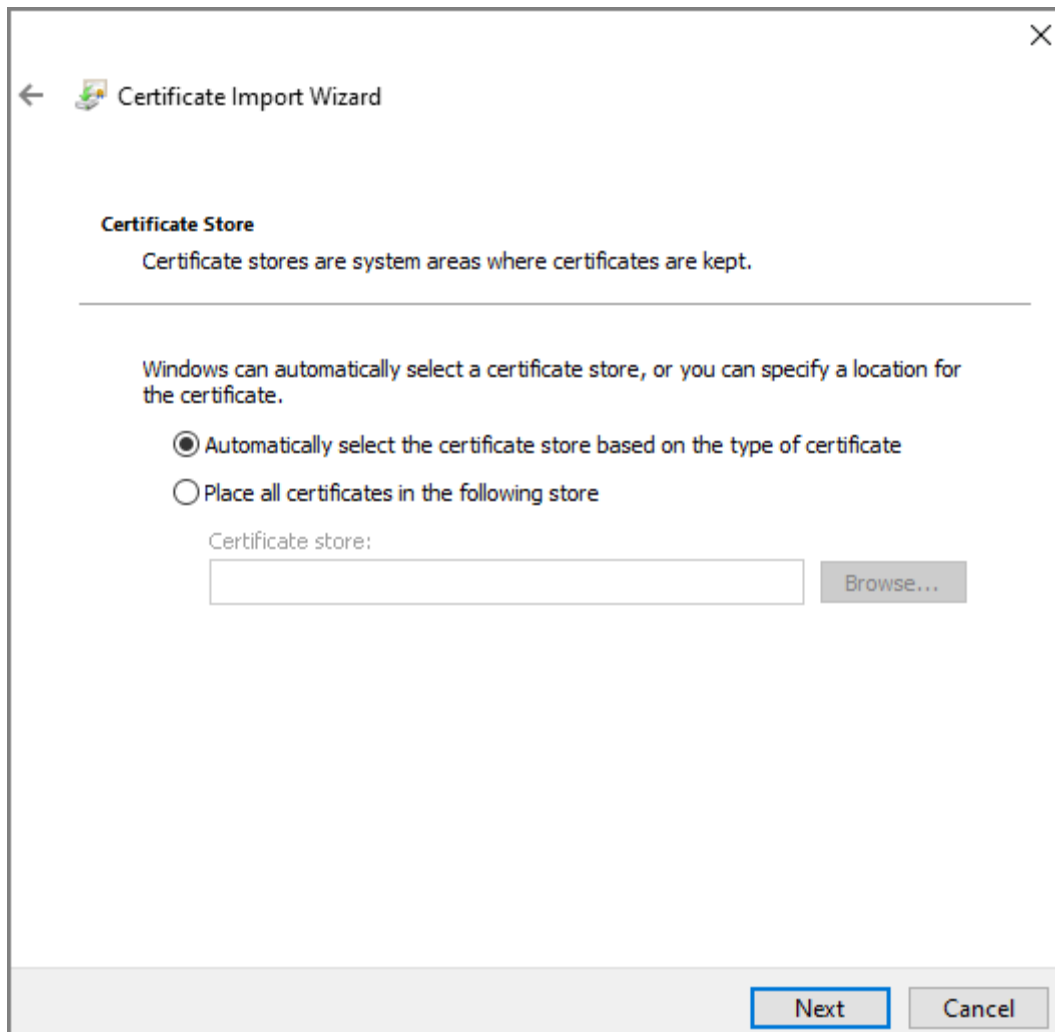Figure 3-28 Certificate store



Step 6 Click **Finish**.

3.1.12 User Management

You can add and delete users, change users' passwords, and link your email address for resetting the password when you forget password.



User refers to the user who logs in to the webpage.

3.1.12.1 Adding Users

You can add new users and then they can log in to the webpage of the Access Standalone.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **User Mgmt.** > **User Mgmt.**
- Step 3 Click **Add**.

Figure 3-29 Add user

The image shows a dark-themed dialog box titled "Add" with a close button (X) in the top right corner. The dialog contains the following fields and controls:

- Username:** A text input field.
- Password:** A text input field.
- Security Level:** Three radio buttons labeled "Low", "Medium", and "High".
- Confirm Password:** A text input field.
- Remark:** A text input field.
- Buttons:** "OK" and "Cancel" buttons at the bottom right.

Step 4 Enter username, password, confirm password, and remark.

Step 5 Click **OK**.

3.1.12.2 Adding ONVIF Users

Background Information

Open Network Video Interface Forum (ONVIF), a global and open industry forum that is established for the development of a global open standard for the interface of physical IP-based security products, which allows the compatibility from different manufactures. ONVIF users have their identities verified through ONVIF protocol. The default ONVIF user is admin.

Procedure

Step 1 On the home page, select **User Mgmt.** > **Onvif User**.

Step 2 Click **Add** and then configure parameters.

Figure 3-30 Add ONVIF user

The 'Add' dialog box contains the following elements:

- Username:** A text input field.
- Password:** A text input field with three buttons: 'Low', 'Medium', and 'High'.
- Confirm Password:** A text input field.
- Group:** A dropdown menu with 'Select' as the current selection.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Step 3 Click **OK**.

3.1.13 Maintenance

You can regularly restart the Device during idle time to improve its performance.

Procedure

Step 1 Log in to the webpage.

Step 2 Select **Maintenance**.

Figure 3-31 Maintenance

The 'Maintenance' page contains the following elements:

- Auto Reboot:** A dropdown menu set to 'Tuesday' and a time dropdown set to '02:00'.
- Buttons:** 'Reboot Device', 'OK', and 'Refresh' buttons.
- Self Test:** A section with a 'Test' button.

- Step 3 Set the time, and then click **OK**.
The Device will restart at the defined the time.



It is **Never** by default.

- Step 4 (Optional) Click **Reboot Device**, and the Device will restart immediately.

3.1.14 Configuration Management

When more than one device needs the same configurations, you can configure parameters for them by importing or exporting configuration files.


3.1.14.1 Exporting Configuration File

You can export the configuration file of the Device for backup.

Procedure

- Step 1 Log in to the webpage.
Step 2 Select **Config Mgmt > Config Mgmt**.

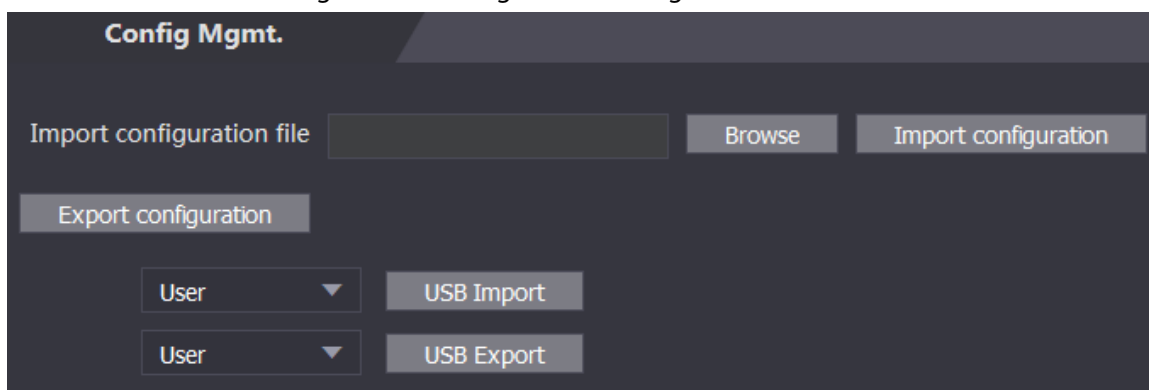Figure 3-32 Configuration management



- Step 3 Click **Export configuration** to save the configuration file locally.



IP information of the Device will not be exported.

3.1.14.2 Importing Configuration File

You can export the configuration file from the Device to another one with the same device model.

Procedure

- Step 1 Log in to the webpage.
Step 2 Select **Config Mgmt > Config Mgmt**.
Step 3 Click **Browse** to select the configuration file, and then click **Import configuration**.
The Device will restart after importing configuration file.

3.1.14.3 Setting Features

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Config Mgmt > Config Mgmt**.
- Step 3 In the **Features** area, set the features.

Figure 3-33 Features

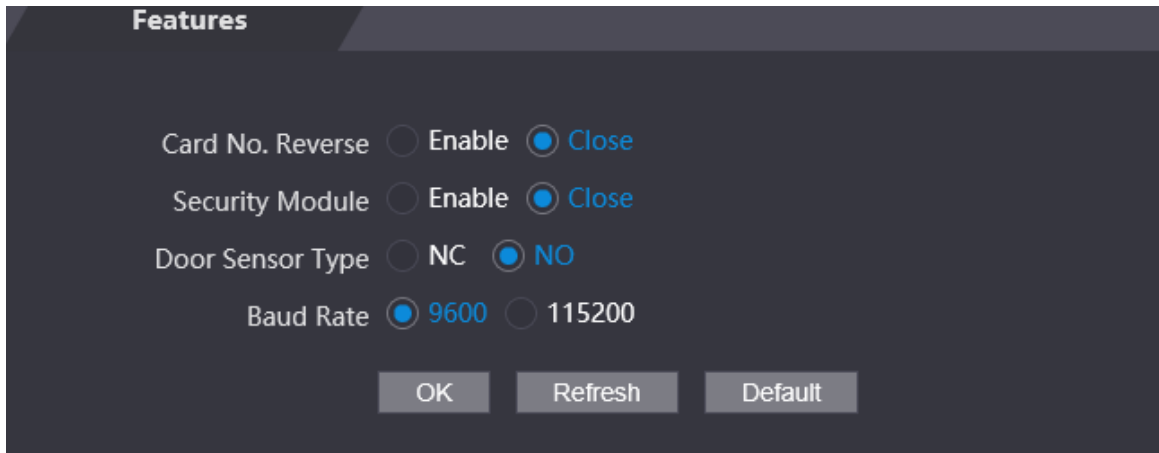


Table 3-9 Description of features

Parameter	Description
Card No. Reverse	Enable Card No. Reverse function, if you set Wiegand output and connect an external device, but the order of the received card number is in consistent with that of the actual number.
Security Module	If Security Module is enabled, door exit button, lock and fire linkage are invalid.
Door Sensor Type	Set door sensor type: <ul style="list-style-type: none"> • NC: Normally closed. • NO: Normally open.
Baud Rate	Select baud rate according to the external device.

- Step 4 Click **OK**.


3.1.14.4 Setting Fingerprint

You can set the fingerprint identity level to adjust recognition accuracy rate.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Config Mgmt > Config Mgmt**.
- Step 3 In the **Fingerprint** area, set the identity level.
The higher identity level means higher recognition accuracy and higher recognition threshold.

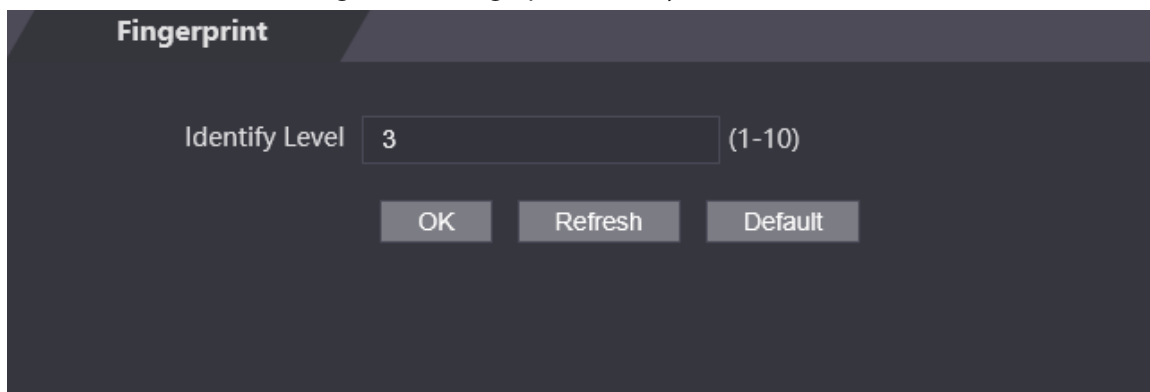Figure 3-34 Fingerprint identity level




Step 4 Click **OK**.

3.1.14.5 Restoring Factory Defaults

Procedure

- Step 1 Log in to the webpage.
Step 2 Select **Config Mgmt. > Default**.

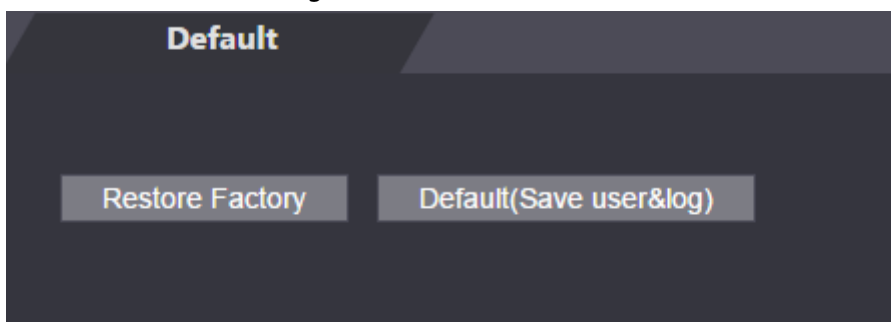Figure 3-35 Default



- Step 3 Restore factory defaults if necessary.
- **Restore Factory:** Resets configurations of the Access Standalone and deletes all data.
 - **Restore Factory (Save user & log):** Resets configurations of the Access Standalone and deletes all data except for user information and logs.

3.1.14.6 Configuring Port Functions

Some wires can be used for different purposes. Please use wires based on your needs. For details, see the Quick Start Guide of the Access Standalone.

Procedure

- Step 1 On the webpage of the Access Standalone, select **Config Mgmt. > Interface Config**.

Figure 3-36 Configure port functions (ASI2221J/ASI2212J-D)


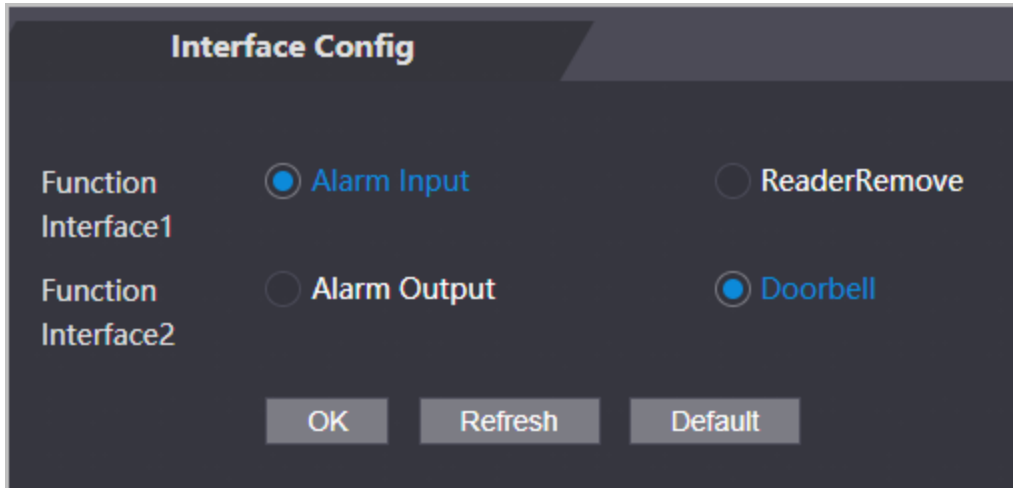


Figure 3-37 Configure port functions (ASI2212J-DPW/ ASI2212J-PW)

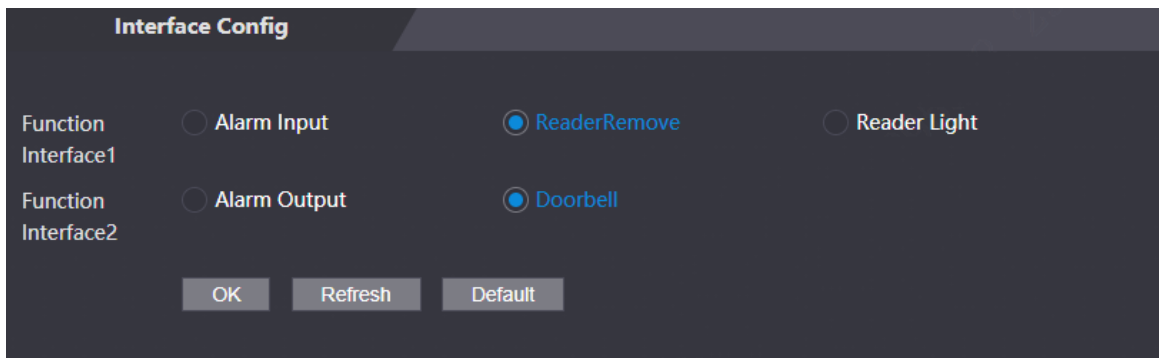

Step 2 Select the function of the port.

Table 3-10 Ports function descriptions

Model	Wiring	Description
ASI2221J/ASI2212J-D	Alarm input/alarm output	<ol style="list-style-type: none"> 1. Connects the alarm input device to WG_LED/ALM_IN/CASE and GND. 2. Connects the alarm output device to ALM_COM/BELL+ and ALM_NO/BELL-. 3. Select Alarm Input from Function Interface1, and then select Alarm Output from Function Interface2.
	Reader anti-tampering alarm	<ol style="list-style-type: none"> 1. Connect the CASE wire of the card reader to WG_LED/ALM_IN/CASE. 2. Select ReaderRemove from Function Interface1, and then select any option from Function Interface2.
	Reader LED	<ol style="list-style-type: none"> 1. Connect the LED wire of the card reader to WG_LED/ALM_IN/CASE. 2. Select Reader Light from Function Interface1, and then select any option from Function Interface2.
	Doorbell	<ol style="list-style-type: none"> 1. Connect the doorbell to ALM_COM/BELL+ and ALM_NO/BELL+. 2. Select any option from Function Interface1, and then select Doorbell from Function Interface2.

Model	Wiring	Description
ASI2212J-DPW/ ASI2212J-PW	Alarm input/alarm output	<ol style="list-style-type: none"> 1. Connects the alarm input device to ALARM1/CASE. 2. Connects the alarm output device to ALMRM1_COM/BELL+ and ALMARM1_NO/BELL-. 3. Select Alarm Input from Function Interface1, and then select Alarm Output from Function Interface2.
	Reader anti-tampering alarm	<ol style="list-style-type: none"> 1. Connect the CASE wire of the card reader to ALARM1/CASE. 2. Select ReaderRemove from Function Interface1, and then select any option from Function Interface2.
	Doorbell	<ol style="list-style-type: none"> 1. Connect the doorbell to ALARM1_COM/BELL+ and ALARM1_NO/BELL+. 2. Select any option from Function Interface1, and then select Doorbell from Function Interface2.

3.1.15 Updating the System



- Use the correct update file. Make sure you get the correct update file from the technical support.
- Do not disconnect the power supply or network, or restart or shut down the Access Standalone during the update.

3.1.15.1 File Update

Procedure

- Step 1 On the home page, select **Upgrade**.
- Step 2 In the **File Upgrade** area, click **Browse**, and then upload the update file.



The upgrade file should be a .bin file.

- Step 3 Click **Update**.
The Access Standalone will restart after update completes.

3.1.15.2 Online Update

Procedure

- Step 1 On the home page, select **Upgrade**.
- Step 2 In the **Online Upgrade** area, select an update method.
- Select **Auto Check**, the Access Standalone will automatically check whether the its latest version is available.
 - Select **Manual Check**, and you can immediately check whether the latest version is available.
- Step 3 Update the Access Standalone when the latest version is available.

3.1.16 Version Information

View information including MAC address, serial number and more.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Version Info** to view version information.

3.1.17 Viewing Online Users

You can view online users who log in to webpage, including their username, IP address, and login time.

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **Online User**.

3.1.18 Viewing System Logs

View and back up system logs, admin logs, and unlock records.

3.1.18.1 System Logs

View and search for system logs.


Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **System Log > System Log**.
- Step 3 Select the time range and the log type, and then click **Query**.



Click **Backup** to download the results.

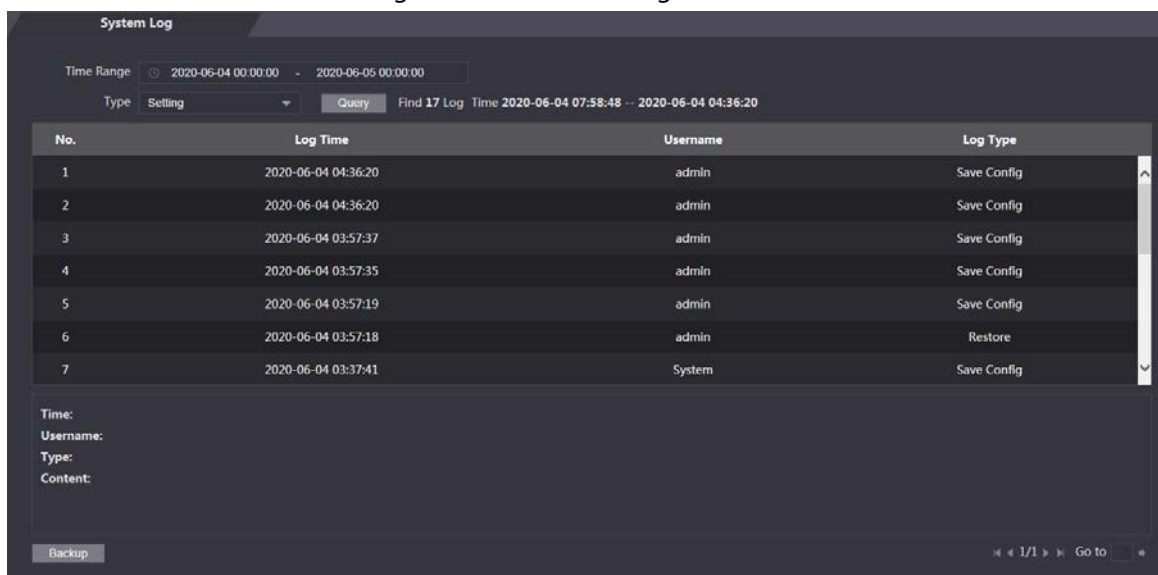Figure 3-38 Search for logs




3.1.18.2 Admin Logs

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **System Log > Admin Log**.
- Step 3 Enter the admin ID, and then click **Query**.

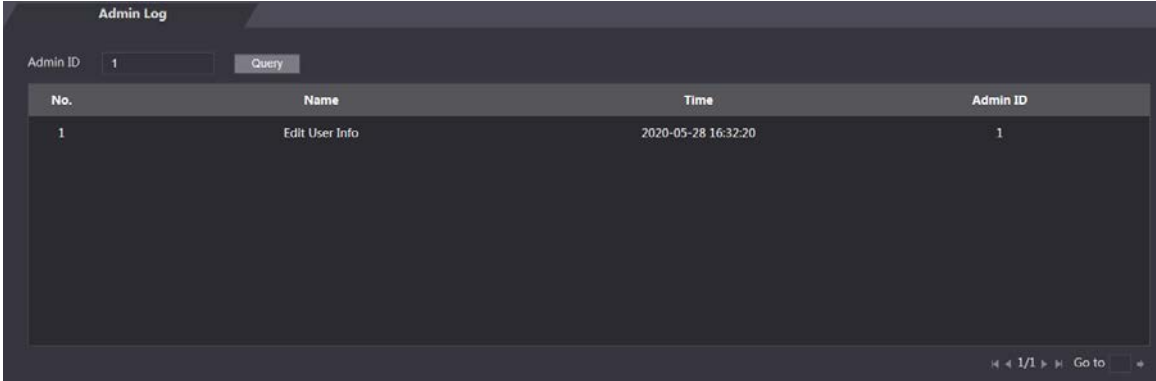Figure 3-39 Admin log



The screenshot shows a web interface titled "Admin Log". At the top, there is a search bar with "Admin ID" and the value "1" entered, and a "Query" button. Below this is a table with the following data:

No.	Name	Time	Admin ID
1	Edit User Info	2020-05-28 16:32:20	1


At the bottom right of the table, there is a pagination control showing "1/1" and a "Go to" field.

3.1.18.3 Unlock Records

Procedure

- Step 1 Log in to the webpage.
- Step 2 Select **System Log > Search Records**.
- Step 3 Select the time range and the log type, and then click **Query**.
- Step 4 Click **Export Data** to download the results.

3.1.19 Logging Out

Click  at the upper-left corner, and then click **OK** to log out of the webpage.

3.2 Web on Phone

Background Information

Make sure the Access Standalone is on the same LAN as your phone. Connect the Access Standalone to your phone hotspot or connect it and your phone to the same router.



Only certain parameters can be configured on the web portal if you log in on a phone.

Procedure

- Step 1 Go to the IP address (192.168.1.108 by default) of the Access Standalone in the browser.
- Step 2 Enter the user name and password.



The default administrator name is admin, and the password is the one you set during initialization. We recommend you to change the administrator password regularly to increase security.

Step 3 Click **Login**.

4 Smart PSS Lite Configuration

This section introduces how to manage and configure the Access Standalone through Smart PSS Lite. You can also configure time attendance rules on the platform, such as shifts, modes, schedules and more. For details, see the user's manual of Smart PSS Lite.

4.1 Installing and Logging In

Install and log in to Smart PSS Lite. For details, see the user manual of Smart PSS Lite.

Procedure

Step 1 Get the software package of the Smart PSS Lite from the technical support, and then install and run the software according to instructions.

Step 2 Initialize Smart PSS Lite when you log in for the first time, including setting password and security questions.



Set the password is for the first-time use, and then set security questions to reset your password when you forgot it.

Step 3 Enter your username and password to log in to Smart PSS Lite.

4.2 Adding Devices

You need to add the Access Standalone to Smart PSS Lite. You can add them in batches or individually.

4.2.1 Adding Individually

You can add Access Standalone individually by entering their IP addresses or domain names.

Procedure

Step 1 Log in to Smart PSS Lite.

Step 2 Click **Device Manager** and click **Add**.

Step 3 Enter the device information.

Figure 4-1 Device information

The screenshot shows a web form for adding a device. It has the following fields and values:

- Device Name:** * Access Terminal
- Method to add:** IP
- IP:** * [blurred]
- Port:** * 37777
- User Name:** * admin
- Password:** * [blurred]

At the bottom, there are three buttons: "Add and Continue" (blue), "Add" (blue), and "Cancel" (grey).

Table 4-1 Device parameters Description

Parameter	Description
Device Name	Enter a name of the Access Standalone. We recommend you name it after its installation area.
Method to add	Select IP to add the Access Terminal by entering its IP Address.
IP	Enter IP address of the Access Standalone.
Port	The port number is 37777 by default.
User Name/Password	Enter the username and password of the Access Terminal.

Step 4 Click **Add**.

The added Access Standalone displays on the **Devices** page. You can click **Add and Continue** to add more Access Standalones.

4.2.2 Adding in Batches

We recommend you use the auto-search function when you add want to Access Standalones in batches. Make sure the Access Standalones you add must be on the same network segment.


Procedure

Step 1 Log in to Smart PSS Lite.

Step 2 Click **Device Manager** and search for devices.

- Click **Auto Search**, to search for devices on the same LAN.
- Enter the network segment range, and then click **Search**.

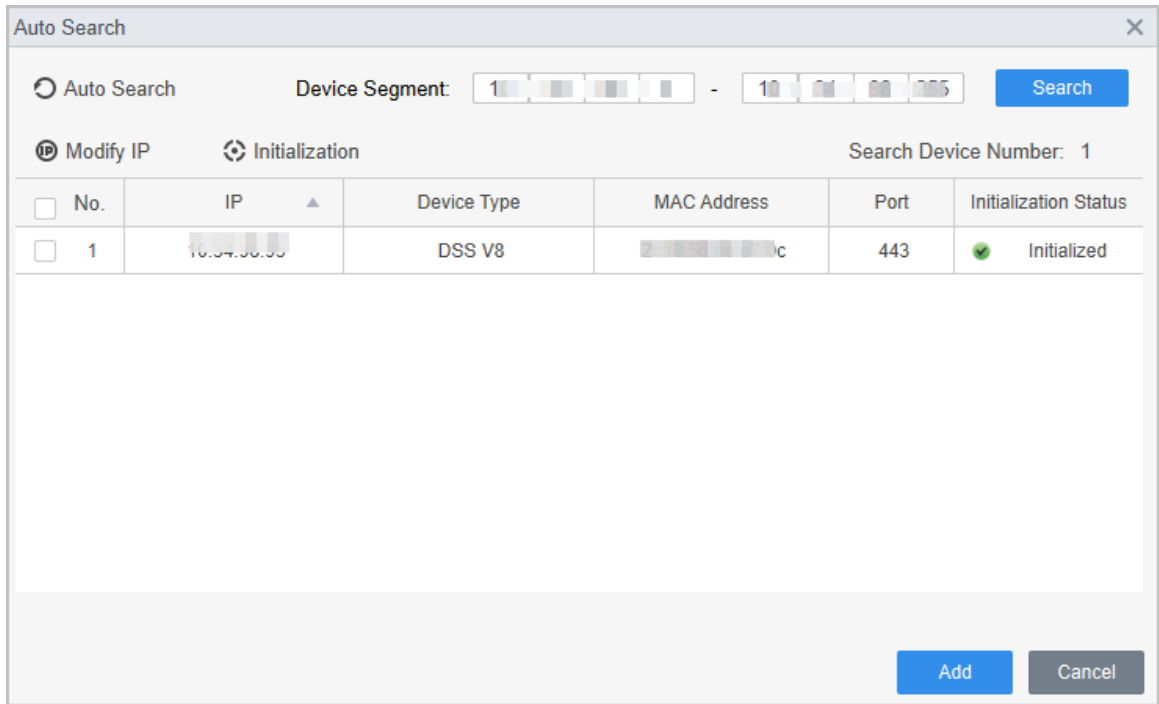Figure 4-2 Auto search



A device list will be displayed.



Select a device, and then click **Modify IP** to modify its IP address.

Step 3 Select the Access Standalone that you want to add to Smart PSS Lite, and then click **Add**.

Step 4 Enter the username and the password of the Access Standalone.
You can view the added Access Standalone on the **Devices** page.



The Access Standalone automatically logs in to Smart PSS Lite after being added. **Online** is displayed after successful login.

4.3 User Management

Add users, assign cards to them, and configure their access permissions.

4.3.1 Configuring Card Type

Set the card type before you assign cards to users. For example, if the assigned card is an ID card, set card type to ID card.

Procedure

- Step 1** Log in to Smart PSS Lite.
- Step 2** Click **Access Solution > Personnel Manager > User**.
- Step 3** On the **Card Issuing Type** and then select a card type.



Make sure that the card type is same to the actually assigned card; otherwise, the card number cannot be read.

Step 4 Click **OK**.

4.3.2 Adding Users

4.3.2.1 Adding Individually

You can add users individually.

Procedure


Step 1 Log in to Smart PSS Lite.

Step 2 Click **Access Solution > Personnel Manger > User > Add**.

Step 3 Click **Basic Info** tab, and enter the basic information of the user, and then import the face image.

Figure 4-3 Add basic information

Step 4 Click the **Certification** tab to add certification information of the user.

- Configure password: The password must consist of 6–8 digits.
- Configure card: The card number can be read automatically or entered manually. To read the card number automatically, select a card reader, and then place the card on the card reader.
 1. On the **Card** area, click  and select **Card issuer**, and then click **OK**.
 2. Click **Add**, swipe a card on the card reader.
The card number is displayed.


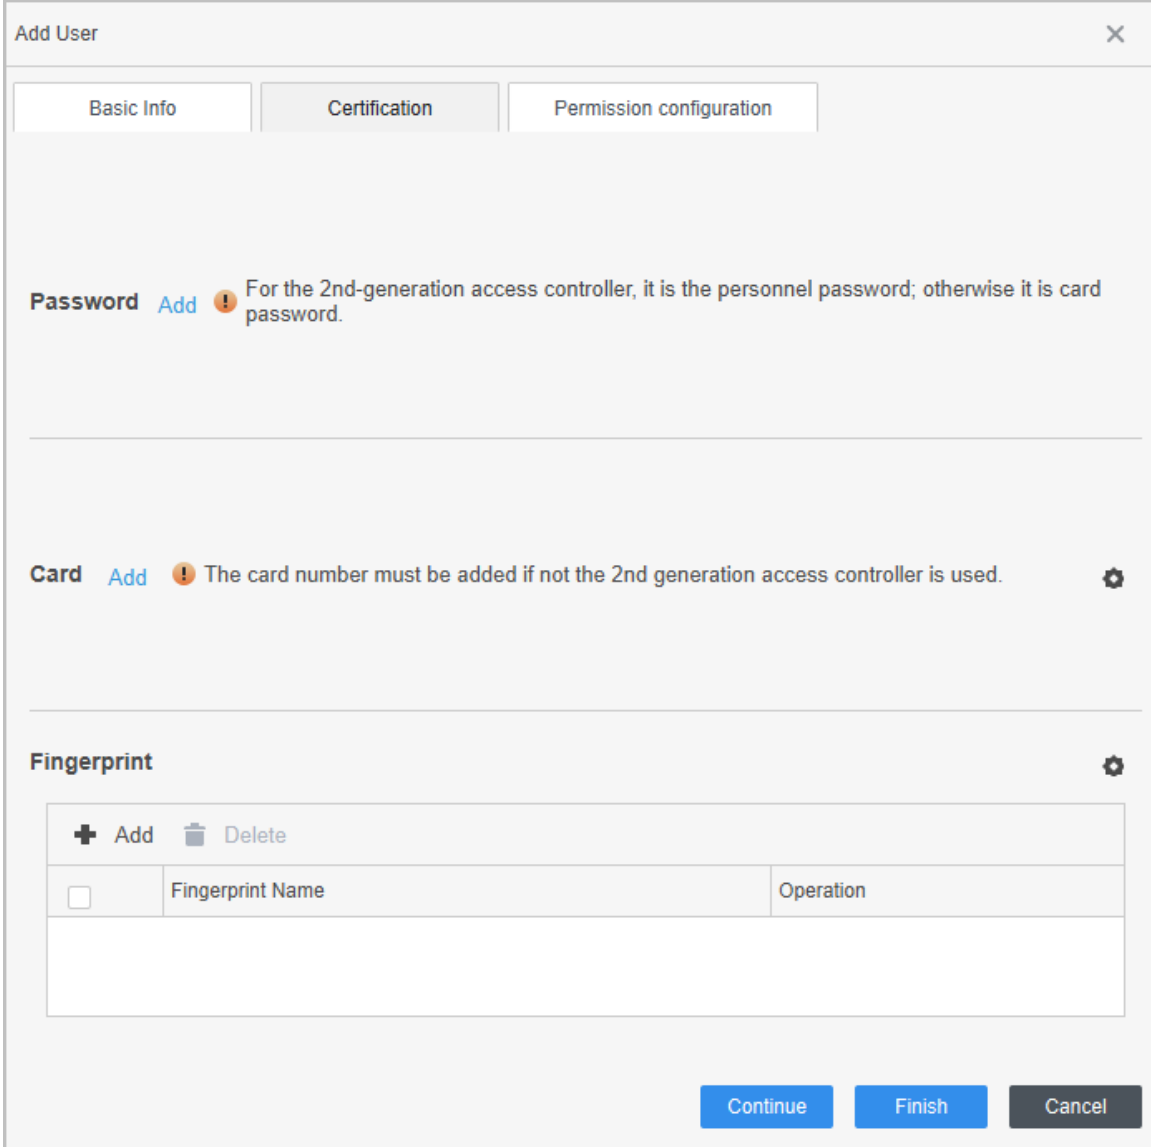



3. Click **OK**.
After adding a card, you can set the card to main card or duress card, or replace the card with a new one, or delete the card.
- Configure fingerprint.
 1. On the **Fingerprint** area, click  and select **Fingerprint Scanner**, and then click **OK**.
 2. Click **Add Fingerprint**, press your finger on the scanner three times in a row.


Figure 4-4 Add password, card, and fingerprint



The screenshot shows the 'Add User' dialog box with three tabs: 'Basic Info', 'Certification', and 'Permission configuration'. The 'Basic Info' tab is active. It contains three main sections: 'Password', 'Card', and 'Fingerprint'. Each section has an 'Add' button and a warning icon. The 'Fingerprint' section includes a table with columns for 'Fingerprint Name' and 'Operation'.

Password Add  For the 2nd-generation access controller, it is the personnel password; otherwise it is card password.

Card Add  The card number must be added if not the 2nd generation access controller is used. 

Fingerprint 

+ Add		- Delete	
<input type="checkbox"/>	Fingerprint Name	Operation	

Continue Finish Cancel

Step 5 Configure permissions for the user. For details, see "4.3.3 Assigning Access Permission".

Step 6 Click **Finish**.

4.3.2.2 Adding in Batches

You can add users in batches.

Procedure

Step 1 Log in to Smart PSS Lite.

Step 2 Click **Personnel Manger** > **User** > **Batch Add**.

Step 3 Select **Card issuer** from the **Device** list, and then configure the parameters.

Figure 4-5 Add users in batches

Table 4-2 Add users in batches parameters

Parameter	Description
Start No.	The user ID starts with the number you defined.
Quantity	The number of users you want to add.
Department	Select the department that the user belongs to.
Effective Time/Expired Time	The users can unlock the door within the defined period.

Step 4 Click **Issue**.

The card number will be read automatically.

Step 5 Click **OK**.

Step 6 On the **User** page, click  to complete user information.

4.3.3 Assigning Access Permission

Create a permission group that is a collection of door access permissions, and then associate users with the group so that users can unlock corresponding doors.

Procedure

Step 1 Log in to the Smart PSS Lite.

Step 2 Click **Access Solution > Personnel Manger > Permission configuration**.

Step 3 Click + .

Step 4 Enter the group name, remarks (optional), and select a time template.

Step 5 Select the access control device.

Step 6 Click **OK**.

Figure 4-6 Create a permission group

Add Access Group

Basic Info

Group Name: Remark:

Time Template:

All Device Selected (0)

Search...

Default Group

1


Door 1

OK Cancel

Step 7 Click of the permission group you added.

Step 8 Select users to associate them with the permission group.

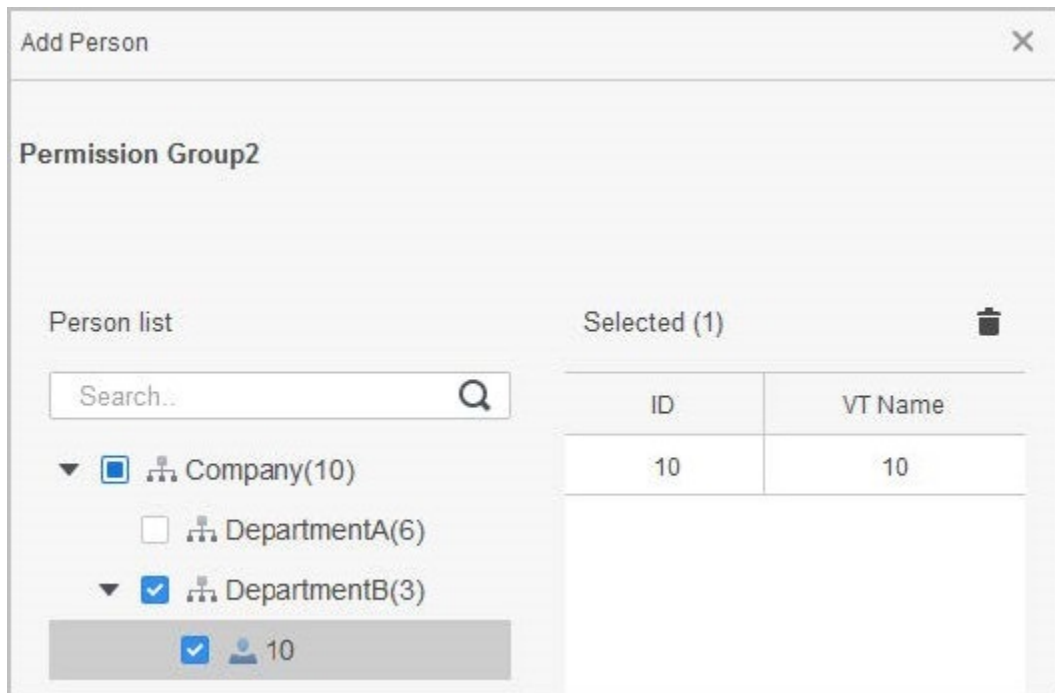Figure 4-7 Add users to a permission group



- Step 9 Click **OK**.
Users in the permission group can unlock the door after valid identity verification.

4.4 Access Management

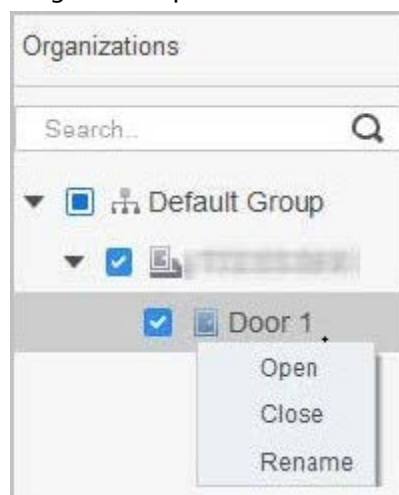
4.4.1 Remotely Opening and Closing Door



You can remotely monitor and control door through Smart PSS Lite. For example, you can remotely open or close the door.

Procedure




- Step 1 Click **Access Solution > Access Manager** on the Home page.
- Step 2 Remotely control the door.
- Select the door, right click and select **Open** or **Close**.

Figure 4-8 Open door



- Click  or  to open or close the door.

Related Operations

- Event filtering: Select the event type in the **Event Info**, and the event list displays the selected event type, such as alarm events and abnormal events.
- Event refresh locking: Click  to lock the event list, and then event list will stop refreshing. Click  to unlock.
- Event deleting: Click  to clear all events in the event list.

4.4.2 Setting Always Open and Always Close

After setting always open or always close, the door remains open or closed all the time.

Procedure

- Step 1 Click **Access Solution** > **Access Manager** on the Home page.
- Step 2 Click **Always Open** or **Always Close** to open or close the door.

Figure 4-9 Always open or close



The door will remain open or closed all the time. You can click **Normal** to restore the access control to normal status, and then the door will be open or closed based on the configured verification methods.

4.4.3 Monitoring Door Status

Procedure

- Step 1 Click **Access Solution** > **Access Manager** on the Home page.
- Step 2 Select the Access Standalone in the device tree, and right click it and then select **Start Real-time Event Monitoring**.
Real-time access control events will display in the event list.



Click **Stop Monitor**, real-time access control events will not display.

Figure 4-10 Monitor door status

Organizations

Always Close Always Open Normal

Search...

group

Door 1

111

Start Real-time Event Monitoring

Show All Doors

Reboot

Details

Event Info All Alarm Abnormal Normal

Event History

Event Configuration

Time	Event	Description
2022-04-08 17:37:36	111/Door 1	Door is locked
2022-04-08 17:37:33	111/Door 1	E731FC4A Card Unlock
2022-04-08 17:37:33	111/Door 1	Door is unlocked
2022-04-07 11:11:50	111	Tamper Alarm

IP: 192.168.1.100

Device Type: Access Standalone

Device Model: E731FC4A...

Status: Online

Related Operations

- Show All Door: Displays all doors controlled by the Access Standalone.
- Reboot: Restart the Access Standalone.
- Details: View the device details, such as IP address, model, and status.

Appendix 1 Important Points of Fingerprint Registration Instructions

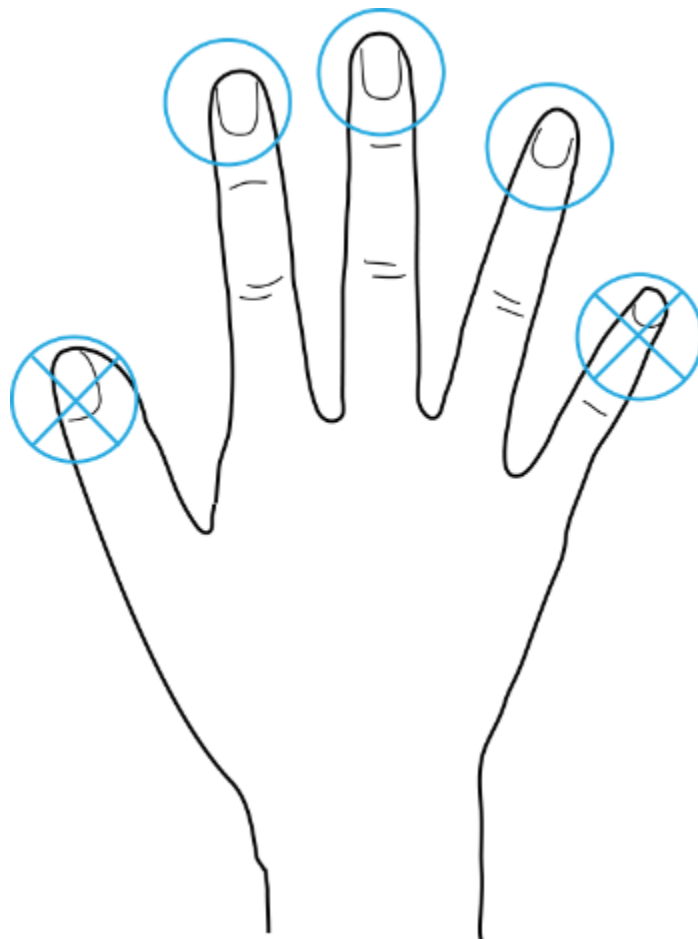
When you register the fingerprint, pay attention to the following points:

- Make sure that your fingers and the scanner surface are clean and dry.
- Press your finger on the center of the fingerprint scanner.
- Do not put the fingerprint sensor in a place with intense light, high temperature, and high humidity.
- If your fingerprints are unclear, use other unlocking methods.

Fingers Recommended


Forefingers, middle fingers, and ring fingers are recommended. Thumbs and little fingers cannot be put at the recording center easily.

Appendix Figure 1-1 Recommended fingers




How to Press Your Fingerprint on the Scanner

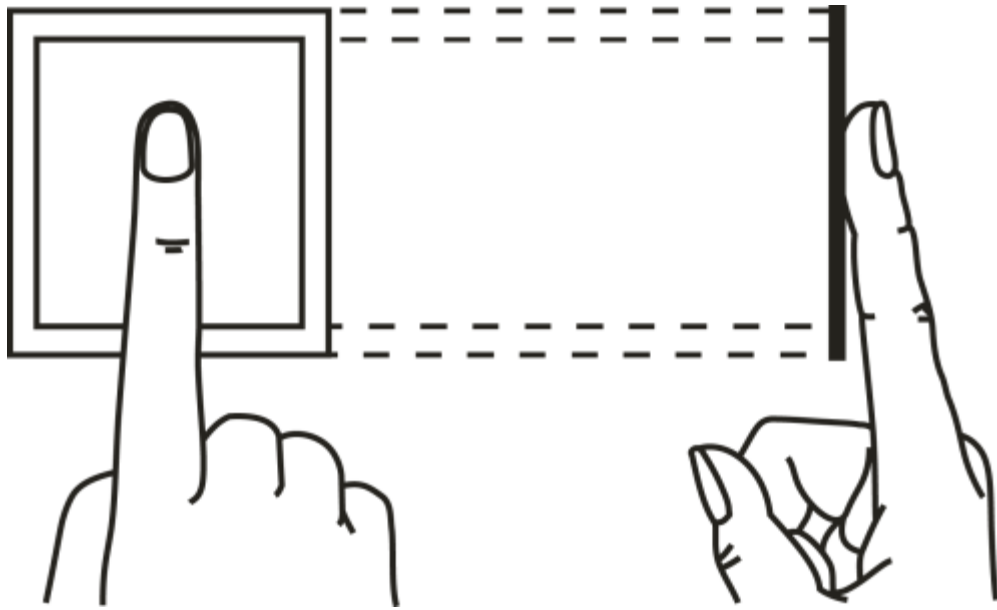Appendix Figure 1-2 Correct placement



Appendix Figure 1-3 Wrong placement

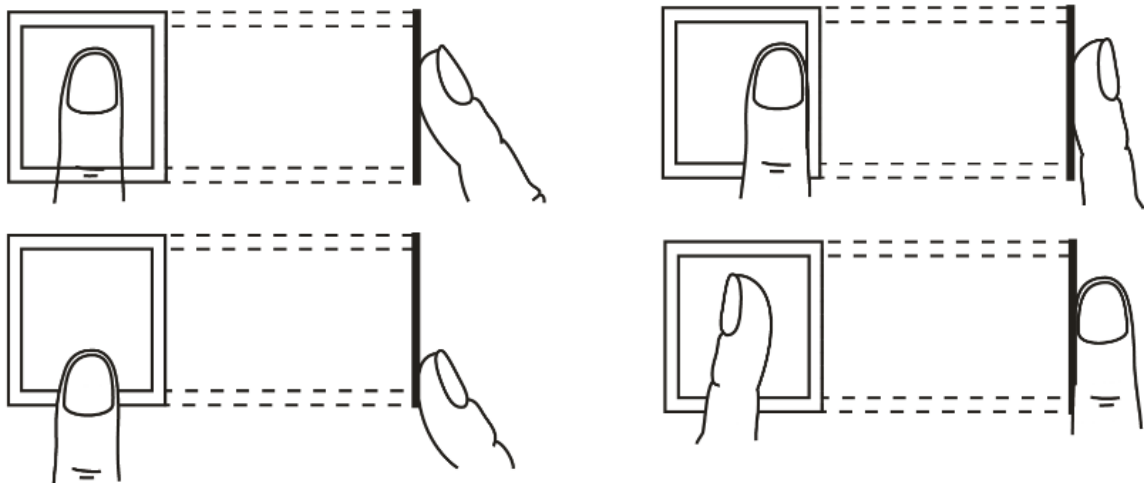

Appendix 2 Cybersecurity Recommendations

Mandatory actions to be taken for basic device network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters.
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols.
- Do not contain the account name or the account name in reverse order.
- Do not use continuous characters, such as 123, abc, etc.
- Do not use overlapped characters, such as 111, aaa, etc.

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your device (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the device is connected to the public network, it is recommended to enable the “auto-check for updates” function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

"Nice to have" recommendations to improve your device network security:

1. Physical Protection

We suggest that you perform physical protection to device, especially storage devices. For example, place the device in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable device (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The device supports password reset function. Please set up related information for password reset in time, including the end user’s mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024–65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the device, thus reducing

the risk of ARP spoofing.

8. **Assign Accounts and Privileges Reasonably**

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

9. **Disable Unnecessary Services and Choose Secure Modes**

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

10. **Audio and Video Encrypted Transmission**

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

11. **Secure Auditing**

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check device log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

12. **Network Log**

Due to the limited storage capacity of the device, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

13. **Construct a Safe Network Environment**

In order to better ensure the safety of device and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.
- Enable IP/MAC address filtering function to limit the range of hosts allowed to access the device.