



Network Camera

User Manual

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com> or <https://www.hi-watch.eu/>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

- This product can only enjoy the after-sales service support in the country or region where the purchase is made.
- If the product you choose is a video product, please scan the following QR code to obtain the "Initiatives on the Use of Video Products", and read it carefully.



Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL,

INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Update Firmware




For better user experience, we recommend you to update your device to the latest firmware asap. Please get the latest firmware package from the official website or the local technical expert. For more information, please visit the official website:

<https://www.hikvision.com/en/support/download/firmware/>.

For the upgrading settings, refer to [Upgrade](#).

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

Laws and Regulations

- The device should be used in compliance with local laws, electrical safety regulations, and fire prevention regulations.

Electricity

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the equipment.
- Provide a surge suppressor at the inlet opening of the equipment under special conditions such as the mountain top, iron tower, and forest.
- CAUTION: To reduce the risk of fire, replace only with the same type and rating of fuse.
- The equipment must be connected to an earthed mains socket-outlet.
- An appropriate readily accessible disconnect device shall be incorporated external to the equipment.
- An appropriate overcurrent protective device shall be incorporated external to the equipment, not exceeding the specification of the building.
- An all-pole mains switch shall be incorporated in the electrical installation of the building.
- Ensure correct wiring of the terminals for connection to an AC mains supply.
- The equipment has been designed, when required, modified for connection to an IT power distribution system.

Battery


- Do not ingest battery. Chemical burn hazard!
- This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- ATTENTION: IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS.
- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).

- Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
- Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
- + identifies the positive terminal(s) of equipment which is used with, or generates direct current. - identifies the negative terminal(s) of equipment which is used with, or generates direct current.

Fire Prevention

- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The serial port of the equipment is used for debugging only.

Hot Surface Prevention

-  CAUTION: Hot parts! Burned fingers when handling the parts. Wait one-half hour after switching off before handling parts. This sticker is to indicate that the marked item can be hot and should not be touched without taking care. For device with this sticker, this device is intended for installation in a restricted access location, access can only be gained by service persons or by users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken.

Installation

- Install the equipment according to the instructions in this manual.
- To prevent injury, this equipment must be securely attached to the floor/wall in accordance with the installation instructions.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.

Power Supply

- The input voltage should conform to IEC60950-1 standard: SELV (Safety Extra Low Voltage) and the Limited Power Source. Refer to the appropriate documentation for detailed information.
- The power source should meet limited power source or PS2 requirements according to IEC 60950-1 or IEC 62368-1 standard.
- DO NOT connect multiple devices to one power adapter, to avoid over-heating or fire hazards caused by overload.
- Make sure the plug is properly connected to the power socket.

White Light Illuminator (If supported)

- Possibly hazardous optical radiation emitted from this product.
- DO NOT stare at operating light source. May be harmful to the eyes.
- Wear appropriate eye protection or DO NOT turn on the white light when you assemble, install or maintain the camera.

Transportation

- Keep the device in original or similar packaging while transporting it.

System Security

- The installer and user are responsible for password and security configuration.

Maintenance

- If the product does not work properly, please contact your dealer or the nearest service center.
- We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.
- A few device components (e.g., electrolytic capacitor) require regular replacement. The average lifespan varies, so periodic checking is recommended. Contact your dealer for details.

Cleaning

- Please use a soft and dry cloth when clean inside and outside surfaces of the product cover. Do not use alkaline detergents.

Using Environment

- When any laser equipment is in use, make sure that the device lens is not exposed to the laser beam, or it may burn out.
- DO NOT expose the device to high electromagnetic radiation or dusty environments.
- For indoor-only device, place it in a dry and well-ventilated environment.
- DO NOT aim the lens at the sun or any other bright light.
- Make sure the running environment meets the requirement of the device. The operating temperature shall be -30 °C to 60 °C (-22 °F to 140 °F), and the operating humidity shall be 95% or less (no condensing).
- DO NOT place the camera in extremely hot, cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.

Emergency

- If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.

Time Synchronization

- Set up device time manually for the first time access if the local time is not synchronized with that of the network. Visit the device via Web browse/client software and go to time settings interface.

Reflection

- Make sure that no reflective surface is too close to the device lens. The IR light from the device may reflect back into the lens causing reflection.

Contents

Chapter 1 System Requirement	1
Chapter 2 Device Activation and Accessing	2
2.1 Activate the Device via SADP	2
2.2 Activate the Device via Browser	2
2.3 Login.....	3
2.3.1 Plug-in Installation	3
2.3.2 Admin Password Recovery	4
2.3.3 Illegal Login Lock.....	5
Chapter 3 Live View.....	6
3.1 Live View Parameters.....	6
3.1.1 Enable and Disable Live View	6
3.1.2 Adjust Aspect Ratio	6
3.1.3 Live View Stream Type	6
3.1.4 Select the Third-Party Plug-in	6
3.1.5 Light	7
3.1.6 Count Pixel.....	7
3.1.7 Start Digital Zoom	7
3.1.8 Auxiliary Focus.....	7
3.1.9 Lens Initialization	7
3.1.10 Quick Set Live View	8
3.1.11 Lens Parameters Adjustment.....	8
3.1.12 Conduct 3D Positioning.....	9
3.2 Set Transmission Parameters	9
3.3 Set Smooth Streaming.....	10
Chapter 4 Video and Audio.....	12
4.1 Video Settings.....	12
4.1.1 Stream Type.....	12
4.1.2 Video Type	13
4.1.3 Resolution.....	13

4.1.4 Bitrate Type and Max. Bitrate	13
4.1.5 Video Quality	13
4.1.6 Frame Rate	13
4.1.7 Video Encoding	14
4.1.8 Smoothing	15
4.2 ROI	16
4.2.1 Set ROI	16
4.3 Display Info. on Stream	17
4.4 Audio Settings	17
4.4.1 Audio Encoding	17
4.4.2 Audio Input	17
4.4.3 Audio Output	17
4.4.4 Environmental Noise Filter	18
4.5 Two-way Audio	18
4.6 Display Settings	18
4.6.1 Scene Mode	18
4.6.2 Image Parameters Switch	22
4.6.3 Video Standard	22
4.6.4 Local Video Output	22
4.7 OSD	22
4.8 Set Privacy Mask	23
4.9 Overlay Picture	23
4.10 Set Target Cropping	24
Chapter 5 Video Recording and Picture Capture	25
5.1 Storage Settings	25
5.1.1 Set New or Unencrypted Memory Card	25
5.1.2 Set FTP	27
5.1.3 Set NAS	28
5.1.4 eMMC Protection	28
5.1.5 Set Cloud Storage	29
5.2 Video Recording	29

5.2.1 Record Automatically	29
5.2.2 Record Manually	31
5.2.3 Set Lite Storage.....	31
5.2.4 Playback and Download Video	31
5.3 Capture Configuration.....	32
5.3.1 Capture Automatically	32
5.3.2 Capture Manually.....	33
5.3.3 Set Timing Wake.....	33
5.3.4 View and Download Picture	33
Chapter 6 Event and Alarm.....	35
6.1 Basic Event.....	35
6.1.1 Set Motion Detection.....	35
6.1.2 Set Video Tampering Alarm	37
6.1.3 Set PIR Alarm	38
6.1.4 Set Exception Alarm	39
6.1.5 Set Alarm Input	39
6.1.6 Set Video Quality Diagnosis	39
6.1.7 Set Vibration Detection.....	40
6.2 Smart Event	41
6.2.1 Detect Audio Exception.....	41
6.2.2 Set Defocus Detection.....	42
6.2.3 Detect Scene Change.....	42
6.2.4 Set Face Detection.....	42
6.2.5 Set Video Loss.....	43
6.2.6 Set Intrusion Detection	43
6.2.7 Set Line Crossing Detection	44
6.2.8 Set Region Entrance Detection	45
6.2.9 Set Region Exiting Detection.....	46
6.2.10 Set Unattended Baggage Detection	47
6.2.11 Set Object Removal Detection.....	48
6.2.12 Draw Area	49

6.2.13 Set Size Filter	50
Chapter 7 Network Settings.....	51
7.1 TCP/IP	51
7.1.1 Multicast	52
7.1.2 Multicast Discovery	53
7.2 SNMP	53
7.3 Set SRTP	53
7.4 Port Mapping.....	54
7.4.1 Set Auto Port Mapping.....	54
7.4.2 Set Manual Port Mapping.....	54
7.4.3 Set Port Mapping on Router	55
7.5 Port.....	56
7.6 Access to Device via Domain Name.....	57
7.7 Access to Device via PPPoE Dial Up Connection	57
7.8 Wireless Dial	58
7.8.1 Set Wireless Dial.....	58
7.8.2 Set Allowlist	59
7.9 Wi-Fi.....	59
7.9.1 Connect Device to Wi-Fi.....	60
7.10 Set Network Service	60
7.11 Set Open Network Video Interface.....	61
7.12 Set ISUP.....	62
7.13 Set Alarm Server	62
7.14 Access Camera via Hik-Connect	62
7.14.1 Enable Hik-Connect Service on Camera	63
7.14.2 Set Up Hik-Connect	64
7.14.3 Add Camera to Hik-Connect	65
Chapter 8 Arming Schedule and Alarm Linkage	66
8.1 Set Arming Schedule	66
8.2 Linkage Method Settings.....	66
8.2.1 Trigger Alarm Output	66

8.2.2 FTP/NAS/Memory Card Uploading	67
8.2.3 Send Email	68
8.2.4 Notify Surveillance Center	69
8.2.5 Trigger Recording	69
8.2.6 Flashing Light	69
8.2.7 Audible Warning.....	69
Chapter 9 System and Security	71
9.1 View Device Information	71
9.2 Search and Manage Log	71
9.3 Simultaneous Login	71
9.4 Import and Export Configuration File	71
9.5 Export Diagnose Information.....	71
9.6 Reboot.....	72
9.7 Restore and Default	72
9.8 Upgrade	72
9.9 View Open Source Software License	73
9.10 Wiegand.....	73
9.11 Metadata	73
9.12 Time and Date	73
9.12.1 Synchronize Time Manually.....	73
9.12.2 Set NTP Server	74
9.12.3 Synchronize Time by Satellite.....	74
9.12.4 Set DST.....	74
9.13 Set RS-485.....	75
9.14 Set RS-232.....	75
9.15 Power Consumption Mode	75
9.16 External Device	76
9.16.1 Supplement Light Settings	76
9.16.2 Heater	77
9.17 Security	77
9.17.1 Authentication.....	77

9.17.2 Set IP Address Filter	78
9.17.3 Set HTTPS.....	78
9.17.4 Set QoS.....	79
9.17.5 Set IEEE 802.1X	79
9.17.6 Control Timeout Settings	80
9.17.7 Search Security Audit Logs.....	80
9.17.8 Security Reinforcement	80
9.17.9 SSH	81
9.18 Certificate Management	81
9.18.1 Create Self-signed Certificate	81
9.18.2 Create Certificate Request	81
9.18.3 Import Certificate	82
9.18.4 Install Server/Client Certificate	82
9.18.5 Install CA Certificate	82
9.18.6 Enable Certificate Expiration Alarm	83
9.19 User and Account	83
9.19.1 Set User Account and Permission	83
9.19.2 Simultaneous Login	84
9.19.3 Online Users	84
Chapter 10 Allocate VCA Resource.....	85
10.1 Switch Smart Mode	85
10.2 Face Capture	86
10.2.1 Set Face Capture.....	87
10.2.2 Overlay and Capture	87
10.2.3 Face Capture Algorithms Parameters.....	88
10.2.4 Set Shield Region.....	90
10.3 Road Traffic.....	90
10.3.1 Set Vehicle Detection	90
10.3.2 Set Mixed-Traffic Detection Rule.....	91
10.3.3 Uploading Pictures Settings	92
10.3.4 Camera Settings.....	92

10.3.5 Import or Export Blocklist & Allowlist	92
10.4 Multi-Target-Type Detection	93
10.4.1 Set Multi-Target-Type Detection Rule.....	93
10.4.2 Overlay and Capture	94
10.4.3 Multi-Target-Type Detection Algorithm Parameters.....	94
10.4.4 Set Shield Region.....	96
10.5 Face Counting	96
10.5.1 Set Face Counting Detection Rule	96
10.5.2 Overlay and Capture	97
10.5.3 Face Counting Algorithm Parameters	98
10.5.4 View Face Counting Result.....	99
10.6 Queue Management	99
10.6.1 Set Regional People Queuing-Up.....	99
10.6.2 Set Waiting Time Detection	100
10.6.3 Queue Management Statistics	101
10.7 Counting.....	102
10.7.1 Set Counting	102
10.7.2 View Counting Statistics.....	103
10.8 Hard Hat Detection.....	103
10.8.1 Set Hard Hat Detection	104
10.9 Face Comparison and Modeling	104
10.9.1 Face Comparison	104
10.9.2 Face Modeling	107
Chapter 11 Open Platform.....	109
11.1 Set Open Platform	109
Chapter 12 Smart Display	111
Chapter 13 Set EPTZ	112
13.1 Patrol.....	112
13.2 Auto-Tracking	112
Chapter 14 Pattern Linkage	114
14.1 Set Pattern Linkage	114

Chapter 1 System Requirement

Your computer should meet the requirements for proper visiting and operating the product.

Operating System	Microsoft Windows XP SP1 and above version
CPU	2.0 GHz or higher
RAM	1G or higher
Display	1024×768 resolution or higher
Web Browser	For the details, see <i>Plug-in Installation</i>

Chapter 2 Device Activation and Accessing

To protect the security and privacy of the user account and data, you should set a login password to activate the device when access the device via network.

Note

Refer to the user manual of the software client for the detailed information about the client software activation.

2.1 Activate the Device via SADP

Search and activate the online devices via SADP software.

Before You Start

Access www.hikvision.com to get SADP software to install.

Steps

1. Connect the device to network using the network cable.
2. Run SADP software to search the online devices.
3. Check **Device Status** from the device list, and select **Inactive** device.
4. Create and input the new password in the password field, and confirm the password.

Caution

We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

5. Click **OK**.
Device Status changes into **Active**.
6. Optional: Change the network parameters of the device in **Modify Network Parameters**.

2.2 Activate the Device via Browser

You can access and activate the device via the browser.

Steps

1. Connect the device to the PC using the network cables.
2. Change the IP address of the PC and device to the same segment.

Note

The default IP address of the device is 192.168.1.64. You can set the IP address of the PC from 192.168.1.2 to 192.168.1.253 (except 192.168.1.64). For example, you can set the IP address of the PC to 192.168.1.100.

3. Input **192.168.1.64** in the browser.
 4. Set device activation password.
-

Caution

We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.


5. Click **OK**.
6. Input the activation password to log in to the device.
7. Optional: Go to **Configuration** → **Network** → **Basic** → **TCP/IP** to change the IP address of the device to the same segment of your network.

2.3 Login

Log in to the device via Web browser.

2.3.1 Plug-in Installation

Certain operation systems and web browser may restrict the display and operation of the camera function. You should install plug-in or complete certain settings to ensure normal display and operation. For detailed restricted function, refer to the actual device.

Operating System	Web Browser	Operation
Windows	<ul style="list-style-type: none">● Internet Explorer 8+● Google Chrome 57 and earlier version● Mozilla Firefox 52 and earlier version	Follow pop-up prompts to complete plug-in installation.
	<ul style="list-style-type: none">● Google Chrome 57+● Mozilla Firefox 52+	Click  Download Plug-in to download and install plug-in.

Operating System	Web Browser	Operation
Mac OS	<ul style="list-style-type: none"> ● Google Chrome 57+ ● Mozilla Firefox 52+ ● Mac Safari 16+ 	<p>Plug-in installation is not required.</p> <p>Go to Configuration → Network → Advanced Settings → Network Service to enable WebSocket or Websockets for normal view. Display and operation of certain functions are restricted. For example, Playback and Picture are not available. For detailed restricted function, refer to the actual device.</p>

 **Note**

The camera only supports Windows and Mac OS system and do not support Linux system.

2.3.2 Admin Password Recovery

If you forget the admin password, you can reset the password by clicking **Forget Password** on the login page after completing the account security settings.

You can reset the password by setting the security question or email.

 **Note**

When you need to reset the password, make sure that the device and the PC are on the same network segment.

Security Question

You can set the account security during the activation. Or you can go to **Configuration** → **System** → **User Management**, click **Account Security Settings**, select the security question and input your answer.

You can click **Forget Password** and answer the security question to reset the admin password when access the device via browser.

Email

You can set the account security during the activation. Or you can go to **Configuration** → **System** → **User Management**, click **Account Security Settings**, input your email address to receive the verification code during the recovering operation process.

2.3.3 Illegal Login Lock

It helps to improve the security when accessing the device via Internet.

Go to **Configuration** → **System** → **Security** → **Security Service**, and enable **Enable Illegal Login Lock**. **Illegal Login Attempt** and **Locking Duration** are configurable.

Illegal Login Attempt

When your login attempts with the wrong password reach the set times, the device is locked.

Locking Duration

The device releases the lock after the setting duration.

Chapter 3 Live View



It introduces the live view parameters, function icons and transmission parameters settings.

3.1 Live View Parameters

The supported functions vary depending on the model.







3.1.1 Enable and Disable Live View

This function is used to quickly enable or disable live view of the channel.

- Click  to start the live view.
- Click  to stop the live view.

3.1.2 Adjust Aspect Ratio

Steps

1. Click **Live View**.
2. Click  to select the aspect ratio.
 -  refers to 4:3 window size.
 -  refers to 16:9 window size.
 -  refers to original window size.
 -  refers to self-adaptive window size.
 -  refers to original ratio window size.


3.1.3 Live View Stream Type

Select the live view stream type according to your needs. For the detailed information about the stream type selection, refer to *Stream Type*.

3.1.4 Select the Third-Party Plug-in

When the live view cannot display via certain browsers, you can change the plug-in for live view according to the browser.


Steps

1. Click **Live View**.
2. Click  to select the plug-in.

When you access the device via Internet Explorer, you can select Webcomponents or QuickTime. When you access the device via the other browsers, you can select Webcomponents,

QuickTime, VLC or MJPEG.


3.1.5 Light

Click  to turn on or turn off the illuminator.

3.1.6 Count Pixel

It helps to get the height and width pixel of the selected region in the live view image.


Steps

1. Click  to enable the function.
2. Drag the mouse on the image to select a desired rectangle area.
The width pixel and height pixel are displayed on the bottom of the live view image.

3.1.7 Start Digital Zoom


It helps to see a detailed information of any region in the image.

Steps

1. Click  to enable the digital zoom.
2. In live view image, drag the mouse to select the desired region.
3. Click in the live view image to back to the original image.

3.1.8 Auxiliary Focus

It is used for motorized device. It can improve the image if the device cannot focus clearly. For the device that supports ABF, adjust the lens angle, then focus and click ABF button on the device. The device can focus clearly.

Click  to focus automatically.

Note

- If the device cannot focus with auxiliary focus, you can use **Lens Initialization**, then use auxiliary focus again to make the image clear.
 - If auxiliary focus cannot help the device focus clearly, you can use manual focus.
-

3.1.9 Lens Initialization

Lens initialization is used on the device equipped with motorized lens. The function can reset lens when long time zoom or focus results in blurred image. This function varies according to different models.

Manual Lens Initialization

Click  to operate lens initialization.


Auto Lens Initialization

Go to **Configuration** → **System** → **Maintenance** → **Lens Correction** to enable this function. You can set the arming schedule, and the device will correct lens automatically during the configured time periods.

3.1.10 Quick Set Live View

It offers a quick setup of PTZ, display settings, OSD, video/audio and VCA resource settings on live view page.

Steps

1. Click  to show quick setup page.
2. Set PTZ, display settings, OSD, video/audio and VCA resource parameters.
 - For PTZ settings, see ***Lens Parameters Adjustment***.
 - For display settings, see ***Display Settings***.
 - For OSD settings, see ***OSD***.
 - For audio and video settings, see ***Video and Audio***.
 - For VCA settings, see ***Allocate VCA Resource***.



Note

The function is only supported by certain models.



3.1.11 Lens Parameters Adjustment

It is used to adjust the lens focus, zoom and iris.

Zoom

- Click , and the lens zooms in.
- Click , and the lens zooms out.



Focus

- Click , then the lens focuses far and the distant object gets clear.
- Click , then the lens focuses near and the nearby object gets clear.

PTZ Speed

Slide  to adjust the speed of the pan/tilt movement.

Iris

- When the image is too dark, click  to enlarge the iris.
- When the image is too bright, click  to stop down the iris.

PTZ Lock


PTZ lock means to disable the zoom, focus and PTZ rotation functions of the corresponding channel, so that to reduce the target missing caused by PTZ adjustment.

Go to **Configuration** → **PTZ**, check **Enable PTZ Lock**, and click **Save**.

3.1.12 Conduct 3D Positioning

3D positioning is to relocate the selected area to the image center.

Steps

1. Click  to enable the function.
2. Select a target area in live image.
 - Left click on a point on live image: the point is relocated to the center of the live image. With no zooming in or out effect.
 - Hold and drag the mouse to a lower right position to frame an area on the live: the framed area is zoomed in and relocated to the center of the live image.
 - Hold and drag the mouse to an upper left position to frame an area on the live: the framed area is zoomed out and relocated to the center of the live image.
3. Click the button again to turn off the function.

3.2 Set Transmission Parameters

The live view image may be displayed abnormally according to the network conditions. In different network environments, you can adjust the transmission parameters to solve the problem.

Steps

1. Go to **Configuration** → **Local**.
2. Set the transmission parameters as required.

Protocol

TCP

TCP ensures complete delivery of streaming data and better video quality, yet the real-time transmission will be affected. It is suitable for the stable network environment.

UDP

UDP is suitable for the unstable network environment that does not demand high video fluency.

MULTICAST

MULTICAST is suitable for the situation that there are multiple clients. You should set the multicast address for them before selection.



For detailed information about multicast, refer to ***Multicast***.

HTTP

HTTP is suitable for the situation that the third-party needs to get the stream from the device.

Play Performance

Shortest Delay

The device takes the real-time video image as the priority over the video fluency.

Balanced

The device ensures both the real-time video image and the fluency.

Fluent

The device takes the video fluency as the priority over real-time. In poor network environment, the device cannot ensure video fluency even the fluency is enabled.

Custom

You can set the frame rate manually. In poor network environment, you can reduce the frame rate to get a fluent live view. But the rule information may not display.

3. Click **OK**.

3.3 Set Smooth Streaming

It is a function to tackle the latency and network congestion caused by unstable network condition, and keep the live view stream on the web browser or the client software smooth.

Before You Start

Add the device to your client software and select NPQ protocol in client software before configuring the smooth streaming function.

Be sure that the **Bitrate Type** is selected as **Constant** and the **SVC** is selected as **OFF** before enabling the function. Go to **Configuration** → **Video/Audio** → **Video** to set the parameters.

Steps

1. Go to the settings page: **Configuration** → **Network** → **Advanced Settings** → **Smooth Streaming**.
2. Check **Enable Smooth Streaming**.
3. Select the mode for smooth streaming.

Auto

The resolution and bitrate are adjusted automatically and resolution takes the priority. The upper limits of these two parameters will not exceed the values you set on **Video** page. Go to **Configuration** → **Video/Audio** → **Video**, set the **Resolution** and **Max. Bitrate** before

you enable smooth streaming function. In this mode, the frame rate will be adjusted to the maximum value automatically.

Resolution Priority

The resolution stays the same as the set value on **Video** page, and the bitrate will be adjusted automatically. Go to **Configuration** → **Video/Audio** → **Video**, set the **Max. Bitrate** before you enable smooth streaming function. In this mode, the framerate will be adjusted to the maximum value automatically.

Error Correction

The resolution and bitrate stay the same as the set values on **Video** page. The mode is used to correct the data error during transmission to ensure the image quality. You can set the **Error Correction Proportion** within range of 0-100.

When the proportion is 0, the data error will be corrected by data retransmission. When the proportion is higher than 0, the error data will be corrected via redundant data that is added to the stream and data retransmission. The higher the value is, the more redundant data will be generated, the more data error would be corrected, but the larger bandwidth would be required. When the proportion is 100, the redundant data will be as large as the original data, and the bandwidth is twice required.

Note

Be sure the bandwidth is sufficient in the Error Correction mode.

4. Save the settings.

Chapter 4 Video and Audio

This part introduces the configuration of video and audio related parameters.

4.1 Video Settings

This part introduces the settings of video parameters, such as, stream type, video encoding, and resolution.

Go to setting page: **Configuration** → **Video/Audio** → **Video**.

4.1.1 Stream Type

For device supports more than one stream, you can specify parameters for each stream type.

Main Stream

The stream stands for the best stream performance the device supports. It usually offers the best resolution and frame rate the device can do. But high resolution and frame rate usually means larger storage space and higher bandwidth requirements in transmission.

Sub Stream

The stream usually offers comparatively low resolution options, which consumes less bandwidth and storage space.

Other Streams

Streams other than the main stream and sub stream may also be offered for customized usage.

Set Custom Video

You can set up additional video streams if required. For custom video streams, you can preview them, but cannot record or play back them.

Steps


Note

- The function is only supported by certain camera models.
 - After restoring the device (not restore to default settings), quantity of custom video streams and their names are kept, but the related parameters are restored.
-

1. Click **+** to add a stream.
2. Change the stream name as needed.

Note

Up to 32 letters and symbols (except &, <, >, ', or ") are allowed for the stream name.

3. Customize the stream parameters (resolution, frame rate, max. bitrate, video encoding).
4. Optional: Add stream description as needed.
5. Optional: If a custom stream is not needed, click  to delete it.
6. Click **Save**.

4.1.2 Video Type

Select the content (video and audio) that should be contained in the stream.

Video

Only video content is contained in the stream.

Video & Audio

Video content and audio content are contained in the composite stream.

4.1.3 Resolution

Select video resolution according to actual needs. Higher resolution requires higher bandwidth and storage.

4.1.4 Bitrate Type and Max. Bitrate

Constant Bitrate

It means that the stream is compressed and transmitted at a comparatively fixed bitrate. The compression speed is fast, but mosaic may occur on the image.

Variable Bitrate

It means that the device automatically adjust the bitrate under the set **Max. Bitrate**. The compression speed is slower than that of the constant bitrate. But it guarantees the image quality of complex scenes.

4.1.5 Video Quality

When **Bitrate Type** is set as Variable, video quality is configurable. Select a video quality according to actual needs. Note that higher video quality requires higher bandwidth.

4.1.6 Frame Rate

The frame rate is to describe the frequency at which the video stream is updated and it is

measured by frames per second (fps).

A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout. Note that higher frame rate requires higher bandwidth and larger storage space.

4.1.7 Video Encoding

It stands for the compression standard the device adopts for video encoding.

Note

Available compression standards vary according to device models.

H.264

H.264, also known as MPEG-4 Part 10, Advanced Video Coding, is a compression standard. Without compressing image quality, it increases compression ratio and reduces the size of video file than MJPEG or MPEG-4 Part 2.

H.264+

H.264+ is an improved compression coding technology based on H.264. By enabling H.264+, you can estimate the HDD consumption by its maximum average bitrate. Compared to H.264, H.264+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

When H.264+ is enabled, **Max. Average Bitrate** is configurable. The device gives a recommended max. average bitrate by default. You can adjust the parameter to a higher value if the video quality is less satisfactory. Max. average bitrate should not be higher than max. bitrate.

Note

When H.264+ is enabled, **Video Quality**, **I Frame Interval**, **Profile** and **SVC** are not configurable.

H.265

H.265, also known as High Efficiency Video Coding (HEVC) and MPEG-H Part 2, is a compression standard. In comparison to H.264, it offers better video compression at the same resolution, frame rate and image quality.

H.265+

H.265+ is an improved compression coding technology based on H.265. By enabling H.265+, you can estimate the HDD consumption by its maximum average bitrate. Compared to H.265, H.265+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

When H.265+ is enabled, **Max. Average Bitrate** is configurable. The device gives a recommended max. average bitrate by default. You can adjust the parameter to a higher value if the video quality

is less satisfactory. Max. average bitrate should not be higher than max. bitrate.

Note

When H.265+ is enabled, **Video Quality**, **I Frame Interval**, **Profile** and **SVC** are not configurable.

I-Frame Interval

I-frame interval defines the number of frames between 2 I-frames.

In H.264 and H.265, an I-frame, or intra frame, is a self-contained frame that can be independently decoded without any reference to other images. An I-frame consumes more bits than other frames. Thus, video with more I-frames, in other words, smaller I-frame interval, generates more steady and reliable data bits while requiring more storage space.

SVC

Scalable Video Coding (SVC) is the name for the Annex G extension of the H.264 or H.265 video compression standard.

The objective of the SVC standardization has been to enable the encoding of a high-quality video bitstream that contains one or more subset bitstreams that can themselves be decoded with a complexity and reconstruction quality similar to that achieved using the existing H.264 or H.265 design with the same quantity of data as in the subset bitstream. The subset bitstream is derived by dropping packets from the larger bitstream.

SVC enables forward compatibility for older hardware: the same bitstream can be consumed by basic hardware which can only decode a low-resolution subset, while more advanced hardware will be able decode high quality video stream.

MPEG4

MPEG4, referring to MPEG-4 Part 2, is a video compression format developed by Moving Picture Experts Group (MPEG).

MJPEG

Motion JPEG (M-JPEG or MJPEG) is a video compression format in which intraframe coding technology is used. Images in a MJPEG format is compressed as individual JPEG images.

Profile

This function means that under the same bitrate, the more complex the profile is, the higher the quality of the image is, and the requirement for network bandwidth is also higher.

4.1.8 Smoothing

It refers to the smoothness of the stream. The higher value of the smoothing is, the better fluency

of the stream will be, though, the video quality may not be so satisfactory. The lower value of the smoothing is, the higher quality of the stream will be, though it may appear not fluent.

4.2 ROI

ROI (Region of Interest) encoding helps to discriminate the ROI and background information in video compression. The technology assigns more encoding resource to the region of interest, thus to increase the quality of the ROI whereas the background information is less focused.

4.2.1 Set ROI

ROI (Region of Interest) encoding helps to assigns more encoding resource to the region of interest, thus to increase the quality of the ROI whereas the background information is less focused.

Before You Start

Please check the video coding type. ROI is supported when the video coding type is H.264 or H.265.

Steps

1. Go to **Configuration** → **Video/Audio** → **ROI**.
2. Check **Enable**.
3. Select **Stream Type**.
4. Select **Region No.** in **Fixed Region** to draw ROI region.
 - 1) Click **Drawing**.
 - 2) Click and drag the mouse on the view screen to draw the fixed region.
 - 3) Click **Stop Drawing**.

Note

Select the fixed region that needs to be adjusted and drag the mouse to adjust its position.

5. Input the **Region Name** and **ROI Level**.
6. Click **Save**.

Note

The higher the ROI level is, the clearer the image of the detected region is.

7. Optional: Select other region No. and repeat the above steps if you need to draw multiple fixed regions.

4.3 Display Info. on Stream

The information of the objects (e.g. human, vehicle, etc.) is marked in the video stream. You can set rules on the connected rear-end device or client software to detect the events including line crossing, intrusion, etc.

Steps

1. Go to the setting page: **Configuration** → **Video/Audio** → **Display Info. on Stream**.
2. Check **Enable Dual-VCA**.
3. Click **Save**.

4.4 Audio Settings

It is a function to set audio parameters such as audio encoding, environment noise filtering. Go to the audio settings page: **Configuration** → **Video/Audio** → **Audio**.

4.4.1 Audio Encoding

Select the audio encoding compression of the audio.

4.4.2 Audio Input



Note

- Connect the audio input device as required.
 - The audio input display varies with the device models.
-

LineIn	Set Audio Input to LineIn when the device connects to the audio input device with the high output power, such as MP3, synthesizer or active pickup.
MicIn	Set Audio Input to MicIn when the device connects to the audio input device with the low output power, such as microphone or passive pickup.

4.4.3 Audio Output



Note

Connect the audio output device as required.

It is a switch of the device audio output. You can adjust the output volume as required. When it is disabled, all the device audio cannot output. The audio output display varies with the device

modes.

4.4.4 Environmental Noise Filter

Set it as OFF or ON. When the function is enabled, the noise in the environment can be filtered to some extent.





4.5 Two-way Audio

It is used to realize the two-way audio function between the monitoring center and the target in the monitoring screen.

Before You Start

- Make sure the audio input device (pick-up or microphone) and audio output device (speaker) connected to the device is working properly. Refer to specifications of audio input and output devices for device connection.
- If the device has built-in microphone and speaker, two-way audio function can be enabled directly.

Steps

1. Click **Live View**.
2. Click  on the toolbar to enable two-way audio function of the camera.
3. Click  and select , move the slider to adjust the volume.
4. Click , disable the two-way audio function.

4.6 Display Settings

It offers the parameter settings to adjust image features.

Go to **Configuration** → **Image** → **Display Settings**.

Click **Default** to restore settings.

4.6.1 Scene Mode

There are several sets of image parameters predefined for different installation environments. Select a scene according to the actual installation environment to speed up the display settings.

Image Adjustment

By adjusting the **Brightness**, **Saturation**, **Hue**, **Contrast** and **Sharpness**, the image can be best

displayed.

Exposure Settings

Exposure is controlled by the combination of iris, shutter, and photo sensibility. You can adjust image effect by setting exposure parameters.

In manual mode, you need to set **Exposure Time**, **Gain** and **Slow Shutter**.

Focus

It offers options to adjust the focus mode and the minimum focus distance.

Focus Mode

Auto

The device focuses automatically as the scene changes. If you cannot get a well-focused image under auto mode, reduce light sources in the image and avoid flashing lights.

Semi-auto

The device focuses once after the PTZ and lens zooming. If the image is clear, the focus does not change when the scene changes.

Manual

You can adjust the focus manually on the live view page.

Min. Focus Distance

When the distance between the scene and lens is shorter than the Min. Focus Distance, the lens does not focus.

Day/Night Switch

Day/Night Switch function can provide color images in the day mode and black/white images in the night mode. Switch mode is configurable.

Day

The image is always in color.

Night

The image is always black/white

Auto

The camera switches between the day mode and the night mode according to the illumination automatically.

Scheduled-Switch

Set the **Start Time** and the **End Time** to define the duration for day mode.

Triggered by alarm input

Two trigger modes are available: **Day** and **Night**. For example, if the trigger mode is **Night**, the image turns black and white when the device receives alarm input signal.

Note

Day/Night Switch function varies according to models.

Grey Scale

You can choose the range of the **Grey Scale** as [0-255] or [16-235].

Rotate

When enabled, the live view will rotate 90 ° counterclockwise. For example, 1280 × 720 is rotated to 720 × 1280.

Enabling this function can change the effective range of monitoring in the vertical direction.

Lens Distortion Correction

For device equipped with motorized lens, image may appear distorted to some extent. Enable this function to correct the distortion.

Note

- This function is only supported by certain device equipped with motorized lens.
 - The edge of image will be lost if this function is enabled.
-

BLC

If you focus on an object against strong backlight, the object will be too dark to be seen clearly. BLC (backlight compensation) compensates light to the object in the front to make it clear. If BLC mode is set as **Custom**, you can draw a red rectangle on the live view image as the BLC area.

WDR

The WDR (Wide Dynamic Range) function helps the camera provide clear images in environment with strong illumination differences.

When there are both very bright and very dark areas simultaneously in the field of view, you can enable the WDR function and set the level. WDR automatically balances the brightness level of the whole image and provides clear images with more details.

Note

When WDR is enabled, some other functions may be not supported. Refer to the actual interface for details.

HLC

When the bright area of the image is over-exposed and the dark area is under-exposed, the HLC (High Light Compression) function can be enabled to weaken the bright area and brighten the dark area, so as to achieve the light balance of the overall picture.

White Balance

White balance is the white rendition function of the camera. It is used to adjust the color temperature according to the environment.

DNR

Digital Noise Reduction is used to reduce the image noise and improve the image quality. **Normal** and **Expert** modes are selectable.

Normal

Set the DNR level to control the noise reduction degree. The higher level means stronger reduction degree.

Expert

Set the DNR level for both space DNR and time DNR to control the noise reduction degree. The higher level means stronger reduction degree.

Defog

You can enable the defog function when the environment is foggy and the image is misty. It enhances the subtle details so that the image appears clearer.

EIS

Increase the stability of video image by using jitter compensation technology.

Mirror

When the live view image is the reverse of the actual scene, this function helps to display the image normally.

Select the mirror mode as needed.

Note

The video recording will be shortly interrupted when the function is enabled.

4.6.2 Image Parameters Switch

The device automatically switches image parameters in set time periods.

Go to image parameters switch setting page: **Configuration** → **Image** → **Image Parameters Switch**, and set parameters as needed.

Set Switch

Switch the image parameters to the scene automatically in certain time periods.

Steps

1. Check **Enable**.
2. Select and configure the corresponding time period and the scene.



Note

For the scene configuration, refer to **Scene Mode**.

3. Click **Save**.

4.6.3 Video Standard

Video standard is an ability of a video card or video display device that defines the amount of colors that are shown and the resolution. The two most common video standard used are NTSC and PAL. In NTSC, 30 frames are transmitted each second. Each frame is made up of 525 individual scan lines. In PAL, 25 frames are transmitted each second. Each frame is made up of 625 individual scan lines. Select video signal standard according to the video system in your country.

4.6.4 Local Video Output

If the device is equipped with video output interfaces, such as BNC, CVBS, HDMI, and SDI, you can preview the live image directly by connecting the device to a monitor screen. Select the output mode as ON/OFF to control the output.

4.7 OSD

You can customize OSD (On-screen Display) information such as device name, time/date, font, and text overlay displayed on video stream.

Go to OSD setting page: **Configuration** → **Image** → **OSD Settings**. Set the corresponding parameters, and click **Save** to take effect.

Character Set

Select character set for displayed information. If Korean is required to be displayed on screen,

select **EUC-KR**. Otherwise, select **GBK**.

Displayed Information

Set camera name, date, week, and their related display format.

Text Overlay

Set customized overlay text on image.

OSD Parameters

Set OSD parameters, such as **Display Mode**, **OSD Size**, and **Alignment**.

4.8 Set Privacy Mask

The function blocks certain areas in the live view to protect privacy. No matter how the device moves, the blocked scene will never be seen.

Steps

1. Go to privacy mask setting page: **Configuration** → **Image** → **Privacy Mask**.
2. Check **Enable Privacy Mask**.
3. Click **Draw Area**. Drag the mouse in the live view to draw a closed area.

Drag the corners of the area Adjust the size of the area.

Drag the area Adjust the position of the area.

Click Clear All Clear all the areas you set.

4. Click **Stop Drawing**.
5. Click **Save**.

Note

Up to 4 areas are supported for setting.

4.9 Overlay Picture

Overlay a customized picture on live view.

Before You Start

The picture to overlay has to be in BMP format with 24-bit, and the maximum picture size is 128 × 128 pixel.

Steps

1. Go to picture overlay setting page: **Configuration** → **Image** → **Picture Overlay**.
2. Click **Browse** to select a picture, and click **Upload**.
The picture with a red rectangle will appear in live view after successfully uploading.
3. Check **Enable Picture Overlay**.
4. Drag the picture to adjust its position.
5. Click **Save**.

4.10 Set Target Cropping

You can crop the image, transmit and save only the images of the target area to save transmission bandwidth and storage.

Steps

1. Go to **Configuration** → **Video/Audio** → **Target Cropping**.
2. Check **Enable Target Cropping** and set **Third Stream** as the **Stream Type**.

Note

After enabling target cropping, the third stream resolution cannot be configured.

3. Select a **Cropping Resolution**.
A red frame appears in the live view.
4. Drag the frame to the target area.
5. Click **Save**.

Note

- Only certain models support target cropping and the function varies according to different camera models.
 - Some functions may be disabled after enabling target cropping.
-

Chapter 5 Video Recording and Picture Capture

This part introduces the operations of capturing video clips and snapshots, playback, and downloading captured files.

5.1 Storage Settings

This part introduces the configuration of several common storage paths.

5.1.1 Set New or Unencrypted Memory Card

Before You Start

Insert a new or unencrypted memory card to the device. For detailed installation, refer to *Quick Start Guide* of the device.

Steps

1. Go to **Configuration** → **Storage** → **Storage Management** → **HDD Management**.
2. Select the memory card.

Note

If an **Unlock** button appears, you need to unlock the memory card first. See **Detect Memory Card Status** for details.

3. Click **Format** to initialize the memory card.
When the **Status** of memory card turns from **Uninitialized** to **Normal**, the memory card is ready for use.
4. Optional: Encrypt the memory card.
 - 1) Click **Encrypted Format**.
 - 2) Set the encryption password.
 - 3) Click **OK**.
When the **Encryption Status** turns to **Encrypted**, the memory card is ready for use.

Note

Keep your encryption password properly. Encryption password cannot be found if forgotten.

5. Optional: Define the **Quota** of the memory card. Input the percentage for storing different contents according to your needs.
6. Click **Save**.

Detect Memory Card Status

The device detects the status of Hikvision memory card. You receive notifications when your memory card is detected abnormal.

Before You Start

The configuration page only appears when a Hikvision memory card is installed to the device.

Steps

1. Go to **Configuration** → **Storage** → **Storage Management** → **Memory Card Detection**.
2. Click **Status Detection** to check the **Remaining Lifespan** and **Health Status** of your memory card.

Remaining Lifespan

It shows the percentage of the remaining lifespan. The lifespan of a memory card may be influenced by factors such as its capacity and the bitrate. You need to change the memory card if the remaining lifespan is not enough.

Health Status

It shows the condition of your memory card. There are three status descriptions: good, bad, and damaged. You will receive a notification if the health status is anything other than good when the **Arming Schedule** and **Linkage Method** are set.



Note

It is recommended that you change the memory card when the health status is not "good".

3. Click **R/W Lock** to set the permission of reading and writing to the memory card.
 1. Add a LockSelect the **Lock Switch** as ON.
 2. Enter the password.
 3. Click **Save**

Unlock

- If you use the memory card on the device that locks it, unlocking will be done automatically and no unlocking procedures are required on the part of users.
- If you use the memory card (with a lock) on a different device, you can go to **HDD Management** to unlock the memory card manually. Select the memory card, and click **Unlock**. Enter the correct password to unlock it.
 1. Remove the LockSelect the **Lock Switch** as OFF.
 2. Enter the password in **Password Settings**.
 3. Click **Save**.



Note

- Only admin user can set the **R/W Lock**.
 - The memory card can only be read and written when it is unlocked.
 - If the device, which adds a lock to a memory card, is restored to the factory settings, you can go to **HDD Management** to unlock the memory card.
-

4. Set **Arming Schedule** and **Linkage Method**. See *Set Arming Schedule* and *Linkage Method Settings* for details.
5. Click **Save**.

5.1.2 Set FTP

You can configure the FTP server to save images which are captured by events or a timed snapshot task.

Before You Start

Get the FTP server address first.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **FTP**.
2. Configure FTP settings.

FTP Protocol

FTP and SFTP are selectable. The files uploading is encrypted by using SFTP protocol.

Server Address and Port

The FTP server address and corresponding port.

User Name and Password

The FTP user should have the permission to upload pictures.

If the FTP server supports picture uploading by anonymous users, you can check **Anonymous** to hide your device information during uploading.

Directory Structure

The saving path of snapshots in the FTP server.

Picture Filing Interval

For better picture management, you can set the picture filing interval from 1 day to 30 days. Pictures captured in the same time interval will be saved in one folder named after the beginning date and ending date of the time interval.

Picture Name

Set the naming rule for captured pictures. You can choose **Default** in the drop-down list to use the default rule, that is, IP address_channel number_capture time_event type.jpg (e.g., 10.11.37.189_01_20150917094425492_FACE_DETECTION.jpg). Or you can customize it by adding a **Custom Prefix** to the default naming rule.

3. Check **Upload Picture** to enable uploading snapshots to the FTP server.
4. Check **Enable Automatic Network Replenishment**.



Upload to FTP/Memory Card/NAS in Linkage Method and **Enable Automatic Network Replenishment** should be both enabled simultaneously.

5. Click **Test** to verify the FTP server.
6. Click **Save**.

5.1.3 Set NAS

Take network server as network disk to store the record files, captured images, etc.

Before You Start

Get the IP address of the network disk first.

Steps

1. Go to NAS setting page: **Configuration** → **Storage** → **Storage Management** → **Net HDD**.
2. Click **HDD No.**. Enter the server address and file path for the disk.

Server Address

The IP address of the network disk.

File Path

The saving path of network disk files.

Mounting Type

Select file system protocol according to the operation system.

Enter user name and password of the net HDD to guarantee the security if **SMB/CIFS** is selected.

3. Click **Test** to check whether the network disk is available.
4. Click **Save**.

5.1.4 eMMC Protection

It is to automatically stop the use of eMMC as a storage media when its health status is poor.



The eMMC protection is only supported by certain device models with an eMMC hardware.

Go to **Configuration** → **System** → **Maintenance** → **System Service** for the settings.

eMMC, short for embedded multimedia card, is an embedded non-volatile memory system. It is able to store the captured images or videos of the device.

The device monitors the eMMC health status and turns off the eMMC when its status is poor. Otherwise, using a worn-out eMMC may lead to device boot failure.

5.1.5 Set Cloud Storage

It helps to upload the captured pictures and data to the cloud. The platform requests picture directly from the cloud for picture and analysis. The function is only supported by certain models.

Steps



If cloud storage is enabled, the pictures are stored in the cloud storage server preferentially.

1. Go to **Configuration** → **Storage** → **Storage Management** → **Cloud Storage**.
2. Check **Enable Cloud Storage**.
3. Set basic parameters.

Protocol Version	The protocol version of the cloud storage server.
Server IP	The IP address of the cloud storage server. It supports IPv4 address.
Serve Port	The port of the cloud storage server. 6001 is the default port and you are not recommended to edit it.
User Name and Password	The user name and password of the cloud storage server.
Picture Storage Pool ID	The ID of the picture storage region in the cloud storage server. Make sure storage pool ID and the storage region ID are the same.

4. Click **Test** to test the configured settings.
5. Click **Save**.

5.2 Video Recording

This part introduces the operations of manual and scheduled recording, playback, and downloading recorded files.

5.2.1 Record Automatically

This function can record video automatically during configured time periods.

Before You Start

Select **Trigger Recording** in event settings for each record type except **Continuous**. See *Event and Alarm* for details.

Steps

1. Go to **Configuration** → **Storage** → **Schedule Settings** → **Record Schedule**.
2. Check **Enable**.

3. Select a record type.

Note

The record type is vary according to different models.

Continuous

The video will be recorded continuously according to the schedule.

Motion

When motion detection is enabled and trigger recording is selected as linkage method, object movement is recorded.

Alarm

When alarm input is enabled and trigger recording is selected as linkage method, the video is recorded after receiving alarm signal from external alarm input device.

Motion | Alarm

Video is recorded when motion is detected or alarm signal is received from the external alarm input device.

Motion & Alarm

Video is recorded only when motion is detected and alarm signal is received from the external alarm input device.

Event

The video is recorded when configured event is detected.

4. Set schedule for the selected record type. Refer to **Set Arming Schedule** for the setting operation.
5. Click **Advanced** to set the advanced settings.

Overwrite

Enable **Overwrite** to overwrite the video records when the storage space is full. Otherwise the camera cannot record new videos.

Pre-record

The time period you set to record before the scheduled time.

Post-record

The time period you set to stop recording after the scheduled time.

Stream Type

Select the stream type for recording.

Note

When you select the stream type with higher bitrate, the actual time of the pre-record and post-record may be less than the set value.



Recording Expiration

The recordings are deleted when they exceed the expired time. The expired time is configurable. Note that once the recordings are deleted, they can not be recovered.

6. Click **Save**.

5.2.2 Record Manually

Steps

1. Go to **Configuration** → **Local**.
2. Set the **Record File Size** and saving path to for recorded files.
3. Click **Save**.
4. Click  to start recording. Click  to stop recording.

5.2.3 Set Lite Storage

After the lite storage is enabled, the frame rate and bitrate of the video stream can be reduced to lengthen the storage time of the memory card when there is no moving object in the monitoring scenario.

Steps

1. Go to **Configuration** → **Storage** → **Storage Management** → **Lite Storage**.
2. Check **Enable** and set the level. The higher the level is, the larger the frame rate and bitrate are, and the shorter the recommended storage time is.
3. Set the storage time. The device automatically calculates the bitrate and offers the recommended storage time according to the memory card space and level. You are recommended to set the storage time to the device recommended time.

Note




- If the lite storage is enabled, unformatted memory card will be formatted automatically.
 - The displayed available space of the memory card is assigned by default according to **Percentage of Record** in **Storage** → **Storage Management** → **Quota**. You can adjust it as required.
 - Only certain device models support the function.
-

5.2.4 Playback and Download Video

You can search, playback and download the videos stored in the local storage or network storage.


Steps

1. Click **Playback**.
2. Set search condition and click **Search**.
The matched video files showed on the timing bar.

3. Click  to play the video files.
 - Click  to clip video files.
 - Click  to play video files in full screen. Press **ESC** to exit full screen.

Note

Go to **Configuration** → **Local**, click **Save clips to** to change the saving path of clipped video files.

4. Click  on the playback interface to download files.
 - 1) Set search condition and click **Search**.
 - 2) Select the video files and then click **Download**.

Note

Go to **Configuration** → **Local**, click **Save downloaded files to** to change the saving path of downloaded video files.

5.3 Capture Configuration

The device can capture the pictures manually or automatically and save them in configured saving path. You can view and download the snapshots.

5.3.1 Capture Automatically

This function can capture pictures automatically during configured time periods.

Before You Start

If event-triggered capture is required, you should configure related linkage methods in event settings. Refer to **Event and Alarm** for event settings.

Steps

1. Go to **Configuration** → **Storage** → **Schedule Settings** → **Capture** → **Capture Parameters**.
2. Set the capture type.

Timing

Capture a picture at the configured time interval.

Event-Triggered

Capture a picture when an event is triggered.

3. Set the **Format**, **Resolution**, **Quality**, **Interval**, and **Capture Number**.
4. Refer to **Set Arming Schedule** for configuring schedule time.
5. Click **Save**.

5.3.2 Capture Manually

Steps


1. Go to **Configuration** → **Local**.
2. Set the **Image Format** and saving path to for snapshots.

JPEG

The picture size of this format is comparatively small, which is better for network transmission.

BMP

The picture is compressed with good quality.

3. Click **Save**.
4. Click  near the live view or play back window to capture a picture manually.

5.3.3 Set Timing Wake

When the device is sleeping, it will wake up at the set time interval, and capture pictures and upload them.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **Power Consumption Mode**, under **Sleep Schedule**, click the time schedule to set **Sleep Capture Interval**.
2. Enter **Configuration** → **Event** → **Basic Event** → **Timing Wake**.
3. Check **Enable**.
4. Select **Capture Types**.
5. For the linkage method settings, see *Linkage Method Settings*.
6. Click **Save**.

Result

The device will wake up at the set sleep capture interval, and capture pictures and upload them.

5.3.4 View and Download Picture

You can search, view and download the pictures stored in the local storage or network storage.

Steps

1. Click **Picture**.
2. Set search condition and click **Search**.
The matched pictures showed in the file list.
3. Select the pictures then click **Download** to download them.

 **Note**

Go to **Configuration** → **Local**, click **Save snapshots when playback** to change the saving path of pictures.

Chapter 6 Event and Alarm

This part introduces the configuration of events. The device takes certain response to triggered alarm.

6.1 Basic Event

6.1.1 Set Motion Detection

It helps to detect the moving objects in the detection region and trigger the linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Motion Detection**.
2. Check **Enable Motion Detection**.
3. Optional: Highlight to display the moving object in the image in green.
 - 1) Check **Enable Dynamic Analysis for Motion**.
 - 2) Go to **Configuration** → **Local**.
 - 3) Set **Rules** to **Enable**.
4. Select **Configuration Mode**, and set rule region and rule parameters.
 - For the information about normal mode, see **Normal Mode**.
 - For the information about expert mode, see **Expert Mode**.
5. Set the arming schedule and linkage methods. For the information about arming schedule settings, see **Set Arming Schedule**. For the information about linkage methods, see **Linkage Method Settings**.
6. Click **Save**.

Expert Mode

You can configure different motion detection parameters for day and night according to the actual needs.

Steps

1. Select **Expert Mode** in **Configuration**.
2. Set parameters of expert mode.

Scheduled Image Settings

OFF

Image switch is disabled.

Auto-Switch

The system switches day/night mode automatically according to environment. It displays

colored image at day and black and white image at night.

Scheduled-Switch

The system switches day/night mode according to the schedule. It switches to day mode during the set periods and switches to night mode during the other periods.

Sensitivity

The higher the value of sensitivity is, the more sensitive the motion detection is. If scheduled image settings is enabled, the sensitivity of day and night can be set separately.

3. Select an **Area** and click **Draw Area**. Click and drag the mouse on the live image and then release the mouse to finish drawing one area.

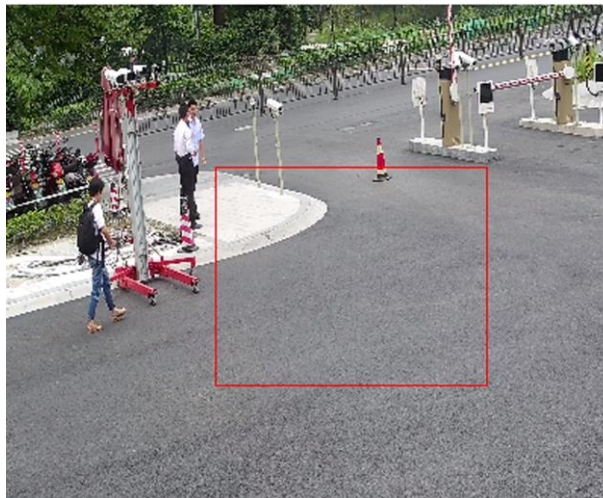


Figure 6-1 Set Rules

Stop Drawing Finish drawing one area.

Clear All Delete all the areas.

4. Click **Save**.
5. Optional: Repeat above steps to set multiple areas.

Normal Mode

You can set motion detection parameters according to the device default parameters.

Steps

1. Select normal mode in **Configuration**.
2. Set the sensitivity of normal mode. The higher the value of sensitivity is, the more sensitive the motion detection is. If the sensitivity is set to **0**, motion detection and dynamic analysis do not take effect.
3. Click **Draw Area**. Click and drag the mouse on the live video, then release the mouse to finish drawing one area.

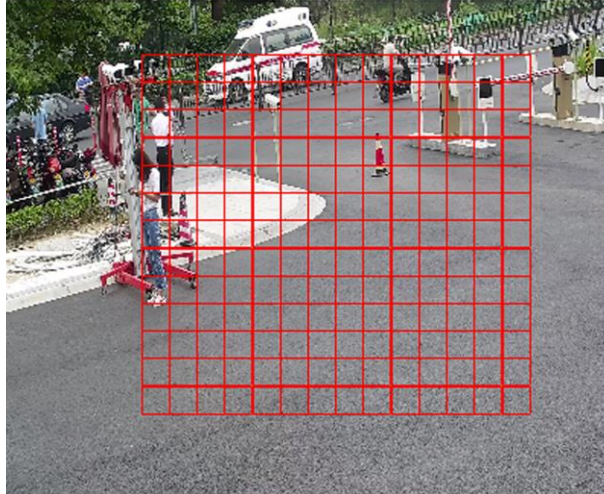


Figure 6-2 Set Rules

Stop Drawing Stop drawing one area.

Clear All Clear all the areas.

4. Optional: You can set the parameters of multiple areas by repeating the above steps.

6.1.2 Set Video Tampering Alarm

When the configured area is covered and cannot be monitored normally, the alarm is triggered and the device takes certain alarm response actions.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Video Tampering**.
2. Check **Enable**.
3. Set the **Sensitivity**. The higher the value is, the easier to detect the area covering.
4. Click **Draw Area** and drag the mouse in the live view to draw the area.

Stop Drawing Finish drawing.

Clear All Delete all the drawn areas.

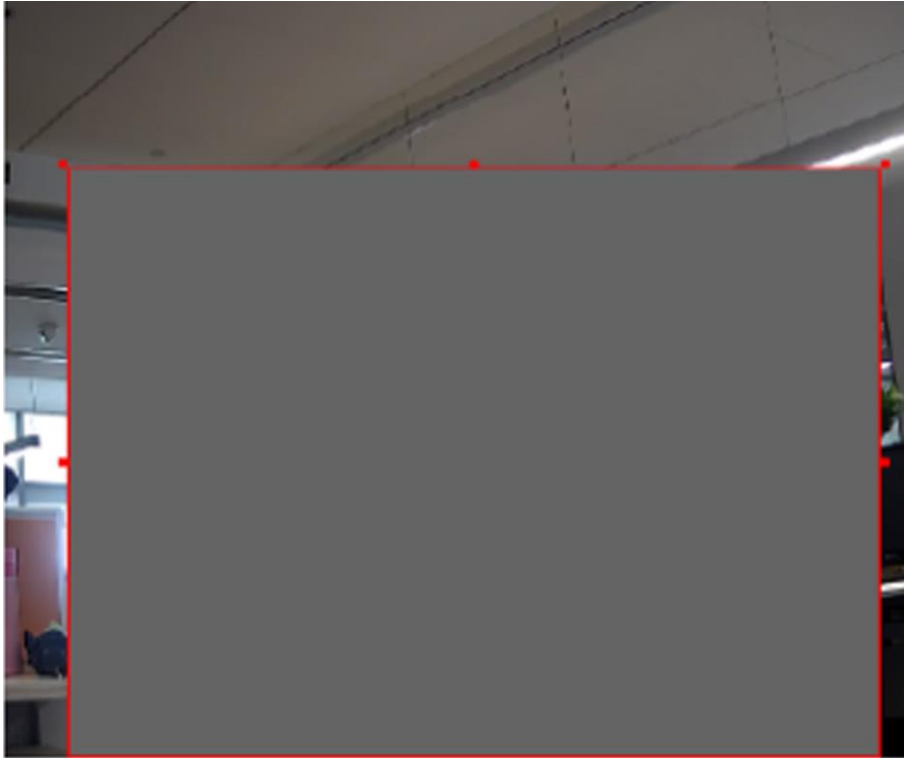


Figure 6-3 Set Video Tampering Area

5. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage method.
6. Click **Save**.

6.1.3 Set PIR Alarm

A PIR (Passive Infrared) alarm is triggered when an intruder moves within the detector's field of view. The heat energy dissipated by a person, or any other warm blooded creature such as dogs, cats, etc., can be detected.

Steps

 **Note**

Only certain models support PIR alarm.

1. Go to **Configuration** → **Advanced Configuration** → **Basic Event** → **PIR Alarm**.
2. Check **Enable PIR Alarm**.
3. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage method.
4. Click **Save**.

6.1.4 Set Exception Alarm

Exception such as network disconnection can trigger the device to take corresponding action.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Exception**.
2. Select **Exception Type**.

HDD Full The HDD storage is full.

HDD Error Error occurs in HDD.

**Network
Disconnected** The device is offline.

IP Address Conflicted The IP address of current device is same as that of other device in the network.

Illegal Login Incorrect user name or password is entered.

Voltage Instable The power supply voltage is fluctuating.

3. Refer to **Linkage Method Settings** for setting linkage method.
4. Click **Save**.

6.1.5 Set Alarm Input

Alarm signal from the external device triggers the corresponding actions of the current device.

Before You Start

Make sure the external alarm device is connected. See *Quick Start Guide* for cables connection.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Alarm Input**.
2. Check **Enable Alarm Input Handling**.
3. Select **Alarm Input NO.** and **Alarm Type** from the dropdown list. Edit the **Alarm Name**.
4. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage method.
5. Click **Copy to...** to copy the settings to other alarm input channels.
6. Click **Save**.

6.1.6 Set Video Quality Diagnosis

When the video quality of the device is abnormal and the alarm linkage is set, the alarm will be

triggered automatically.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Video Quality Diagnosis**.
2. Select **Diagnosis Type**.
3. Set the corresponding parameters.

Alarm Detection Interval

The time interval to detect the exception.

Sensitivity

The higher the value is, the more easily the exception will be detected, and the higher possibility of misinformation would be.

Alarm Delay Times

The device uploads the alarm when the alarm reaches the set number of times.

4. Check **Enable**, and the selected diagnosis type will be detected.
5. Set arming schedule. See **Set Arming Schedule**.
6. Set linkage method. See **Linkage Method Settings**.
7. Click **Save**.

Note

The function is only supported by certain models. The actual display varies with models.

6.1.7 Set Vibration Detection

It is used to detect whether the device is vibrating. The device reports an alarm and triggers linkage actions if the function is enabled.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Vibration Detection**.
2. Check **Enable**.
3. Drag the slider to set the detection sensitivity. You can also enter number to set the sensitivity.
4. Set the arming schedule. See **Set Arming Schedule**.
5. Set the linkage method. See **Linkage Method Settings**.
6. Click **Save**.

Note

The function is only supported by certain models. The actual display varies with models.

6.2 Smart Event

Note

- For certain device models, you need to enable the smart event function on **VCA Resource** page first to show the function configuration page.
 - The function varies according to different models.
-

6.2.1 Detect Audio Exception

Audio exception detection function detects the abnormal sound in the the scene, such as the sudden increase/decrease of the sound intensity, and some certain actions can be taken as response.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Audio Exception Detection**.
2. Select one or several audio exception detection types.

Audio Loss Detection

Detect sudden loss of audio track.

Sudden Increase of Sound Intensity Detection

Detect sudden increase of sound intensity. **Sensitivity** and **Sound Intensity Threshold** are configurable.

Note

- The lower the sensitivity is, the more significant the change should be to trigger the detection.
 - The sound intensity threshold refers to the sound intensity reference for the detection. It is recommended to set as the average sound intensity in the environment. The louder the environment sound, the higher the value should be. You can adjust it according to the real environment.
-

Sudden Decrease of Sound Intensity Detection

Detect sudden decrease of sound intensity. **Sensitivity** is configurable.

3. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage methods.
 4. Click **Save**.
-

Note

The function varies according to different models.

6.2.2 Set Defocus Detection

The blurred image caused by lens defocus can be detected. If it occurs, the device can take linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Defocus Detection**.
2. Check **Enable**.
3. Set **Sensitivity**. The higher the value is, the more easily the defocus image can trigger the alarm. You can adjust the value according to the actual environment.
4. For the linkage method settings, refer to **Linkage Method Settings**.
5. Click **Save**.



The function is only supported by certain models. The actual display varies with models.

6.2.3 Detect Scene Change

Scene change detection function detects the change of the scene. Some certain actions can be taken when the alarm is triggered.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Scene Change Detection**.
2. Click **Enable**.
3. Set the **Sensitivity**. The higher the value is, the more easily the change of scene can be detected. But the detection accuracy is reduced.
4. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage method.
5. Click **Save**.



The function varies according to different models.

6.2.4 Set Face Detection

It helps to detect the face in the detection region. If a face is detected, the device triggers the linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Face Detection**.
2. Check **Enable Face Detection**.
3. Optional: Highlight to display the face in the image.

- 1) Check **Enable Dynamic Analysis For Face Detection**.
- 2) Go to **Configuration** → **Local**, set **Rules** to **Enable**.
4. Set **Sensitivity**. The lower the sensitivity is, the profile of the face or unclear face is more difficult to detect.
5. Set the arming schedule and linkage methods. For the information about arming schedule settings, see **Set Arming Schedule**. For the information about linkage methods, see **Linkage Method Settings**.
6. Click **Save**.

6.2.5 Set Video Loss

This function can detect the video signal loss in time and trigger the linkage action.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Video Loss**.
2. Check **Enable**.
3. Refer to **Set Arming Schedule** for setting scheduled time. Refer to **Linkage Method Settings** for setting linkage method.
4. Click **Save**.

6.2.6 Set Intrusion Detection

It is used to detect objects entering and loitering in a pre-defined virtual region. If it occurs, the device can take linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Intrusion Detection**.
2. Check **Enable**.
3. Select a **Region**. For the detection region settings, refer to **Draw Area**.
4. Set rules.

Sensitivity Sensitivity stands for the percentage of the body part of an acceptable target that enters the pre-defined region. $\text{Sensitivity} = 100 - S1/ST \times 100$. S1 stands for the target body part that goes across the pre-defined region. ST stands for the complete target body. The higher the value of sensitivity is, the more easily the alarm can be triggered.

Threshold Threshold stands for the threshold for the time of the object loitering in the region. If the time that one object stays exceeds the threshold, the alarm is triggered. The larger the value of the threshold is, the longer the alarm triggering time is.

Detection Target Human and vehicle are available. If the detection target is not selected, all the detected targets will be reported, including the

human and vehicle.

Target Validity

If you set a higher validity, the required target features should be more obvious, and the alarm accuracy would be higher. The target with less obvious features would be missing.

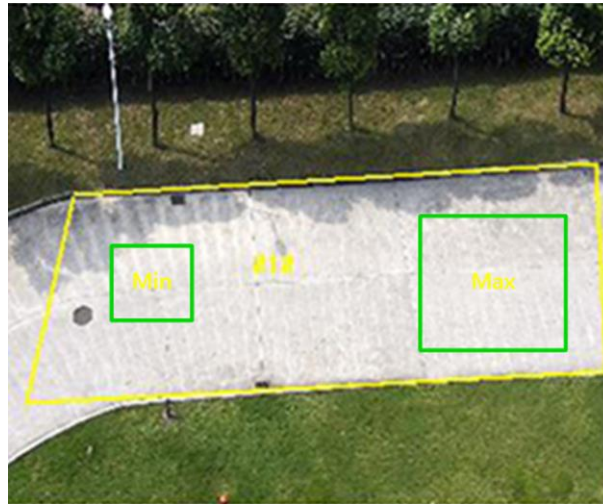


Figure 6-4 Set Rule

5. Optional: You can set the parameters of multiple areas by repeating the above steps.
6. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
7. Click **Save**.

6.2.7 Set Line Crossing Detection

It is used to detect objects crossing a pre-defined virtual line. If it occurs, the device can take linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Line Crossing Detection**.
2. Check **Enable**.
3. Select one **Line** and set the size filter. For the size filter settings, refer to **Set Size Filter**.
4. Click **Draw Area** and a line with an arrow appears in the live video. Drag the line to the location on the live video as desired.
5. Set rules.

Direction

It stands for the direction from which the object goes across the line.

A<->B: The object going across the line from both directions can be detected and alarms are triggered.

A->B: Only the object crossing the configured line from the A side to the B side can be detected.

B->A: Only the object crossing the configured line from the B side to the A side can be detected.

Sensitivity

It stands for the percentage of the body part of an acceptable target that goes across the pre-defined line. $\text{Sensitivity} = 100 - S1/ST \times 100$. S1 stands for the target body part that goes across the pre-defined line. ST stands for the complete target body. The higher the value of sensitivity is, the more easily the alarm can be triggered.

Detection Target

Human and vehicle are available. If the detection target is not selected, all the detected targets will be reported, including the human and vehicle.

Target Validity

If you set a higher validity, the required target features should be more obvious, and the alarm accuracy would be higher. The target with less obvious features would be missing.



Figure 6-5 Set Rule

6. Optional: You can set the parameters of multiple areas by repeating the above steps.
7. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
8. Click **Save**.

6.2.8 Set Region Entrance Detection

It is used to detect objects entering a pre-defined virtual region from the outside place. If it occurs, the device can take linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Region Entrance Detection**.
2. Check **Enable**.

3. Select one **Region**. For the region settings, refer to **Draw Area**.
4. Set the detection target, sensitivity and the target validity.

Sensitivity It stands for the percentage of the body part of an acceptable target that goes across the pre-defined region. $\text{Sensitivity} = 100 - S1/ST \times 100$. S1 stands for the target body part that goes across the pre-defined region. ST stands for the complete target body. The higher the value of sensitivity is, the more easily the alarm can be triggered.

Detection Target Human and vehicle are available. If the detection target is not selected, all the detected targets will be reported, including the human and vehicle.

Target Validity If you set a higher validity, the required target features should be more obvious, and the alarm accuracy would be higher. The target with less obvious features would be missing.

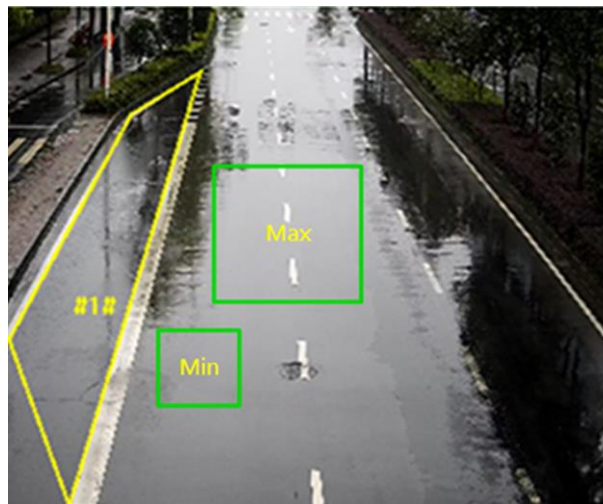


Figure 6-6 Set Rule

5. Optional: You can set the parameters of multiple areas by repeating the above steps.
6. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
7. Click **Save**.

6.2.9 Set Region Exiting Detection

It is used to detect objects exiting from a pre-defined virtual region. If it occurs, the device can take linkage actions.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Region Exiting Detection**
2. Check **Enable**.

3. Select one **Region**. For the detection region settings, refer to **Draw Area**.
4. Set the detection target, sensitivity and the target validity.

Sensitivity It stands for the percentage of the body part of an acceptable target that goes across the pre-defined region. $\text{Sensitivity} = 100 - S1/ST \times 100$. S1 stands for the target body part that goes across the pre-defined region. ST stands for the complete target body. The higher the value of sensitivity is, the more easily the alarm can be triggered.

Detection Target Human and vehicle are available. If the detection target is not selected, all the detected targets will be reported, including the human and vehicle.

Target Validity If you set a higher validity, the required target features should be more obvious, and the alarm accuracy would be higher. The target with less obvious features would be missing.

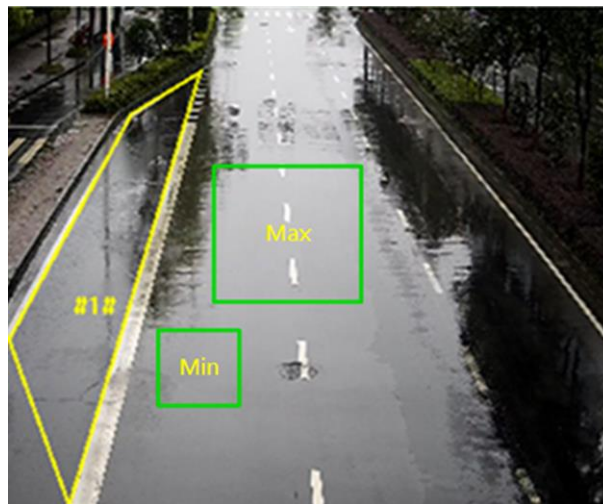


Figure 6-7 Set Rule

5. Optional: You can set the parameters of multiple areas by repeating the above steps.
6. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
7. Click **Save**.

6.2.10 Set Unattended Baggage Detection

It is used to detect the objects left over in the pre-defined region. Linkage methods can be triggered after the object is left and stays in the region for a set time period.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Unattended Baggage Detection**.
2. Check **Enable**.

3. Select one **Region**. For the detection region settings, refer to **Draw Area**.
4. Set rules.

Sensitivity

Sensitivity stands for the percentage of the body part of an acceptable target that enters the pre-defined region. $\text{Sensitivity} = 100 - S1/ST \times 100$. S1 stands for the target body part that goes across the pre-defined region. ST stands for the complete target body. The higher the value of sensitivity is, the more easily the alarm can be triggered.

Threshold

It stands for the time of the objects left in the region. Alarm is triggered after the object is left and stays in the region for the set time period.

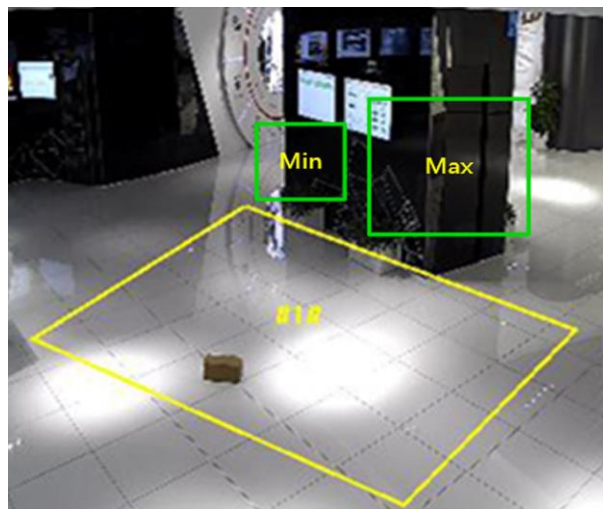


Figure 6-8 Set Rule

5. Optional: You can set the parameters of multiple areas by repeating the above steps.
6. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
7. Click **Save**.

6.2.11 Set Object Removal Detection

It detects whether the objects are removed from the pre-defined detection region, such as the exhibits on display. If it occurs, the device can take linkage actions and the staff can take measures to reduce property loss.

Steps

1. Go to **Configuration** → **Event** → **Smart Event** → **Object Removal Detection**.
2. Check **Enable**.
3. Select a **Region**. For the region settings, see **Draw Area**.
4. Set the rule.

Sensitivity

Range [1-100]. It stands for the percentage of the body part of an acceptable target that leaves the pre-defined region.

$$\text{Sensitivity} = 100 - S1/ST*100$$

S1 stands for the target body part that leaves the pre-defined region.

ST stands for the complete target body.

Example: If you set the value as 60, a target is possible to be counted as a removed object only when 40 percent body part of the target leaves the region.

Threshold

Range [5-100s], the threshold for the time of the objects removed from the region. If you set the value as 10, alarm is triggered after the object disappears from the region for 10s.



Figure 6-9 Set Rule

5. Optional: Repeat the above steps to set more regions.
6. For the arming schedule settings, see **Set Arming Schedule**. For the linkage method settings, see **Linkage Method Settings**.
7. Click **Save**.

Note

The function is only supported by certain models. The actual display varies with the models.

6.2.12 Draw Area

This section introduces the configuration of area.

Steps

1. Click **Draw Area**.

2. Click on the live view to draw the boundaries of the detection region, and right click to complete drawing.
3. Click **Save**.

 **Note**

Click **Clear All** to clear all pre-defined areas.

6.2.13 Set Size Filter

This part introduces the setting of size filter. Only the target whose size is between the minimum value and maximum value is detected and triggers alarm.

Steps

1. Click **Max. Size**, and drag the mouse in the live view to draw the maximum target size.
2. Click **Min. Size**, and drag the mouse in the live view to draw the minimum target size.
3. Click **Save**.

Chapter 7 Network Settings

7.1 TCP/IP

TCP/IP settings must be properly configured before you operate the device over network. IPv4 and IPv6 are both supported. Both versions can be configured simultaneously without conflicting to each other.

Go to **Configuration** → **Network** → **Basic Settings** → **TCP/IP** for parameter settings.

NIC Type

Select a NIC (Network Interface Card) type according to your network condition.

IPv4

Two IPv4 modes are available.

DHCP

The device automatically gets the IPv4 parameters from the network if you check **DHCP**. The device IP address is changed after enabling the function. You can use SADP to get the device IP address.

Note

The network that the device is connected to should support DHCP (Dynamic Host Configuration Protocol).

Manual

You can set the device IPv4 parameters manually. Input **IPv4 Address**, **IPv4 Subnet Mask**, and **IPv4 Default Gateway**, and click **Test** to see if the IP address is available.

IPv6

Three IPv6 modes are available.

Route Advertisement

The IPv6 address is generated by combining the route advertisement and the device Mac address.

Note

Route advertisement mode requires the support from the router that the device is connected to.

DHCP

The IPv6 address is assigned by the server, router, or gateway.

Manual

Input **IPv6 Address**, **IPv6 Subnet**, **IPv6 Default Gateway**. Consult the network administrator for required information.

MTU

It stands for maximum transmission unit. It is the size of the largest protocol data unit that can be communicated in a single network layer transaction.

The valid value range of MTU is 1280 to 1500.

DNS

It stands for domain name server. It is required if you need to visit the device with domain name. And it is also required for some applications (e.g., sending email). Set **Preferred DNS Server** and **Alternate DNS server** properly if needed.

Dynamic Domain Name

Check **Enable Dynamic Domain Name** and input **Register Domain Name**. The device is registered under the register domain name for easier management within the local area network.



DHCP should be enabled for the dynamic domain name to take effect.

7.1.1 Multicast

Multicast is a group communication where data transmission is addressed to a group of destination devices simultaneously. After setting multicast, you can send the source data efficiently to multiple receivers.

Go to **Configuration** → **Network** → **Basic Settings** → **Multicast** for the multicast settings.

IP Address

It stands for the address of multicast host.

Stream Type

The stream type of the multicast source.

Video Port

The video port of the selected stream.

Audio Port

The audio port of the selected stream.

FEC Port

The FEC port of the selected stream.

FEC Ratio

The ratio of forward error correction.

7.1.2 Multicast Discovery

Check the **Enable Multicast Discovery**, and then the online network camera can be automatically detected by client software via private multicast protocol in the LAN.

7.2 SNMP

You can set the SNMP (Simple Network Management Protocol) to get device information in network management.

Before You Start

Before setting the SNMP, you should download the SNMP software and manage to receive the device information via SNMP port.

Steps

1. Go to the settings page: **Configuration** → **Network** → **Advanced Settings** → **SNMP**.
2. Check **Enable SNMPv1**, **Enable SNMP v2c** or **Enable SNMPv3**.

Note

The SNMP version you select should be the same as that of the SNMP software. And you also need to use the different version according to the security level required. SNMP v1 is not secure and SNMP v2 requires password for access. And SNMP v3 provides encryption and if you use the third version, HTTPS protocol must be enabled.

3. Configure the SNMP settings.
4. Click **Save**.

7.3 Set SRTP

The Secure Real-time Transport Protocol (SRTP) is a Real-time Transport Protocol (RTP) internet protocol, intended to provide encryption, message authentication and integrity, and replay attack protection to the RTP data in both unicast and multicast applications.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **SRTP**.
2. Select **Server Certificate**.
3. Select **Encrypted Algorithm**.
4. Click **Save**.

Note

- Only certain device models support this function.
- If the function is abnormal, check if the selected certificate is abnormal in certificate management.

7.4 Port Mapping

By setting port mapping, you can access devices through the specified port.

Before You Start

When the ports in the device are the same as those of other devices in the network, refer to **Port** to modify the device ports.

Steps

1. Go to **Configuration** → **Network** → **Basic Settings** → **NAT**.
2. Select the port mapping mode.

Auto Port Mapping Refer to *Set Auto Port Mapping* for detailed information.

Manual Port Mapping Refer to *Set Manual Port Mapping* for detailed information.

3. Click **Save**.

7.4.1 Set Auto Port Mapping

Steps

1. Check **Enable UPnP™**, and choose a friendly name for the camera, or you can use the default name.
2. Select the port mapping mode to **Auto**.
3. Click **Save**.



UPnP™ function on the router should be enabled at the same time.

7.4.2 Set Manual Port Mapping

Steps

1. Check **Enable UPnP™**, and choose a friendly name for the device, or you can use the default name.
2. Select the port mapping mode to **Manual**, and set the external port to be the same as the internal port.
3. Click **Save**.

What to do next

Go to the router port mapping settings interface and set the port number and IP address to be the

same as those on the device. For more information, refer to the router user manual.

7.4.3 Set Port Mapping on Router

The following settings are for a certain router. The settings vary depending on different models of routers.

Steps

1. Select the **WAN Connection Type**.
2. Set the **IP Address**, **Subnet Mask** and other network parameters of the router.
3. Go to **Forwarding** → **Virtual Servers**, and input the **Port Number** and **IP Address**.
4. Click **Save**.

Example

When the cameras are connected to the same router, you can configure the ports of a camera as 80, 8000, and 554 with IP address 192.168.1.23, and the ports of another camera as 81, 8001, 555, 8201 with IP 192.168.1.24.

ID	Service Port	IP Address	Protocol	Enable
1	80	192.168.10.23	ALL	<input checked="" type="checkbox"/>
2	8000	192.168.10.23	ALL	<input checked="" type="checkbox"/>
3	554	192.168.10.23	ALL	<input checked="" type="checkbox"/>
4	8200	192.168.10.23	ALL	<input checked="" type="checkbox"/>
5	81	192.168.10.24	ALL	<input checked="" type="checkbox"/>
6	8001	192.168.10.24	ALL	<input checked="" type="checkbox"/>
7	555	192.168.10.24	ALL	<input checked="" type="checkbox"/>
8	8201	192.168.10.24	ALL	<input checked="" type="checkbox"/>

Common Service Port: ID

Figure 7-1 Port Mapping on Router

Note

The port of the network camera cannot conflict with other ports. For example, some web management port of the router is 80. Change the camera port if it is the same as the management port.

7.5 Port

The device port can be modified when the device cannot access the network due to port conflicts.

Caution

Do not modify the default port parameters at will, otherwise the device may be inaccessible.

Go to **Configuration** → **Network** → **Basic Settings** → **Port** for port settings.

HTTP Port

It refers to the port through which the browser accesses the device. For example, when the **HTTP Port** is modified to 81, you need to enter ***http://192.168.1.64:81*** in the browser for login.

HTTPS Port

It refers to the port through which the browser accesses the device with certificate. Certificate verification is required to ensure the secure access.

RTSP Port

It refers to the port of real-time streaming protocol.

SRTP Port

It refers to the port of secure real-time transport protocol.

Server Port

It refers to the port through which the client adds the device.

Enhanced SDK Service Port

It refers to the port through which the client adds the device. Certificate verification is required to ensure the secure access.

WebSocket Port

TCP-based full-duplex communication protocol port for plug-in free preview.

WebSockets Port

TCP-based full-duplex communication protocol port for plug-in free preview. Certificate verification is required to ensure the secure access.

Note

- Enhanced SDK Service Port, WebSocket Port, and WebSockets Port are only supported by certain models.
 - For device models that support that function, go to **Configuration** → **Network** → **Advanced Settings** → **Network Service** to enable it.
-

7.6 Access to Device via Domain Name

You can use the Dynamic DNS (DDNS) for network access. The dynamic IP address of the device can be mapped to a domain name resolution server to realize the network access via domain name.

Before You Start

Registration on the DDNS server is required before configuring the DDNS settings of the device.

Steps

1. Refer to **TCP/IP** to set DNS parameters.
2. Go to the DDNS settings page: **Configuration** → **Network** → **Basic Settings** → **DDNS**.
3. Check **Enable DDNS** and select **DDNS type**.

DynDNS

Dynamic DNS server is used for domain name resolution.

NO-IP

NO-IP server is used for domain name resolution.

4. Input the domain name information, and click **Save**.
5. Check the device ports and complete port mapping. Refer to **Port** to check the device port , and refer to **Port Mapping** for port mapping settings.
6. Access the device.

By Browsers Enter the domain name in the browser address bar to access the device.

By Client Software Add domain name to the client software. Refer to the client manual for specific adding methods.

7.7 Access to Device via PPPoE Dial Up Connection

This device supports the PPPoE auto dial-up function. The device gets a public IP address by ADSL dial-up after the device is connected to a modem. You need to configure the PPPoE parameters of the device.

Steps

1. Go to **Configuration** → **Network** → **Basic Settings** → **PPPoE**.
2. Check **Enable PPPoE**.
3. Set the PPPoE parameters.

Dynamic IP

After successful dial-up, the dynamic IP address of the WAN is displayed.

User Name

User name for dial-up network access.

Password

Password for dial-up network access.

Confirm

Input your dial-up password again.

4. Click **Save**.
5. Access the device.

By Browsers Enter the WAN dynamic IP address in the browser address bar to access the device.

By Client Software Add the WAN dynamic IP address to the client software. Refer to the client manual for details.

Note

The obtained IP address is dynamically assigned via PPPoE, so the IP address always changes after rebooting the camera. To solve the inconvenience of the dynamic IP, you need to get a domain name from the DDNS provider (e.g. DynDns.com). Refer to **Access to Device via Domain Name** for detail information.

7.8 Wireless Dial

Data of audio, video and image can be transferred via 3G/4G wireless network.

Note

The function is only supported by certain device models.

7.8.1 Set Wireless Dial

The built-in wireless module offers dial-up access to the Internet for the device.

Before You Start

Get a SIM card, and activate 3G/4G services. Insert the SIM card to the corresponding slot.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Wireless Dial**.
2. Check to enable the function.
3. Click **Dial Parameters** to configure and save the parameters.
4. Click **Dial Plan**. See **Set Arming Schedule** for detailed information.
5. Optional: Set **Allowlist**. See **Set Allowlist** for detailed information.
6. Click **Dial Status**.

- | | |
|-------------------------|--|
| Click Refresh | Refresh the dial status. |
| Click Disconnect | Disconnect the 3G/4G wireless network. |

When the **Dial Status** turns to **Connected**, it means a successful dial.

7. Access the device via the **IP Address** of the computer in the network.
 - Input the IP address in the browser to access the device.
 - Add the device in client application. Select **IP/Domain**, and input IP address and other parameters to access the device.

7.8.2 Set Allowlist

Add the mobile phone number of administrator to the allowlist in order to receive alarm message from the device.

Steps

1. Go to allowlist settings page: **Configuration** → **Advanced Configuration** → **Wireless Dial** → **Allowlist**.
2. Check **Enable SMS Alarm**.
3. Click **+** in the allowlist.
 - 1) Input the mobile phone number to receive alarm message.
 - 2) Check **Reboot via SMS**.
 - 3) Select the certain events, and the mobile phone can receive the alarm message when the event happens.
 - 4) Click **Save**.
 - 5) Optional: Repeat the steps above to set multiple recipients.



Modify the allowlist parameters.



Delete the allowlist that already set.

- | | |
|----------------------|--|
| Send Test SMS | Send a message to the mobile phone for test. |
|----------------------|--|

4. Click **Save**.

7.9 Wi-Fi

Connect the device to wireless network by setting Wi-Fi parameters.

Note

This function is only supported by certain device models.

7.9.1 Connect Device to Wi-Fi

Before You Start

Refer to the user manual of wireless router or AP to set SSID, key, and other parameters.

Steps

1. Go to TCP/IP settings page: **Configuration** → **Network** → **Basic Configuration** → **TCP/IP**.
2. Select **Wlan** to set the parameters. Refer to **TCP/IP** for detailed configuration.



For stable use of Wi-Fi, it is not recommended to use DHCP.

3. Go to Wi-Fi settings page: **Configuration** → **Network** → **Advanced Configuration** → **Wi-Fi**.
4. Set and save the parameters.
 - 1) Click **Search**.
 - 2) Select a **SSID**, which should be the same as that of wireless router or AP.
The parameters of the network is automatically shown in **Wi-Fi**.
 - 3) Select the **Network Mode** as **Manage**.
 - 4) Input the key to connect the wireless network. The key should be that of the wireless network connection you set on the router.

What to do next

Go to TCP/IP settings page: **Configuration** → **Network** → **Basic Configuration** → **TCP/IP**, and click **Wlan** to check the **IPv4 Address** and log in the device.

7.10 Set Network Service

You can control the ON/OFF status of certain protocol as desired.

Steps



This function varies according to different models.

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Network Service**.
2. Set network service.

WebSocket & WebSockets

WebSocket or WebSockets protocol should be enabled if you use Google Chrome 57 and its above version or Mozilla Firefox 52 and its above version to visit the device. Otherwise, live view, image capture, digital zoom, etc. cannot be used.

If the device uses HTTP, enable WebSocket.

If the device uses HTTPS, enable WebSockets.

When you use WebSockets, select the **Server Certificate**.

Note

Complete certificate management before selecting server certificate. Refer to ***Certificate Management*** for detailed information.

SDK Service & Enhanced SDK Service

Check **Enable SDK Service** to add the device to the client software with SDK protocol.
Check **Enable Enhanced SDK Service** to add the device to the client software with SDK over TLS protocol.

When you use Enhanced SDK Service, select the **Server Certificate**.

Note

- Complete certificate management before selecting server certificate. Refer to ***Certificate Management*** for detailed information.
 - When set up connection between the device and the client software, it is recommended to use Enhanced SDK Service and set the communication in Arming Mode to encrypt the data transmission. See the user manual of the client software for the arming mode settings.
-

TLS (Transport Layer Security)

The device offers TLS1.1 and TLS1.2. Enable one or more protocol versions according to your need.

Bonjour

Uncheck to disable the protocol.

3. Click **Save**.

7.11 Set Open Network Video Interface

If you need to access the device through Open Network Video Interface protocol, you can configure the user settings to enhance the network security.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Integration Protocol**.
2. Check **Enable Open Network Video Interface**.
3. Click **Add** to configure the Open Network Video Interface user.

Delete Delete the selected Open Network Video Interface user.

Modify Modify the selected Open Network Video Interface user.

4. Click **Save**.
5. Optional: Repeat the steps above to add more Open Network Video Interface users.

7.12 Set ISUP

When the device is registered on ISUP platform (formerly called Ehome), you can visit and manage the device, transmit data, and forward alarm information over public network.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Platform Access**.
2. Select **ISUP** as the platform access mode.
3. Select **Enable**.
4. Select a protocol version and input related parameters.
5. Click **Save**.

Register status turns to **Online** when the function is correctly set.

7.13 Set Alarm Server

The device can send alarms to destination IP address or host name through HTTP, HTTPS, or ISUP protocol. The destination IP address or host name should support HTTP, HTTPS, or ISUP data transmission.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Alarm Server**.
2. Enter **Destination IP or Host Name**, **URL**, and **Port**.
3. Select **Protocol**.



HTTP, HTTPS, and ISUP are selectable. It is recommended to use HTTPS, as it encrypts the data transmission during communication.

4. Click **Test** to check if the IP or host is available.
5. Click **Save**.

7.14 Access Camera via Hik-Connect

Hik-Connect is an application for mobile devices. Using the App, you can view live image, receive alarm notification and so on.

Before You Start

Connect the camera to network with network cables.

Steps

1. Get and install Hik-Connect application by the following ways.
Visit <https://appstore.hikvision.com> to download the application according to your mobile phone system. Visit the official site of our company. Then go to **Support** → **Tools** → **Hikvision App**

Store. Scan the QR code below to download the application.



Note

If errors like "Unknown app" occur during the installation, solve the problem in two ways. Visit <https://appstore.hikvision.com/static/help/index.html> to refer to the troubleshooting. Visit <https://appstore.hikvision.com/>, and click **Installation Help** at the upper right corner of the interface to refer to the troubleshooting.

2. Start the application and register for a Hik-Connect user account.
3. Log in after registration.
4. In the app, tap "+" on the upper-right corner and then scan the QR code of the camera to add the camera. You can find the QR code on the camera or on the cover of the Quick Start Guide of the camera in the package.
5. Follow the prompts to set the network connection and add the camera to your Hik-Connect account.

For detailed information, refer to the user manual of the Hik-Connect app.

7.14.1 Enable Hik-Connect Service on Camera

Hik-Connect service should be enabled on your camera before using the service. You can enable the service through SADP software or Web browser.

Enable Hik-Connect Service via Web Browser

Follow the following steps to enable Hik-Connect Service via Web Browser.

Before You Start

You need to activate the camera before enabling the service.

Steps

1. Access the camera via web browser.
 2. Enter platform access configuration interface. **Configuration** → **Network** → **Advanced Settings** → **Platform Access**
 3. Select Hik-Connect as the **Platform Access Mode**.
 4. Check **Enable**.
 5. Click and read "Terms of Service" and "Privacy Policy" in pop-up window.
 6. Create a verification code or change the old verification code for the camera.
-

Note

The verification code is required when you add the camera to Hik-Connect service.

7. Save the settings.

Enable Hik-Connect Service via SADP Software

This part introduce how to enable Hik-Connect service via SADP software of an activated camera.

Steps

1. Run SADP software.
 2. Select a camera and enter **Modify Network Parameters** page.
 3. Check **Enable Hik-Connect**.
 4. Create a verification code or change the old verification code.
-

Note

The verification code is required when you add the camera to Hik-Connect service.

5. Click and read "Terms of Service" and "Privacy Policy".
6. Confirm the settings.

7.14.2 Set Up Hik-Connect

Steps

1. Get and install Hik-Connect application by the following ways.

Visit <https://appstore.hikvision.com> to download the application according to your mobile phone system. Visit the official site of our company. Then go to **Support** → **Tools** → **Hikvision App Store**. Scan the QR code below to download the application.



Note

If errors like "Unknown app" occur during the installation, solve the problem in two ways. Visit <https://appstore.hikvision.com/static/help/index.html> to refer to the troubleshooting. Visit <https://appstore.hikvision.com/>, and click **Installation Help** at the upper right corner of the interface to refer to the troubleshooting.

2. Start the application and register for a Hik-Connect user account.
3. Log in after registration.

7.14.3 Add Camera to Hik-Connect

Steps

1. Connect your mobile device to a Wi-Fi.
2. Log into the Hik-Connect app.
3. In the home page, tap "+" on the upper-right corner to add a camera.
4. Scan the QR code on camera body or on the *Quick Start Guide* cover.

Note

If the QR code is missing or too blur to be recognized, you can also add the camera by inputting the camera's serial number.

5. Input the verification code of your camera.

Note

- The required verification code is the code you create or change when you enable Hik-Connect service on the camera.
 - If you forget the verification code, you can check the current verification code on **Platform Access** configuration page via web browser.
-

6. Tap **Connect to a Network** button in the popup interface.
7. Choose **Wired Connection** or **Wireless Connection** according to your camera function.

Wireless Connection Input the Wi-Fi password that your mobile phone has connected to, and tap **Next** to start the Wi-Fi connection process. (Locate the camera within 3 meters from the router when setting up the Wi-Fi.)

Wired Connection Connect the camera to the router with a network cable and tap **Connected** in the result interface.

Note

The router should be the same one which your mobile phone has connected to.

8. Tap **Add** in the next interface to finish adding.

For detailed information, refer to the user manual of the Hik-Connect app.

Chapter 8 Arming Schedule and Alarm Linkage

Arming schedule is a customized time period in which the device performs certain tasks. Alarm linkage is the response to the detected certain incident or target during the scheduled time.

8.1 Set Arming Schedule

Set the valid time of the device tasks.

Steps

1. Click **Arming Schedule**.
2. Drag the time bar to draw desired valid time.



Up to 8 periods can be configured for one day.

3. Adjust the time period.
 - Click on the selected time period, and enter the desired value. Click **Save**.
 - Click on the selected time period. Drag the both ends to adjust the time period.
 - Click on the selected time period, and drag it on the time bar.
4. Optional: Click **Copy to...** to copy the same settings to other days.
5. Click **Save**.

8.2 Linkage Method Settings

You can enable the linkage functions when an event or alarm occurs.

8.2.1 Trigger Alarm Output

If the device has been connected to an alarm output device, and the alarm output No. has been configured, the device sends alarm information to the connected alarm output device when an alarm is triggered.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Alarm Output**.
2. Set alarm output parameters.

Automatic Alarm For the information about the configuration, see **Automatic Alarm**.

Manual Alarm For the information about the configuration, see **Manual Alarm**.

3. Click **Save**.

Manual Alarm

You can trigger an alarm output manually.

Steps

1. Set the manual alarm parameters.

Alarm Output No.

Select the alarm output No. according to the alarm interface connected to the external alarm device.

Alarm Name

Custom a name for the alarm output.

Delay

Select **Manual**.

2. Click **Manual Alarm** to enable manual alarm output.
3. Optional: Click **Clear Alarm** to disable manual alarm output.

Automatic Alarm

Set the automatic alarm parameters, then the device triggers an alarm output automatically in the set arming schedule.

Steps

1. Set automatic alarm parameters.

Alarm Output No.

Select the alarm output No. according to the alarm interface connected to the external alarm device.

Alarm Name

Custom a name for the alarm output.

Delay

It refers to the time duration that the alarm output remains after an alarm occurs.

2. Set the alarming schedule. For the information about the settings, see **Set Arming Schedule**.
3. Click **Copy to...** to copy the parameters to other alarm output channels.
4. Click **Save**.

8.2.2 FTP/NAS/Memory Card Uploading

If you have enabled and configured the FTP/NAS/memory card uploading, the device sends the alarm information to the FTP server, network attached storage and memory card when an alarm is triggered.

Refer to **Set FTP** to set the FTP server.

Refer to **Set NAS** for NAS configuration.

Refer to **Set New or Unencrypted Memory Card** for memory card storage configuration.

8.2.3 Send Email

Check **Send Email**, and the device sends an email to the designated addresses with alarm information when an alarm event is detected.

For email settings, refer to **Set Email**.

Set Email

When the email is configured and **Send Email** is enabled as a linkage method, the device sends an email notification to all designated receivers if an alarm event is detected.

Before You Start

Set the DNS server before using the Email function. Go to **Configuration** → **Network** → **Basic Settings** → **TCP/IP** for DNS settings.

Steps

1. Go to email settings page: **Configuration** → **Network** → **Advanced Settings** → **Email**.
2. Set email parameters.
 - 1) Input the sender's email information, including the **Sender's Address**, **SMTP Server**, and **SMTP Port**.
 - 2) Optional: If your email server requires authentication, check **Authentication** and input your user name and password to log in to the server.
 - 3) Set the **E-mail Encryption**.
 - When you select **SSL** or **TLS**, and disable **STARTTLS**, emails are sent after encrypted by SSL or TLS. The SMTP port should be set as 465.
 - When you select **SSL** or **TLS** and **Enable STARTTLS**, emails are sent after encrypted by **STARTTLS**, and the SMTP port should be set as 25.

Note

If you want to use **STARTTLS**, make sure that the protocol is supported by your email server. If you check the **Enable STARTTLS** while the protocol is not supported by your email sever, your email is sent with no encryption.

- 4) Optional: If you want to receive notification with alarm pictures, check **Attached Image**. The notification email has 3 attached alarm pictures about the event with configurable image capturing interval.
 - 5) Input the receiver's information, including the receiver's name and address.
 - 6) Click **Test** to see if the function is well configured.
3. Click **Save**.

8.2.4 Notify Surveillance Center

Check **Notify Surveillance Center**, the alarm information is uploaded to the surveillance center when an alarm event is detected.

8.2.5 Trigger Recording

Check **Trigger Recording**, and the device records the video about the detected alarm event. For recording settings, refer to **Video Recording and Picture Capture**

8.2.6 Flashing Light

After enabling **Flashing Light** and setting the **Flashing Light Alarm Output**, the light flashes when an alarm event is detected.

Set Flashing Alarm Light Output

When events occur, the flashing light on the device can be triggered as an alarm.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Flashing Alarm Light Output**.
2. Set **Flashing Duration**, **Flashing Frequency** and **Brightness**.

Flashing Duration

The time that the flashing lasts when one alarm happens.

Flashing Frequency

The rate at which the light flashes. High frequency, medium frequency, low frequency, and normally on are selectable.

Brightness

The brightness of the light.

3. Set the arming schedule. See **Set Arming Schedule** for details.
4. Click **Save**.

Note

Only certain device models support the function.

8.2.7 Audible Warning

After enabling **Audible Warning** and setting **Audible Alarm Output**, the built-in speaker of the device or connected external speaker plays warning sounds when an alarm happens. For audible alarm output settings, refer to **Set Audible Alarm Output**.

Note

The function is only supported by certain camera models.

Set Audible Alarm Output

When the device detects targets in the detection area, audible alarm can be triggered as a warning.

Steps

1. Go to **Configuration** → **Event** → **Basic Event** → **Audible Alarm Output**.
 2. Select **Sound Type** and set related parameters.
 - Select **Prompt** and set the alarm times you need.
 - Select **Warning** and its contents. Set the alarm times you need.
 - Select **Custom Audio**. You can select a custom audio file from the drop-down list. If no file is available, you can click **Add** to upload an audio file that meets the requirement. Up to three audio files can be uploaded.
 3. Optional: Click **Test** to play the selected audio file on the device.
 4. Set arming schedule for audible alarm. See **Set Arming Schedule** for details.
 5. Click **Save**.
-

Note

The function is only supported by certain device models.

Chapter 9 System and Security

It introduces system maintenance, system settings and security management, and explains how to configure relevant parameters.

9.1 View Device Information

You can view device information, such as Device No., Model, Serial No. and Firmware Version. Enter **Configuration** → **System** → **System Settings** → **Basic Information** to view the device information.

9.2 Search and Manage Log

Log helps locate and troubleshoot problems.

Steps

1. Go to **Configuration** → **System** → **Maintenance** → **Log**.
2. Set search conditions **Major Type**, **Minor Type**, **Start Time**, and **End Time**.
3. Click **Search**.
The matched log files will be displayed on the log list.
4. Optional: Click **Export** to save the log files in your computer.

9.3 Simultaneous Login

The administrator can set the maximum number of users logging into the system through web browser simultaneously.

Go to **Configuration** → **System** → **User Management**, click **General** and set **Simultaneous Login**.

9.4 Import and Export Configuration File

It helps speed up batch configuration on other devices with the same parameters.

Enter **Configuration** → **System** → **Maintenance** → **Upgrade & Maintenance**. Choose device parameters that need to be imported or exported and follow the instructions on the interface to import or export configuration file.

9.5 Export Diagnose Information

Diagnose information includes running log, system information, hardware information.

Go to **Configuration** → **System** → **Maintenance** → **Upgrade & Maintenance**. Check desired

diagnose information and click **Diagnose Information** to export corresponding diagnose information of the device.

9.6 Reboot

You can reboot the device via browser.

Go to **Configuration** → **System** → **Maintenance** → **Upgrade & Maintenance**, and click **Reboot**.

9.7 Restore and Default

Restore and Default helps restore the device parameters to the default settings.

Steps

1. Go to **Configuration** → **System** → **Maintenance** → **Upgrade & Maintenance**.
2. Click **Restore** or **Default** according to your needs.

Restore	Reset device parameters, except user information, IP parameters and video format to the default settings.
----------------	---

Default	Reset all the parameters to the factory default.
----------------	--

Note

Be careful when using this function. After resetting to the factory default, all the parameters are reset to the default settings.

9.8 Upgrade

Before You Start

You need to obtain the correct upgrade package.

Caution

DO NOT disconnect power during the process, and the device reboots automatically after upgrade.

Steps

1. Go to **Configuration** → **System** → **Maintenance** → **Upgrade & Maintenance**.
2. Choose one method to upgrade.

Firmware	Locate the exact path of the upgrade file.
-----------------	--

Firmware Directory Locate the directory which the upgrade file belongs to.

3. Click **Browse** to select the upgrade file.
4. Click **Upgrade**.

9.9 View Open Source Software License

Go to **Configuration** → **System** → **System Settings** → **About Device**, and click **View Licenses**.

9.10 Wiegand



Note

This function is only supported by certain camera models.

Check **Enable** and select the protocol. The default protocol is SHA-1 26bit.

If enabled, the recognized license plate number will be output via the selected Wiegand protocol.

9.11 Metadata

Metadata is the raw data that the camera collects before algorithm processing. It provide the option to users to explore various data usages.

Go to **Configuration** → **System** → **Metadata Settings** to enable metadata uploading of the desired function.

Smart Event

The metadata of the smart event includes the target ID, target coordinate, time, etc.

9.12 Time and Date

You can configure time and date of the device by configuring time zone, time synchronization and Daylight Saving Time (DST).

9.12.1 Synchronize Time Manually

Steps

1. Go to **Configuration** → **System** → **System Settings** → **Time Settings**.
2. Select **Time Zone**.
3. Click **Manual Time Sync..**
4. Choose one time synchronization method.
 - Select **Set Time**, and manually input or select date and time from the pop-up calendar.

Check **Sync. with computer time** to synchronize the time of the device with that of the local PC.
5. Click **Save**.

9.12.2 Set NTP Server

You can use NTP server when accurate and reliable time source is required.

Before You Start

Set up a NTP server or obtain NTP server information.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **Time Settings**.
2. Select **Time Zone**.
3. Click **NTP**.
4. Set **Server Address**, **NTP Port** and **Interval**.



Server Address is NTP server IP address.

5. Click **Test** to test server connection.
6. Click **Save**.

9.12.3 Synchronize Time by Satellite



This function varies depending on different devices.

Steps

1. Enter **Configuration** → **System** → **System Settings** → **Time Settings**.
2. Select **Satellite Time Sync..**
3. Set **Interval**.
4. Click **Save**.

9.12.4 Set DST

If the region where the device is located adopts Daylight Saving Time (DST), you can set this function.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **DST**.
2. Check **Enable DST**.
3. Select **Start Time**, **End Time** and **DST Bias**.

4. Click **Save**.

9.13 Set RS-485

RS-485 is used to connect the device to external device. You can use RS-485 to transmit the data between the device and the computer or terminal when the communication distance is too long.

Before You Start

Connect the device and computer or terminal with RS-485 cable.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **RS-485**.
2. Set the RS-485 parameters.



You should keep the parameters of the device and the computer or terminal all the same.

3. Click **Save**.

9.14 Set RS-232

RS-232 can be used to debug device or access peripheral device. RS-232 can realize communication between the device and computer or terminal when the communication distance is short.

Before You Start

Connect the device to computer or terminal with RS-232 cable.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **RS-232**.
2. Set RS-232 parameters to match the device with computer or terminal.
3. Click **Save**.

9.15 Power Consumption Mode

It is used to switch the power consumption when the device is working.



The function is only supported by certain camera models.

Go to **Configuration** → **System** → **System Settings** → **Power Consumption Mode**, select the desired power consumption mode.

Full Consumption Mode

The device works with all the functions enabled.

Low Consumption Real-Time Mode

The device DSP works normally. It records the videos with the main stream at the half frame rate, and supports the remote login, preview and the configuration.

Low Power Sleep

When the device power is lower than **Threshold of Low Power Sleep Mode**, the device enters sleep mode.

When the device power is recovered to 10% above the threshold, the device enters the user configuration mode.

Scheduled Sleep

If the device is during **Scheduled Sleep Time**, it enters the sleep mode, otherwise it enters the user configuration mode.

Note

For the scheduled sleep schedule settings, see *Arming Schedule and Alarm Linkage*. The device supports the timing wake. For the details, see *Set Timing Wake*.

9.16 External Device

For the device supporting external devices, including the supplement light, wiper on the housing and the LED light, you can control them via the Web browser when it is used with the housing. External devices vary with models.

Brightness

Adjust **Low Beam Brightness** and **High Beam Brightness** according to the actual scene.

Timing

The LED light will be turned on by the schedule you set. You should set **Start Time** and **End Time**.

Auto

The LED light will be turned on according to the environment illumination.

9.16.1 Supplement Light Settings

You can set supplement light and refer to the actual device for relevant parameters.

Smart Supplement Light

Smart supplement light avoids over exposure when the supplement light is on.

Supplement Light Mode

When the device supports supplement light, you can select supplement light mode.

IR Mode

IR light is enabled.

White Light Mode

White light is enabled.

Mix Mode

Both IR light and white light are enabled.

Off

Supplement light is disabled.

Brightness Adjustment Mode

Auto

The brightness adjusts according to the actual environment automatically.

Manual

You can drag the slider or set value to adjust the brightness.

9.16.2 Heater

You can enable heater to remove fog around the lens of the device.

Go to **Configuration** → **System** → **System Settings** → **External Device** and select the mode as required.

9.17 Security

You can improve system security by setting security parameters.

9.17.1 Authentication

You can improve network access security by setting RTSP and WEB authentication.

Go to **Configuration** → **System** → **Security** → **Authentication** to choose authentication protocol and method according to your needs.

RTSP Authentication

Digest and digest/basic are supported, which means authentication information is needed when RTSP request is sent to the device. If you select **digest/basic**, it means the device supports digest or basic authentication. If you select **digest**, the device only supports digest authentication.

RTSP Digest Algorithm

MD5, SHA256 and MD5/SHA256 encrypted algorithm in RTSP authentication. If you enable the digest algorithm except for MD5, the third-party platform might not be able to log in to the device or enable live view because of compatibility. The encrypted algorithm with high strength

is recommended.

WEB Authentication

Digest and digest/basic are supported, which means authentication information is needed when WEB request is sent to the device. If you select **digest/basic**, it means the device supports digest or basic authentication. If you select **digest**, the device only supports digest authentication.

WEB Digest Algorithm

MD5, SHA256 and MD5/SHA256 encrypted algorithm in WEB authentication. If you enable the digest algorithm except for MD5, the third-party platform might not be able to log in to the device or enable live view because of compatibility. The encrypted algorithm with high strength is recommended.



Note

Refer to the specific content of protocol to view authentication requirements.

9.17.2 Set IP Address Filter

IP address filter is a tool for access control. You can enable the IP address filter to allow or forbid the visits from the certain IP addresses.

IP address refers to IPv4.

Steps

1. Go to **Configuration** → **System** → **Security** → **IP Address Filter**.
2. Check **Enable IP Address Filter**.
3. Select the type of IP address filter.

Forbidden IP addresses in the list cannot access the device.

Allowed Only IP addresses in the list can access the device.

4. Edit the IP address filter list.

Add Add a new IP address or IP address range to the list.

Modify Modify the selected IP address or IP address range in the list.

Delete Delete the selected IP address or IP address range in the list.

5. Click **Save**.

9.17.3 Set HTTPS

HTTPS is a network protocol that enables encrypted transmission and identity authentication,

which improves the security of remote access.

Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **HTTPS**.
2. Check **Enable** to access the camera via HTTP or HTTPS protocol.
3. Check **Enable HTTPS Browsing** to access the camera only via HTTPS protocol.
4. Select the **Server Certificate**.
5. Click **Save**.



If the function is abnormal, check if the selected certificate is abnormal in **Certificate Management**.

9.17.4 Set QoS

QoS (Quality of Service) can help improve the network delay and network congestion by setting the priority of data sending.



QoS needs support from network device such as router and switch.

Steps

1. Go to **Configuration** → **Network** → **Advanced Configuration** → **QoS**.
2. Set **Video/Audio DSCP**, **Alarm DSCP** and **Management DSCP**.



Network can identify the priority of data transmission. The bigger the DSCP value is, the higher the priority is. You need to set the same value in router while configuration.

3. Click **Save**.

9.17.5 Set IEEE 802.1X

IEEE 802.1x is a port-based network access control. It enhances the security level of the LAN/WLAN. When devices connect to the network with IEEE 802.1x standard, the authentication is needed.

Go to **Configuration** → **Network** → **Advanced Settings** → **802.1X**, and enable the function. Set **Protocol** and **EAPOL Version** according to router information.

Protocol

EAP-LEAP, EAP-TLS, and EAP-MD5 are selectable

EAP-LEAP and EAP-MD5

If you use EAP-LEAP or EAP-MD5, the authentication server must be configured. Register a user name and password for 802.1X in the server in advance. Input the user name and password for authentication.

EAP-TLS

If you use EAP-TLS, input Identify, Private Key Password, and upload CA Certificate, User Certificate and Private Key.

EAPOL Version

The EAPOL version must be identical with that of the router or the switch.

9.17.6 Control Timeout Settings

If this function is enabled, you will be logged out when you make no operation (not including viewing live image) to the device via web browser within the set timeout period.

Go to **Configuration** → **System** → **Security** → **Advanced Security** to complete settings.

9.17.7 Search Security Audit Logs

You can search and analyze the security log files of the device so as to find out the illegal intrusion and troubleshoot the security events.

Steps

Note

This function is only supported by certain camera models.

1. Go to **Configuration** → **System** → **Maintenance** → **Security Audit Log**.
2. Select log types, **Start Time**, and **End Time**.
3. Click **Search**.

The log files that match the search conditions will be displayed on the Log List.

4. Optional: Click **Export** to save the log files to your computer.

9.17.8 Security Reinforcement

Security reinforce is a solution to enhance network security. With the function enabled, risky functions, protocols, ports of the device are disabled and more secured alternative functions, protocols and ports are enabled.

Go to **Configuration** → **System** → **Security** → **Advanced Security**. Check **Security Reinforcement**, and click **Save**.

9.17.9 SSH

Secure Shell (SSH) is a cryptographic network protocol for operating network services over an unsecured network.

The SSH function is disabled by default.



Use the function with caution. The security risk of device internal information leakage exists when the function is enabled.

9.18 Certificate Management

It helps to manage the server/client certificates and CA certificate, and to send an alarm if the certificates are close to expiry date, or are expired/abnormal.

9.18.1 Create Self-signed Certificate

Steps

1. Click **Create Self-signed Certificate**.
 2. Follow the prompt to enter **Certificate ID, Country, Hostname/IP, Validity** and other parameters.
-



The certificate ID should be digits or letters and be no more than 64 characters.

3. Click **OK**.
4. Optional: Click **Export** to export the certificate, or click **Delete** to delete the certificate to recreate a certificate, or click **Certificate Properties** to view the certificate details.

9.18.2 Create Certificate Request

Before You Start

Select a self-signed certificate.

Steps

1. Click **Create Certificate Request**.
2. Enter the related information.
3. Click **OK**.

9.18.3 Import Certificate

Steps

1. Click **Import**.
2. Click **Create Certificate Request**.
3. Enter the **Certificate ID**.
4. Click **Browser** to select the desired server/client certificate.
5. Select the desired import method and enter the required information.
6. Click **OK**.
7. Optional: Click **Export** to export the certificate, or click **Delete** to delete the certificate to recreate a certificate, or click **Certificate Properties** to view the certificate details.

Note

- Up to 16 certificates are allowed.
 - If certain functions are using the certificate, it cannot be deleted.
 - You can view the functions that are using the certificate in the functions column.
 - You cannot create a certificate that has the same ID with that of the existing certificate and import a certificate that has the same content with that of the existing certificate.
-

9.18.4 Install Server/Client Certificate

Steps

1. Go to **Configuration** → **System** → **Security** → **Certificate Management**.
2. Click **Create Self-signed Certificate**, **Create Certificate Request** and **Import** to install server/client certificate.

Create self-signed certificate Refer to *Create Self-signed Certificate*

Create certificate request Refer to *Create Certificate Request*

Import Certificate Refer to *Import Certificate*

9.18.5 Install CA Certificate

Steps

1. Click **Import**.
2. Enter the **Certificate ID**.
3. Click **Browser** to select the desired server/client certificate.
4. Select the desired import method and enter the required information.

5. Click **OK**.

 **Note**

Up to 16 certificates are allowed.

9.18.6 Enable Certificate Expiration Alarm

Steps

1. Check **Enable Certificate Expiration Alarm**. If enabled, you will receive an email or the camera links to the surveillance center that the certificate will expire soon, or is expired or abnormal.
 2. Set the **Remind Me Before Expiration (day)**, **Alarm Frequency (day)** and **Detection Time (hour)**.
-

 **Note**

- If you set the reminding day before expiration to 1, then the camera will remind you the day before the expiration day. 1 to 30 days are available. Seven days is the default reminding days.
 - If you set the reminding day before expiration to 1, and the detection time to 10:00, and the certificate will expire in 9:00 the next day, the camera will remind you in 10:00 the first day.
-

3. Click **Save**.

9.19 User and Account

9.19.1 Set User Account and Permission

The administrator can add, modify, or delete other accounts, and grant different permission to different user levels.

 **Caution**

To increase security of using the device on the network, please change the password of your account regularly. Changing the password every 3 months is recommended. If the device is used in high-risk environment, it is recommended that the password should be changed every month or week.

Steps

1. Go to **Configuration** → **System** → **User Management** → **User Management**.
 2. Click **Add**. Enter **User Name**, select **Level**, and enter **Password**. Assign remote permission to users based on needs.
-

Administrator

The administrator has the authority to all operations and can add users and operators and assign permission.

User

Users can be assigned permission of viewing live video, setting PTZ parameters, and changing their own passwords, but no permission for other operations.

Operator

Operators can be assigned all permission except for operations on the administrator and creating accounts.

Modify Select a user and click **Modify** to change the password and permission.

Delete Select a user and click **Delete**.



The administrator can add up to 31 user accounts.

3. Click **OK**.

9.19.2 Simultaneous Login

The administrator can set the maximum number of users logging into the system through web browser simultaneously.

Go to **Configuration** → **System** → **User Management**, click **General** and set **Simultaneous Login**.

9.19.3 Online Users

The information of users logging into the device is shown.

Go to **Configuration** → **System** → **User Management** → **Online Users** to view the list of online users.

Chapter 10 Allocate VCA Resource

VCA resource offers you options to enable certain VCA functions according to actual needs. It helps allocate more resources to the desired functions.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **VCA Resource**.
2. Select desired VCA function.
3. Save the settings.



Some VCA functions are mutually exclusive. When certain function or functions are selected and saved, others will not be hidden.

10.1 Switch Smart Mode

You can enable the smart function select the detection target as required.

Steps

1. Go to **Configuration** → **System** → **System Settings** → **Smart Mode Switch**.
2. Select the desired smart mode.

Table 10-1 Smart function of the smart mode

Smart Mode	Detection Target	Smart Function
------------	------------------	----------------

Capture Mode

The device captures the target in the detection area and upload the captured image. You can select the targets to capture as required.

	Face	<i>Face Capture</i>
	Motor Vehicles	<i>Road Traffic</i>
	Other Combinations	<i>Multi-Target-Type Detection</i>

Comparison Mode

The device recognizes, captures and compares the targets in the rule region, and collects the target attribute and models for the target.

	Face	<i>Face Capture</i> <i>Face Comparison and Modeling</i>
--	------	--

	Face+Human Body	Multi-Target-Type Detection Face Comparison and Modeling
--	-----------------	---

Pattern Mode

The devices link the captured faces, human bodies and vehicles information of the different channels and display the targets patterns.

	Channel 1: Face Channel 2: Face+Human Body+Motor Vehicles+Non-Motor Vehicles	Pattern Linkage Face Capture Multi-Target-Type Detection Face Comparison and Modeling
	Channel 1: Face+Human Body Channel 2: Face+Human Body+Motor Vehicles+Non-Motor Vehicles	Pattern LinkageMulti-Target-Type Detection Face Comparison and Modeling
Monitoring	-	

3. Click **Save**.

 **Note**

- In comparison mode, only channel 2 supports monitoring mode.
- The pattern mode is only supported by the 2-channel devices. Only channel 1 supports human body detection.

10.2 Face Capture

The device can capture the face that appears in the configured area, and the face information will be uploaded with the captured picture as well.

 **Note**

- For device that supports face capture, you need to enable the function in **VCA Resource**. Refer to **Allocate VCA Resource** for details.
- Face capture is only supported by certain models.

10.2.1 Set Face Capture

The face that appears in the configured area can be captured.

Before You Start

To enable the function, go to **VCA Resource** and select **Face Capture**.

Steps



1. Go to **Configuration** → **Face Capture**.
2. For shield region settings, refer to **Set Shield Region**.
3. Select **Rule** and check **Rule**.
4. Click  to draw the detection area. It is recommended that the drawn area occupies 1/2 to 2/3 of the live view image.
5. Click  and draw a rectangle based on the pupil distance of the face on the live view.



Figure 10-1 Set face capture

The device will detect whether there is a human face in the area by the set minimum pupil distance.

6. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
7. Click **Save**.
8. For overlay and capture settings, refer to **Overlay and Capture**. For advanced parameters settings, refer to **Face Capture Algorithms Parameters**.

Result

You can view and download captured face images in **Picture**. Refer to **View and Download Picture** for details.

10.2.2 Overlay and Capture

Choose to configure capture parameters and the information you want to display on stream and picture.

Display VCA info. on Stream

Display smart information on stream, including the target and rules information.

Display Target info. on Alarm Picture

Overlay the alarm picture with target information.

Target Picture Settings

Custom, Head Shot, Half-Body Shot and Full-Body Shot are selectable.



If you select **Custom**, you can customize **width**, **head height** and **body height** as required.

You can check **Fixed Value** to set the picture height.

Background Picture Settings

Comparing to target picture, background picture is the scene image offers extra environmental information. You can set the background picture quality and resolution. If the background image need to be uploaded to surveillance center, check **Background Upload**.

People Counting Overlay



Select flow overlay type.

Select the daily reset time. Click **Manual Reset** if you want to reset right now.

Camera

You can set **Device No.** and **Camera Info.** for the camera, which can be overlaid on captured picture.

Text Overlay

You can check desired items and adjust their order to display on captured pictures by  .

The content of **Device No.** and **Camera Info** should be on the same page.

10.2.3 Face Capture Algorithms Parameters

It is used to set and optimize the parameters of the algorithm library for face capture. Go to **Configuration** → **Face Capture** → **Advanced Configuration** → **Parameters**.

Face Capture Version

It lists the version of the algorithms library.

Detection Parameters

Generation Speed

The speed to identify a target. The higher the value, the faster the target will be recognized. Setting the value quite low, and if there was a face in the configured area from the start, this face will not be captured. It can reduce the misinformation of the faces in the wall painting or posters. The default value of 3 is recommended.

Sensitivity

The sensitivity to identify a target. The higher the value is, the easier a face will be recognized, and the higher possibility of misinformation would be. The default value of 3 is recommended.

Capture Parameters

Best Shot

The best shot after target leave the detection area.

Capture Times

It refers to the capture times a face will be captured during its stay in the configured area. The default value is 1.

Capture Interval

The frame interval to capture a picture. If you set the value as 1, which is the default value, it means the camera captures the face in every frame.

Capture Threshold

It stands for the quality of face to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Quick Shot

You can define quick shot threshold and max. capture interval.

Quick Shot Threshold

It stands for the quality of face to trigger quick shot.

Face Exposure

Check the checkbox to enable the face exposure.

Reference Brightness

The reference brightness of a face in the face exposure mode. If a face is detected, the camera adjusts the face brightness according to the value you set. The higher the value, the brighter the face is.

Minimum Duration

The minimum duration of the camera exposures the face. The default value is 1 minute.

Note

If the face exposure is enabled, please make sure the WDR function is disabled, and the manual iris is selected.

Face Filtering Time

It means the time interval between the camera detecting a face and taking a capture action. If the detected face stays in the scene for less than the set filtering time, capture will not be triggered. For example, if the face filtering time is set as 5 seconds, the camera will capture the detected face when the face keeps staying in the scene for 5 seconds.

Note

The face filtering time (longer than 0s) may increase the possibility of the actual capture times less than the set value above.



Restore Default

Click **Restore** to restore all the settings in advanced configuration to the factory default.

10.2.4 Set Shield Region

The shield region allows you to set the specific region in which the set smart function rule is invalid.

Steps

1. Select **Shield Region**.
2. Click  to draw shield area. Repeat this step above to set more shield regions.
3. Optional: Click  to delete the drawn areas.
4. Click **Save**.

10.3 Road Traffic

Motor vehicle, non-motor vehicle, and pedestrian can be detected and captured when they enter the set lane and the relevant information together with the captured picture will be uploaded.

Note

Only certain device models support this function.

10.3.1 Set Vehicle Detection

The vehicle that enters the set lane can be detected and the picture of the vehicle and its license plate can be captured and stored. Alarm will be triggered and capture can be uploaded.

Before You Start

Go to **Configuration** → **System** → **System Settings** → **VCA Resources**, and select **Road Traffic**.

Steps

1. Go to **Configuration** → **Road Traffic** → **Detection Configuration**, and select **Vehicle Detection** as detection type.
2. Check **Enable**.
3. Select the lane number.
4. Click and drag the lane line to set its position, or click and drag the line end to adjust the length and angle of the line.

- Adjust the zoom ratio of the camera so that the size of the vehicle in the image is close to that of the red frame. Only the position of red frame is adjustable.

Note

Only 1 license plate can be captured at one time for each lane.

- Select **Region** and **Country/Region**.
- Select the license plate information upload mode.

Entrance/Exit	The license plate information of the detected vehicle will be uploaded when the vehicle passes the detection area and triggers the detection in entrance/exit.
City Street	The license plate information of the detected vehicle will be uploaded when the vehicle passes the detection area and triggers the detection in city streets.
Alarm Input	It means the input alarm will trigger a license plate capture and recognition action.

Note

When Alarm Input is selected, the alarm input A<-1 will automatically be assigned to trigger vehicle detection and its alarm type is always NO. If the A<-1 alarm input is used to trigger vehicle detection, it can not be used for other basic events. When Alarm Input is selected and saved, previously configured linkage method for A<-1 will be canceled.

- Select the **Detection mode**.
 - Check **Remove Duplicated License Plates** and set the **Time Interval**. The default time interval is 4 minutes.
-

Note

Up to 8 license plates are supported.

- Set arming schedule and linkage method. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
- Click **Save**.

10.3.2 Set Mixed-Traffic Detection Rule

The motor vehicle, non-motor vehicle, and pedestrian that enter the set lane can be detected, and the picture of targets can be captured and stored. Alarm will be triggered and capture can be

uploaded.

Before You Start

Go to **Configuration** → **System** → **System Settings** → **VCA Resources**, and select **Road Traffic**.

Steps

1. Go to **Configuration** → **Road Traffic** → **Detection Configuration**, and select **Mixed-traffic Detection** as detection type.
2. Check **Enable**.
3. Select the lane number.
4. Select **Region** and **Country/Region**.
5. Set arming schedule and linkage method. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
6. Click **Save**.

10.3.3 Uploading Pictures Settings

You can set the image parameters of the captured images in vehicle detection and mixed-traffic detection.

Go to **Configuration** → **Road Traffic** → **Picture**.

Picture Quality

The larger the value is, the clearer the picture is, but larger storage space is also required.

Picture Size

The larger the value is, the larger the storage space is needed. And the level of network transmission requirement is also higher.

License Plate Enhancement

The larger the value is, the clearer the license plate is, but larger storage space is also required. Check **License Plate Enhancement** and set the level. The default level is 50.

Overlay

You can overlay camera, device or vehicle information on the captured image and click **↑** **↓** to adjust the order of overlay texts.

For camera settings, go to **Configuration** → **Road Traffic** → **Camera** to set relevant parameters and click **Save**.

10.3.4 Camera Settings

You can set the parameters of each camera for better management.

Go to **Configuration** → **Road Traffic** → **Camera** to set relevant parameters and click **Save**.

10.3.5 Import or Export Blocklist & Allowlist

You can import and export the blocklist and allowlist as desired, and check the list content in this

interface.

Steps

1. Click **Browse** to open the PC local directory.
2. Find the blocklist & allowlist file and click to select it. Click **Open** to confirm.

Note

The file to import should correspond with the file template that is required by the camera. You are recommended to export an empty blocklist & allowlist file from the camera as the template and fill in the content. The file should be in the .xls format and the cell format should be Text.

3. Click **Import** to import the selected file.
4. Click **Export** to open the PC local directory.
5. Select a directory in your PC local directory.
6. Name the file in the file name text field.
7. Click **Save**.

10.4 Multi-Target-Type Detection

Multi-Target-Type Detection is to detect, capture and upload data of targets in multiple types, such as human face, human body, and vehicle.



Note

For certain device models, you need to enable **Multi-Target-Type Detection** on **VCA Resource** page first.

10.4.1 Set Multi-Target-Type Detection Rule

After setting the multi-target-type detection rules and algorithm parameters, the device captures targets of multiple types and triggers linkage actions automatically.

Steps

1. Go to **Configuration** → **Multi-Target-Type Detection** → **Rule**.
2. Check **Rule**.
3. Click , and draw a detection area on live image.
4. Enter the min. pupil distance in the text field, or click  to draw min. pupil distance.

Min. Pupil Distance

The min. pupil distance refers to the minimum area between two pupils, and it is basic for the device to recognize a face.

5. Set arming schedule. See **Set Arming Schedule**.
6. Set linkage method. See **Linkage Method Settings**.
7. Click **Save**.

What to do next

Go to **Picture** to search and view the captured pictures.

Go to **Smart Display** to see currently captured target pictures.

10.4.2 Overlay and Capture

Choose to configure capture parameters and the information you want to display on stream and picture.

Display VCA info. on Stream

Display smart information on stream, including the target and rules information.

Display Target info. on Alarm Picture

Overlay the alarm picture with target information.

Target Picture Settings

Custom, Head Shot, Half-Body Shot and Full-Body Shot are selectable.



Note

If you select **Custom**, you can customize **width**, **head height** and **body height** as required.

You can check **Fixed Value** to set the picture height.

Background Picture Settings

Comparing to target picture, background picture is the scene image offers extra environmental information. You can set the background picture quality and resolution. If the background image need to be uploaded to surveillance center, check **Background Upload**.

People Counting Overlay



Select flow overlay type.

Select the daily reset time. Click **Manual Reset** if you want to reset right now.

Camera

You can set **Device No.** and **Camera Info.** for the camera, which can be overlaid on captured picture.

Text Overlay

You can check desired items and adjust their order to display on captured pictures by  .

The content of **Device No.** and **Camera Info** should be on the same page.

10.4.3 Multi-Target-Type Detection Algorithm Parameters

It is used to set and optimize the parameters of the algorithm library for Multi-Target-Type Detection.

Go to the **Configuration** → **Multi-Target-Type Detection** → **Advanced Configuration** for configuration.

HMS Version

It refers to the current algorithm version, which cannot be edited.

Restore Defaults

Click **Restore** to restore all the settings in advanced configuration to the factory default.

Detection Parameters

Generation Speed

It is the speed of deciding whether an object in detection area is a target or not. The higher the value is, the faster the target will be detected. The default value is recommended.

Sensitivity

It is the sensitivity of recognizing a target. The higher the value is, the easier a target will be recognized, and the higher possibility of misinformation would be. The default value is recommended.

Capture Parameters

Best Shot

Capture Threshold

It refers for the quality of face to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Face Exposure

Enable the function, and the device automatically adjusts exposure level when human faces appear in the scene.

Reference Brightness

It refers to the reference brightness of a face in the face exposure mode. If a face in the actual scene is brighter than the set reference brightness, the device lower the exposure level. If a face in the actual scene is darker than the set reference, the device increases the exposure level.

Minimum Duration

The extra time the device keeps the face exposure level after the face disappears in the scene.



Face Filtering Time

It means the time interval between the camera detecting a face and taking a capture action. If the detected face stays in the scene for less than the set filtering time, capture will not be triggered. For example, if the face filtering time is set as 5 seconds, the camera will capture the detected face when the face keeps staying in the scene for 5 seconds.

10.4.4 Set Shield Region

The shield region allows you to set the specific region in which the set smart function rule is invalid.

Steps

1. Select **Shield Region**.
2. Click  to draw shield area. Repeat this step above to set more shield regions.
3. Optional: Click  to delete the drawn areas.
4. Click **Save**.

10.5 Face Counting

Face counting detection can remove the duplicate faces and calculate the number of objects entered or exited a certain configured area.


Note

- For certain device models, you need to select **Face Counting** on **VCA Resource** page first.
 - Only certain camera models support this function.
-

10.5.1 Set Face Counting Detection Rule

After setting the face counting detection rules and algorithm parameters, the device captures targets and triggers linkage actions automatically.

Steps

1. Go to **Configuration** → **Face Counting** → **Rule**.
2. Check **Rule**.
3. Enter the min. pupil distance in the text field, or click  to draw the min. pupil distance. The distance of the drawn pupil will be displayed on the box below the live view.




Min. Pupil Distance

The min. pupil distance refers to the minimum square size composed by the area between two pupils, and it is the basic standard for a camera to identify a target.

4. Enter the max. pupil distance in the text field, or click  to draw the max. pupil distance.




Max. Pupil Distance

The max. pupil distance refers to the maximum square size composed by the area between two pupils, and it is the basic standard for a camera to identify a target.

5. Click  to draw the detection area. Draw an area by left-clicking end-points in the live view window, and right-clicking to finish the area drawing.
6. Click  to draw the detection line. The arrow shows entering direction, you can click  to change the direction.
 - If the target crosses the counting area along the entering direction and crosses the detection

line, then it is counted as the entering number.

- If the target crosses the counting area along the exiting direction and crosses the detection line, then it is counted as the exiting number.

7. Click  and  to draw region A and B. Make sure the two areas don't overlap. You can click  to change the direction.

- If the target enters from A region to B region, then it is counted as the entering number.
- If the target enters from B region to A region, then it is counted as the exiting number.

8. Set arming schedule. See **Set Arming Schedule**.

9. Set linkage method. See **Linkage Method Settings**.

10.5.2 Overlay and Capture

Choose to configure capture parameters and the information you want to display on stream and picture.

Display VCA info. on Stream

Display smart information on stream, including the target and rules information.

Display Target info. on Alarm Picture

Overlay the alarm picture with target information.

Target Picture Settings

Custom, Head Shot, Half-Body Shot and Full-Body Shot are selectable.

Note

If you select **Custom**, you can customize **width**, **head height** and **body height** as required.

You can check **Fixed Value** to set the picture height.

Background Picture Settings

Comparing to target picture, background picture is the scene image offers extra environmental information. You can set the background picture quality and resolution. If the background image need to be uploaded to surveillance center, check **Background Upload**.

People Counting Overlay



Select flow overlay type.

Select the daily reset time. Click **Manual Reset** if you want to reset right now.

Camera

You can set **Device No.** and **Camera Info.** for the camera, which can be overlaid on captured picture.

Text Overlay

You can check desired items and adjust their order to display on captured pictures by  . The content of **Device No.** and **Camera Info** should be on the same page.

10.5.3 Face Counting Algorithm Parameters

It is used to set and optimize the parameters of the algorithm parameters for Face Counting.

Note

These functions vary according to different models.

Face Capture Mode

It refers to the current algorithm version, which cannot be edited.

Best Shot

The best shot after the target leaves the detection area.

Capture Times

It refers to the capture times a face will be captured during its stay in the configured area.
The default value is 1.

Capture Threshold

It refers to the quality of face to trigger capture and alarm. Higher value means better quality should be met to trigger capture and alarm.

Face Exposure

The device adjusts the face brightness when it detects face in the image.

Reference Brightness

The reference brightness of a face in the face exposure mode. If a face is detected, the camera adjusts the face brightness according to the value you set. The higher the value, the brighter the face is.

Min. Duration

The minimum duration of the camera exposes the face.

Note

If the face exposure is enabled, make sure the WDR function is disabled, and the manual iris is selected.

Real-Time Update Data

After enabled, the real-time people counting data will be uploaded to the platform.

Data Statistics Cycle

Select the data statistics cycle as required.

Algorithm Validity

The higher the value is, the more difficult it is to detect the target, but the higher the detection accuracy would be.

Restore Defaults

Click **Restore** to restore all the settings in advanced configuration to the factory defaults.

10.5.4 View Face Counting Result

Steps

1. Go to **Application**.
2. Set search condition and click **Counting**.
Matched results are shown in **Face Picture Comparison Statistics** and **People Counting Statistics** area.

10.6 Queue Management

It is used to count queuing-up people number and waiting time of each person.



Note

Queue management is only supported by certain models.

10.6.1 Set Regional People Queuing-Up

It is used to count queuing-up persons in defined regions. Alarms are triggered when the alarm threshold condition and the alarm trigger are both met.

Before You Start

To enable the function, go to **VCA Resource**, and select **Queue Management**.

Steps

1. Go to **Configuration** → **Queue Management**.
2. Select **Regional People Queuing-Up**.
3. Click **Add Region** to draw the detection area and set **Region Name** and **Alarm Interval**. Repeat this step above to set more areas.

Alarm Interval

During the set alarm interval, alarms of the same type only trigger one notification.



Figure 10-2 Set Regional People Queuing-Up

4. Optional: Check **OSD** to display the region name and its real-time queuing-up people number.
5. Set **Alarm threshold**. An alarm is triggered when the alarm threshold condition is met.
6. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
7. Click **Save**.

10.6.2 Set Waiting Time Detection

It is used to count the waiting time of each person that enters the detection area. Alarms are triggered when the alarm threshold condition and the alarm trigger are both met.

Before You Start

To enable the function, go to **VCA Resource**, and select **Queue Management**.

Steps

1. Go to **Configuration** → **Queue Management**.
2. Select **Waiting Time Detection**.
3. Click **Add Region** to draw the detection area and set **Region Name** and **Alarm Interval**. Repeat this step above to set more areas.

Alarm Interval

During the set alarm interval, alarms of the same type only trigger one notification



Figure 10-3 Set Waiting Time Detection

4. Set **Alarm threshold**. An alarm is triggered when the alarm threshold condition is met.
5. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
6. Click **Save**.
7. Optional: Enable **Display POS Information** and **Rule** in **Configuration** → **Local**.
The detection area and the time people staying in the detection area can be viewed on the live view.

10.6.3 Queue Management Statistics

Queue management supports data analysis and report output.

Before You Start

For queue management settings, refer to **Set Regional People Queuing-Up** and **Set Waiting Time Detection**.

- Select **Queuing-Up Time Analysis** and **Regional Comparison** to compare queuing-up people number of different regions.
- Select **Queuing-Up Time Analysis** and **Multi-Level Comparison** to compare queuing-up people number of different waiting time levels.
- Select **Queue Status Analysis** and **Regional Comparison** to compare the time and duration that a queue stays at a certain length in different regions.
- Select **Queue Status Analysis** and **Multi-Level Comparison** to compare the time and duration of the queue at different queue length levels.

Steps

Note

With an on-board memory card installed, the device can save up to one month's data. With NO memory card installed, the device can only save up to one week's data.

1. Select the analysis mode.

Queuing-Up Time Analysis

Queuing-Up time analysis calculates people number of different waiting time levels.

Queue Status Analysis

Queue status analysis calculates the time and duration that a queue stays a certain length.

2. Select **Statistic Type**.

Regional Comparison

Multiple regions and one level can be selected for analysis, and an analysis chart can be drawn.

Multi-Level Comparison

Multiple levels and regions can be selected for analysis, and one analysis chart is drawn for each region.

3. Check one or more regions.
4. Set the queue length level. Check one or more desired range checkboxes and input values.
5. Select **Report Type** and **Statistics Time**.
6. Click **Counting** to generate the report.

10.7 Counting

It helps to calculate the number of people entering or exiting a certain configured area.

Note

Counting is only supported by certain models.

10.7.1 Set Counting

It is used to calculate the objects entering and exiting the region, alarm events, and upload data.

Steps

1. Go to **Configuration** → **Counting**.
 2. Check **Enable Counting**.
 3. Optional: Check **Enable OSD Overlay**, and the real-time number of people entering and exiting the region is displayed on the live video.
-

Note

The overlay information only counts the number of the current day. The number is cleared when the device is restarted or midnight comes. You can also click **0** to clear the number manually.

4. Set the detection line and the objects across the line will be detected and counted.
-




-  Draw a detection line.
-  Delete the detection line.
-  Change the direction.



Figure 10-4 Set Counting

5. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
6. Click **Save**.

10.7.2 View Counting Statistics

You can view and export the counting statistics stored in device or memory card.

Before You Start

Go to **Set Counting** to set queue management first.

Steps

1. Go to **Application**.
2. Select **Report Type**.
3. Select **Statistics Type**.
4. Select **Start Time**.
5. Click **Counting**.
6. Optional: Click **Export** to export the counting statistics.
The counting statistics can be viewed in table, line chart, and bar chart.

10.8 Hard Hat Detection

This function detects targets in the set monitoring region who do not wear the hard hat and

triggers an alarm.

 **Note**

Only certain device models support the function.

10.8.1 Set Hard Hat Detection

Before You Start

Go to **Configuration** → **System** → **System Settings** → **VCA Resources** to enable **Hard Hat Detection**.

Steps

1. Go to **Configuration** → **Hard Hat Detection**, and check **Enable Hard Hat Detection**.
2. Optional: Set **Target Generation Speed**.

Target Generation Speed

It refers to the target generation speed of the face entering the detection region. The greater the value is, the quicker the generation speed is.

3. Set detection region.
 - 1) Select detection region.
 - 2) Click **Draw Area**, and click and draw the endpoints of the region in the live view image.
 - 3) Right click to finish the drawing.

Click Stop Drawing Finish drawing the region.

Click Clear All Draw the region again.

Figure 10-5 Hard Hat Detection

4. For the arming schedule settings, refer to **Set Arming Schedule**. For the linkage method settings, refer to **Linkage Method Settings**.
5. Click **Save**.

10.9 Face Comparison and Modeling

For certain device models, you need to enable **Multi-Target-Type Detection** or **Face Capture** on **VCA Resource** page first.

10.9.1 Face Comparison

Face comparison serves the purpose of face recognition by comparing the captured faces with

those in face picture library.

Set Face Picture Library

Face picture library is used to store modeled human faces and information.

Steps

1. Go to **Configuration** → **Face Picture Library**.
2. Create a face picture library.
 - 1) Click **+** to add a face picture library.
 - 2) Input library name, threshold and remarks.

Threshold

Face similarity higher than the set threshold triggers face picture comparison alarm uploading.

- 3) Click **OK**.
 - 4) Optional: Modify a face picture library. Select the desired library and click **⚙** and change related parameters.
 - 5) Optional: Delete a library. Select the desired library and click **✕**.
3. Add face pictures to the library.

Note

The picture format should be JPEG, and the size no larger than 300 KB per file.

Add one face picture Click **Add** and upload the face picture with detailed face information.

Import face pictures in batch Click **Import** and select picture path.

Note

- When you import face pictures in batch, the picture name is saved as the face name. For other face information, you should modify one by one manually.
- The verification code for exporting and importing should be a combination of 8 to 16 digits, containing numerics, upper case and lower case letters.

4. Optional: Modify face information.
 - 1) Select a face picture library.
 - 2) Select the target face picture. You can use the search function to locate the picture by inputting search conditions, and click **Search**.
 - 3) Click **Modify**.
 - 4) Edit detailed information.

Note

Face picture is not allowed to change.

5) Click **OK**.

5. Create models for each face picture in library.

Modeling process builds up face model for each face picture. Face model is required for face picture comparison to take effect.

Modeling Select one or more face pictures, and click **Modeling**.

Batch Modeling Select a face picture library, and click **Batch Modeling**.

6. Optional: Repeat to create more face libraries.

7. Click **Save**.

Set Face Picture Comparison

The function compares captured pictures with face pictures in library and outputs comparison result. Comparison result can trigger certain actions when arming schedule and linkage method are set.

Before You Start

You should first create a face picture library and add face pictures. See *Set Face Picture Library*.

Steps

1. Go to **Configuration** → **Comparison and Modeling** → **Face Comparison and Modeling**.
2. Select **Face Picture Comparison**.
3. Check **Enable Face Picture Comparison**.
4. Select a face picture library as the reference.
5. Optional: Check **Report Face Comparison Information During Multi-Target-Type Capture Alarm**, if you want to receive face comparison information during multi-target-type capture alarm.
6. Select desired face information to upload.
7. Select a face comparison mode.

Best Comparison The device captures and compares the target face continuously when the face target stays in the detection area, and upload the best scored face picture and related alarm information when the target face leaves the area.

Quick Comparison The device capture and compares the target face when the face grading exceeds the set **Face Grading Threshold for Capture**.

Face Grading Threshold for Capture

The face grading threshold for the device to judge whether to capture and upload the face or not.

Max. Capture Interval

The max. interval between two captures when the target is in the detection area. The camera takes the capture when it reaches the max. interval even if the face grading does not reach the set threshold.

Quick Setup Mode

Select the mode according to actual using scenarios. In custom mode, you can set **Comparison Timeout** and **Comparison Times**.

8. Set arming schedule. See *Set Arming Schedule*.
9. Set linkage method. See *Linkage Method Settings*.

View Face Comparison Result

Steps

1. Go to **Application**.
2. Set search condition and click **Counting**.
Matched results are shown in **Face Picture Comparison Statistics** area.

10.9.2 Face Modeling

Face modeling serves the purpose of collecting face pictures, creating face models and uploading data to the surveillance center.

Before You Start

Face Capture or Multi-Target-Type detection should be configured for face picture collection. See *Face Capture* or *Multi-Target-Type Detection* for configuration instructions.

Steps

1. Go to **Configuration** → **Comparison and Modeling** → **Face Comparison and Modeling**.
2. Select **Face Modeling** to start.
3. Check **Enable Face Modeling**.
4. Set parameters for modeling.

Report Face Modeling Information in Multi-Target-Type Capture Alarm

When a person triggers the multi-target-type detection, the alarm information includes the face modeling information of the detected face if checked.

Quick Capture

The device starts face modeling when it detects a face which scores higher than the set face grading threshold for capture.

Face Grading Threshold for Capture

The face grading threshold for the device to judge whether to capture and upload the face or

not. Higher value means better picture quality.

Max. Capture Interval

The max. interval between two captures when the target is in the detection area. The camera takes the capture when it reaches the max. interval even if the face grading does not reach the set threshold.

5. Set arming schedule. See ***Set Arming Schedule***.
6. Set linkage method. See ***Linkage Method Settings***.

Chapter 11 Open Platform

Open platform allows you to install the application for the third-party to develop and run its function and service.

Note

Only certain device models support the function.

11.1 Set Open Platform

Steps

1. Go to **Configuration** → **Open Platform**.

Note

Before installing the application, please read the Disclaimer at the bottom and make sure that the application you want to install fit the following conditions.

- Each application has its own exclusive name.
- The FLASH memory space that the application takes up is less than the available FLASH memory space of the device.
- The memory and computing power of the application is less than that available memory and computing power of the device.

2. In **Install Apps**, click **Browse** and select the imported application package.

3. Click **Import** to complete the installation.

The screenshot displays the 'Application' management interface. At the top, there are two progress bars for resource usage: 'memory : 45MB available (total 60MB)' and 'flash : 13MB available (total 33MB)'. Below this is the 'Import Application' section with an 'Application Package' input field and 'Browse' and 'Import' buttons. The 'Application List' table contains the following data:

No.	Application Name	Operation	Version	Memory Used	Flash Used	Company	Status	License
1	HEOP TEST DEMO APP		V1.1.1	10MB	10MB	Hikvision	Stopped	Free
2	HEOP BASIC DEMO APP		V5.5.60	5MB	10MB	Hikvision	Stopped	Inactive

At the bottom, there is a 'Disclaimer' section with the following text: 'Please note that some applications and/or solutions available below are supplied and/or developed by third parties, not HIKVISION. YOUR RELIANCE ON THIRD PARTY'S APPLICATION AND/OR SOLUTIONS IS AT YOUR OWN RISK. HIKVISION MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, AS TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ACCURACY, RELIABILITY, SECURITY, OR NON-INFRINGEMENT OF THIRD PARTY'S APPLICATIONS AND/OR SOLUTIONS. YOU SHALL BE SOLELY RESPONSIBLE FOR TRANSACTION BETWEEN YOU AND SUCH THIRD PARTY.'

Figure 11-1 Open Platform

The installed applications and their related information are displayed in **Application List**, such as application name, operation, version, memory used, flash used, company, status and license.

4. Optional: Set application.



Export log.



Set permission.



Delete the application.



Enable or disable the application.

5. Optional: In application display, click **Browse** and import the application certificate.

Chapter 12 Smart Display

It can display the captured pictures when enabling smart functions.

Layout Preview

Click and select **Layout Preview**. Select the contents according to your needs. When you select real-time analysis, you can select the contents only for real-time analysis.

Detection Attribute

Click and select **Detection Attribute**. When you enable this function, the attribute information of target analysis can be displayed and the information you select will be displayed in the attribute analysis area.

Chapter 13 Set EPTZ

EPTZ (Electronic PTZ) is a high-resolution function that digitally zooms and pans into portions of the image, with no physical camera movement.

Before You Start

If you want to use the EPTZ function, make sure you have select the **Fourth Stream** in the live view. Fourth stream and EPTZ should be both enabled simultaneously.

13.1 Patrol

Steps

1. Go to **Configuration** → **EPTZ**.
2. Check **Enable EPTZ**.
3. Check **Fourth Stream**.
4. Select **Patrol** in **Application**.
5. Click **Save**.

What to do next

For the detailed information about the patrol settings, see the PTZ operations on live view page.

13.2 Auto-Tracking

Steps

1. Go to **Configuration** → **EPTZ**.
2. Check **Enable EPTZ**.
3. Check **Fourth Stream**.
4. Select **Auto-tracking** in **Application**.
5. Click **Detection Area** to start drawing.
6. Click on the live video to specify the four vertexes of the detection area, and right click to complete drawing.
7. Set rules.

Detection Target

Human and vehicle are available. If the detection target is not selected, all the detected targets will be tracked, including the human and vehicle.



Only certain camera models support this function.

Sensitivity

It stands for the percentage of the body part of an acceptable target that is tracked. $\text{Sensitivity} = 100 - S1/ST \times 100$. S1 stands for the target body part that enters the pre-defined area. ST stands for the complete target body. The higher the value of sensitivity is, the more easily the target can be tracked.

8. Click **Save**.

Chapter 14 Pattern Linkage

After the pattern linkage is set, the device can link the captured faces and human bodies information from different channels.

Note

The function is only supported by multichannel devices.

14.1 Set Pattern Linkage

After the pattern linkage is set, the device can link the captured faces, human bodies and vehicles information from different channels.

Before You Start

See *Switch Smart Mode*, check **Pattern Mode**.

Steps

1. Go to **Configuration** → **Pattern Linkage** → **Calibration**.
2. Click **Add Point**, Move the point in camera 1 to a reference in the image, and move the point with the same number in camera 2 to the corresponding reference.

Delete Point Delete all the selected points.

Clear All Delete all the points.

3. Repeat step 2 to move the added points to the different references. You are recommended to add at least 12 calibration points.

Note

- The points should be scattered and 3/4 points cannot be on one line.
 - The device supports 4 to 64 calibration points.
-

4. Click **Parity** to check the points in the camera 1 and camera 2 are in the same reference position. If not, adjust the point or calibrate the point again.
 - If the channel 2 and channel 1 is in the same reference point, the calibration is succeeded.
 - If the channel 2 and channel 1 isn't in the same reference point, the calibration failed. Repeat step2 to adjust the points or calibrate again.
5. Click **Rule**, check **Enable Pattern Linkage**.
6. Click **Save**.



See Far, Go Further