Face Recognition Access Controller

User's Manual



Foreword

General

This manual introduces the installation and basic operations of the Face Recognition Access Controller (hereinafter referred to as "access controller").

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
	Provides additional information as the emphasis and supplement to the
	text.

Revision History

Version	Revision Content	Release Date
V1.0.0	First Release.	August 2020

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

Important Safeguards and Warnings

This chapter describes the contents covering proper handling of the access controller, hazard prevention, and prevention of property damage. Read these contents carefully before using the access controller, comply with them when using, and keep them well for future reference.

Operation Requirement

- Do not place or install the access controller in a place exposed to sunlight or near the heat source.
- Keep the access controller away from dampness, dust or soot.
- Keep the access controller installed horizontally on the stable place to prevent it from falling.
- Do not drop or splash liquid onto the access controller, and make sure there is no object filled with liquid on the access controller to prevent liquid from flowing into the access controller.
- Install the access controller in a well-ventilated place, and do not block the ventilation of the access controller.
- Operate the access controller within the rated range of power input and output.
- Do not dissemble the access controller randomly.
- Transport, use and store the access controller under the allowed humidity and temperature conditions.
- For the access controller with a temperature monitoring unit:
 - Install the temperature monitoring unit in a windless indoor environment, and maintain the indoor ambient temperature at 10°C to 40°C.
 - Warm up the temperature monitoring unit for more than 20 minutes after power-on to enable the temperature monitoring unit to reach thermal equilibrium.

Electrical Safety

- Improper battery use might result in fire, explosion, or inflammation.
- When replacing battery, make sure the same model is used.
- Use the recommended power cables in the region and conform to the rated power specification.
- Use the power adapter provided with the access controller; otherwise, it might result in people injury and device damage.
- The power source shall conform to the requirement of the Safety Extra Low Voltage (SELV) standard, and supply power with rated voltage which conforms to Limited power Source requirement according to IEC60950-1. Please note that the power supply requirement is subject to the device label.
- Connect the device (I-type structure) to the power socket with protective earthing.
- The appliance coupler is a disconnection device. When using the coupler, keep the angle for easy operation.

Table of Contents

Foreword	I
Important Safeguards and Warnings	II
1 Overview	1
1.1 Introduction	1
1.2 Features	1
2 Cable Connections	2
3 System Operations	
3.1 Basic Configuration Procedure	4
3.2 Common Icons	4
3.3 Initialization	5
3.4 Standby Interface	5
3.5 Main Menu	6
3.6 Unlocking Methods	8
3.6.1 Cards	8
3.6.2 Face	8
3.6.3 User Password	8
3.6.4 Administrator Password	9
3.7 User Management	9
3.7.1 Adding New Users	9
3.7.2 Viewing User information	11
3.8 Access Management	11
3.8.1 Period Management	12
3.8.2 Unlock	13
3.8.3 Alarm Configuration	17
3.8.4 Door Status	
3.8.5 Lock Holding Time	19
3.9 Network Communication	19
3.9.1 IP Address	19
3.9.2 Serial Port Settings	
3.9.3 Wiegand Configuration	21
3.10 System	
3.10.1 Time	
3.10.2 Face Parameter	
3.10.3 Image Mode	
3.10.4 Fill Light Mode Setting	
3.10.5 Fill Light Brightness Setting	
3.10.6 Volume Adjustment	
3.10.7 IR Light Brightness Adjustment	
3.10.8 Restore to Factory Settings	
3.10.9 Reboot	
3.11 USB	
3.11.1 USB Export	
3.11.2 USB Import	

	3.11.3 USB Update	. 28
	3.12 Features	. 28
	3.12.1 Privacy Setting	. 30
	3.12.2 Result Feedback	. 31
	3.13 Record	. 33
	3.14 Auto Test	. 34
	3.15 System Info	. 35
4	Web Operations	. 36
	4.1 Initialization	. 36
	4.2 Login	. 38
	4.3 Resetting the Password	. 39
	4.4 Alarm Linkage	. 40
	4.4.1 Setting Alarm Linkage	. 40
	4.4.2 Alarm Log	. 42
	4.5 Data Capacity	. 42
	4.6 Video Setting	. 43
	4.6.1 Data Rate	. 43
	4.6.2 Image	. 44
	4.6.3 Exposure	. 45
	4.6.4 Motion Detection	. 46
	4.6.5 Volume Setting	. 47
	4.6.6 Image Mode	. 48
	4.7 Face Detect	. 48
	4.8 Network Setting	. 51
	4.8.1 TCP/IP	. 51
	4.8.2 Port	
	4.8.3 Register	
	4.8.4 P2P	. 53
	4.9 Date Setting	. 54
	4.10 Safety Management	
	4.10.1 IP Authority	
	4.10.2 Systems	
	4.11 User Management	
	4.11.1 Adding Users	
	4.11.2 Modifying User Information	
	4.11.3 Onvif User	
	4.12 Maintenance	
	4.13 Configuration Management	
	4.13.1 Config Mgmt	
	4.13.2 Features	
	4.13.3 Wiegand Serial Port Setting	
	4.14 Upgrade	
	4.15 Version Information	
	4.16 Online User	
	4.17 System Log	
	4.17.1 Querying Logs	
	4.17.2 Backup Logs	. 62

4.17.3 Admin Log	62
4.18 Exit	62
5 FAQ	63
Appendix 1 Notes of Temperature Monitoring	64
Appendix 2 Notes of Face Recording/Comparison	65
Appendix 3 Cybersecurity Recommendations	68

1 Overview

1.1 Introduction

The access controller is an access control panel that supports unlock through faces, passwords, cards, and supports unlock through their combinations.

1.2 Features

- LCD display, the resolution of 7-inch access controller is 1024 × 600.
- Support face unlock, IC card unlock, and password unlock; unlock by period
- With face detection box; the largest face among faces that appear at the same time is recognized first; the maximum face size can be configured on the web
- 2MP wide-angle WDR lens; with auto/manual illuminator
- With face recognition algorithm, the access controller can recognize more than 360 positions on human face
- Face verification accuracy > 99.5%; low false recognition rate
- Support profile recognition; the profile angle is 0°–90°
- Support liveness detection
- Support duress alarm, tamper alarm, intrusion alarm, door contact timeout alarm, and illegal card exceeding threshold alarm
- Support general users, patrol users, blacklist users, VIP users, guest users, and special users
- Various unlock status display modes protect user privacy
- Support body temperature monitoring through peripheral temperature monitoring unit

2 Cable Connections

The cable connection of model X and model Y is the same. This section takes the model X as an example.

The access controller needs to be connected to devices like sirens, readers, and door contacts. For cable connection, see Table 2-1.

Port	Cable color	Cable name	Description	
	Black	RD–	Negative electrode of external card reader.	
	Red	RD+	Positive electrode of external card reader.	
	Blue	CASE	Tamper alarm input of the external card reader.	
	White	D1	Wiegand D1 input (connected to external card reader)/output (connected to controller).	
	Green	D0	Wiegand D0 input (connected to external card reader)/output (connected to controller).	
	Brown	LED	Connected to external reader indicator in	
Yellow B CON1		В	 RS-485 negative electrode input (connected to external card reader)/output (connected to controller, or connected to door control security module). If the security module is enabled, you need to purchase access control security module separately. The security module needs separate power supply to provide power. Once the security module is enabled, the exit button, lock control, firefighting linkage and temperature monitor will be invalid. 	
	Purple	A	 RS-485 positive electrode input (connected to external card reader)/output (connected to controller, or connected to door control security module). If the security module is enabled, you need to purchase access control security module separately. The security module needs separate power supply to provide power. Once the security module is enabled, the exit button, lock control, firefighting linkage and temperature monitor will be invalid. 	
	White and red	ALARM1_N O	Alarm 1 normally open output port.	
CON2 White and ALARM1 C		ALARM1_C	Alarm 1 common output port.	


Table 2-1 Port description

Port	Cable color		Cable name	Description
	White blue	and	ALARM2_N O	Alarm 2 normally open output port.
	White gray	and	ALARM2_C OM	Alarm 2 common output port.
	White green	and	GND	Connected to the common GND port.
	White Br	rown	ALARM1	Alarm 1 input port.
	White yellow	and	GND	Connected to the common GND port.
	White purple	and	ALARM2	Alarm 2 input port.
	Black red	and	RX	RS-232 receiving port.
	Black orange	and	тх	RS-232 sending portk.
	Black blue	and	GND	Connected to the common GND port.
CON3	Black gray	and	SR1	Used for door contact detection.
CONS	Black green	and	PUSH1	Door open button of door No.1
	Black brown	and	DOOR1_CO M	Lock control common port.
	Black yellow	and	DOOR1_NO	Lock control normally open port.
	Black purple	and	DOOR1_NC	Lock control normally closed port.

3 System Operations

3.1 Basic Configuration Procedure

Figure 3-1 Basic configuration procedure

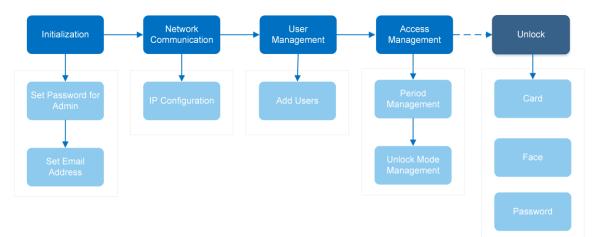

3.2 Common Icons

Table 3-1 Icon description

lcon	Description
:	Main menu icon.
\checkmark	Confirm icon.
К	Turn to the first page of the list.
Н	Turn to the last page of the list.
<	Turn to the previous page of the list.
>	Turn to the next page of the list.
\leftarrow	Return to the previous menu.
ON	Enable.
OFF	Disable.

3.3 Initialization

Administrator password and an email should be set the first time the access controller is turned on or after reset; otherwise the access controller cannot be used.

riguro o z mitalization			
	Device Ir	nitialization	
Admin	admin		
PWD			
PWD Confirm			
E-mail			
_			
	Yes	Clear	

Figure 3-2 Initialization

 \square

- Administrator and password set on this interface are used to log in to the web management platform.
- The administrator password can be reset through the email address you entered if the administrator forgets the password.
- The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' ";: &).

3.4 Standby Interface

You can unlock the door through faces, passwords and cards. See Table 3-2. $\hfill \square$

- If there are no operations in 30 seconds, the access controller will go to the standby mode.
- The standby interface might vary with versions, and the actual interface shall prevail.

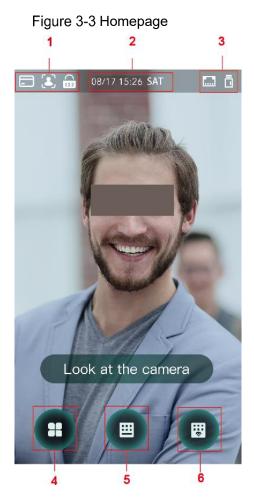


Table 3-2 Homepage description

No.	Description	
	Unlock methods: Card, face and password.	
1		
	When card, face, and password are all set as unlock mode, the password icon will not	
	be displayed at the top left corner of the access controller.	
2	Date & Time. Displays the current date and time.	
3	Display the network status and USB status.	
	Main menu icon.	
4		
	Only users with the administrator permission can enter the main menu.	
5	Password unlock icon.	
6	Administrator password unlock icon.	

3.5 Main Menu

Administrators can add users of different levels, set access-related parameters, do network configuration, view access records and system information, and more in the main menu.

Step 1 Tap 🛄 on the standby interface.

<u>Step 2</u> Select a main menu entering method.

Different modes support different unlock methods, and the actual interface shall prevail. Figure 3-4 Administrator login

	guie o-+/ armin	ou ator rogin	
←	Administ	trator Login	
	Please cho	bose one way	
	٤)	<i>.</i>	
	Face	FP	
		123	
	Card Punch	PWD	
	_ .		
	admin		

The main menu interface is displayed.



Figure 3-5 Main menu

3.6 Unlocking Methods

You can unlock the door through faces, passwords, and cards.

3.6.1 Cards

Put the card at the card swiping area to unlock the door.

3.6.2 Face

Make sure that your face is centered on the face recognition frame, and then you can unlock the door.

3.6.3 User Password

Enter the user password, and then you can unlock the door.

Step 1	Тар	■	on the homepage.
--------	-----	---	------------------

<u>Step 2</u> Enter the user ID, and then tap \blacksquare .

<u>Step 3</u> Enter the user password, and then tap **☑**. The door is unlocked.

3.6.4 Administrator Password

Enter the administrator password, and then you can unlock the door. There is only one administrator password for one access controller. The administrator password can unlock the door without being subject to user levels, unlock modes, periods, holiday plans, and anti-passback.

 \square

Administrator password cannot be used when NC is selected at "3.8.1.5 NC Period."

Step 1 Tap 🛄 on the homepage.

Step 2 Tap Please Enter Administrator PWD.

<u>Step 3</u> Enter the administrator password, and then tap **⊻**. The door is unlocked.

3.7 User Management

You can add new users, view user lists, admin lists, and modify the administrator password on the **User** interface.

3.7.1 Adding New Users

You can add new users by entering user IDs, names, face images, cards, passwords, selecting user levels, and more.

 \square

The following figures are for reference only, and the actual interface shall prevail. <u>Step 1</u> Select User > New User.



Figure 3-6 New User Info

<u>Step 2</u> Configure parameters on the interface.

Table 3-3	New user	parameter	description
	11011 0001	parameter	accomption

Parameter	Description
User ID	Enter user IDs. The IDs can be numbers, letters, and their combinations, and
Userid	the maximum length of the ID is 32 characters. Each ID is unique.
Name	Enter names with at most 32 characters (including numbers, symbols, and
	letters).
Face	Make sure that your face is centered on the picture capturing frame and the
Tace	access controller will take a picture of the new user's face automatically.
	You can register five cards at most for each user. On the card registration
	interface, enter your card number or swipe your card, and then the card
	information will be read by the access controller.
Card	You can enable the Duress Card function on the card registration interface.
	Alarms will be triggered if a duress card is used to unlock the door.
	Only certain models support card unlock.
	The door unlocking password. The maximum length of the password is 8 digits.
PWD	
	If the access controller is without touch screen, you need to connect the access

Parameter	Description
	controller to a peripheral card reader. There are buttons on the card reader.
User Level	 You can select a user level for new users. There are two options: User: Users only have door unlock permission. Admin: Administrators can unlock the door and also have parameter configuration permission. No matter whether there is an administrator in the access controller, administrator identity authentication is needed.
Period	You can set a period in which the user can unlock the door.
Holiday Plan	You can set a holiday plan in which the user can unlock the door.
Valid Date	You can set a period during which the unlocking information of the user is valid.
User Level	 There are six levels: General: General users can unlock the door normally. Blacklist: When users in the blacklist unlock the door, service personnel will get a prompt. Guest: Guests are allowed to unlock the door certain times. Once they exceed the maximum times, they cannot unlock the door again. Patrol: Paroling users can get their attendance tracked, but they have no unlock permission. VIP: When VIP unlocks the door, service personnel will get a prompt. Special: When special people unlock the door, there will be a delay of 5 seconds before the door is closed.
Use Time	When the user level is Guest, you can set the maximum number of times that the user can unlock the door.

Step 3 Tap **V** to save the configuration.

3.7.2 Viewing User information

You can view user list, admin list and enable administrator password through the User interface.

3.8 Access Management

You can do access management on period, unlock mode, alarm, door status, and lock holding time.

Tap Access to go to the access management interface.

3.8.1 Period Management

You can set periods, holiday periods, holiday plan periods, door normally on periods, door normally closed periods, and remote verification periods.

3.8.1.1 Period Config

You can configure 128 periods (weeks) whose number range is 0–127. You can set four periods on each day of a period (week). Users can only unlock the door in the periods that you set.

3.8.1.2 Holiday Group

You can set group holidays, and then you can set plans for holiday groups. You can configure 128 groups whose number range is 0–127. You can add 16 holidays into a group. Configure the start time and end time of a holiday group, and then users can only unlock the door in the periods that you set.

 \square

You can enter names with 32 characters (including numbers, symbols, and letters). Tap 🗹 to save the holiday group name.

3.8.1.3 Holiday Plan

You can add holiday groups into holiday plans. You can use holiday plans to manage user access permission in different holiday groups. Users can only unlock the door in the period that you set.

3.8.1.4 NO Period

If a period is added to the NO period, then the door is normally open in that period.

Ш

The NO/NC period permissions are higher than permissions in other periods.

3.8.1.5 NC Period

If a period is added to the NC period, then the door is normally closed in that period. Users can not unlock the door in this period.

3.8.1.6 Remote Verification Period

If you configured the remote verification period, then when unlock doors during the period you configured, remote verification is required. To unlock the door in this period, a door unlock instruction sent by the management platform is needed.

 \square

You need to enable the Remote Verification Period.

- means enabled.
- **D**^{IF} means not enabled.

3.8.2 Unlock

There are four unlock modes: unlock mode, unlock by period, group combination and temperature monitoring mode. Unlock modes vary with controller access models, and the actual controller access shall prevail.

3.8.2.1 Unlock Mode

When the **Unlock Mode** is on, users can unlock through cards, faces, passwords, or any one of all the unlocking methods.

<u>Step 1</u> Select Access > Unlock Mode > Unlock Mode.

Figure 3-7 Element (multiple choice)



<u>Step 1</u> Select unlock mode(s).

 \square

Tap a selected unlock mode again, the unlock mode will be deleted.

<u>Step 2</u> Select a combination mode.

- **+ And** means "and". For example, if you select card + PWD, it means, to unlock the door, you need to swipe your card first, and then enter password.
- / **Or** means "or". For example, if you select card/PWD, it means, to unlock the door, you can either swipe your card or enter password.

<u>Step 3</u> Tap \checkmark to save the settings.

And then the **Unlock Mode** interface is displayed.

Step 4 Enable the Unlock Mode.

- means enabled.
- **O**FF means not enabled.

3.8.2.2 Unlock by Period

Doors can be unlocked through different unlock modes in different periods. For example, in period 1, the door can only be unlocked through cards; and in period 2, doors can only be locked through faces.

<u>Step 1</u> Select Access > Unlock Mode > Unlock by Period.



Figure 3-8 Unlock by period

- <u>Step 2</u> Set starting time and end time for a period, and then select a unlock mode.
- <u>Step 3</u> Tap \checkmark to save the settings.

The Unlock Mode interface is displayed.


- <u>Step 4</u> Enable the Unlock by Period function.
 - means enabled.
 - **O**^{off} means not enabled.

3.8.2.3 Group Combination

Doors can only be unlocked by a group or groups that consist of more than two users if the Group Combination is enabled.

<u>Step 1</u> Select Access > Unlock Mode > Group Combination.

Figure 3-9 Group Combination

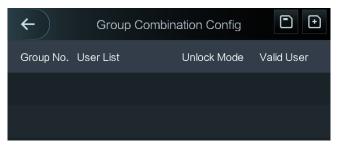

<u>Step 2</u> Tap **D** to create a group.

Figure 3-10 Add a group

←	Add Group	
User List		
Unlock Mode		Card
Valid User		1

Table 3-4 Group parameter

Parameter	Description
	Add users to the newly created group.
	1. Tap User List .
	The User List interface is displayed.
User List	2. Tap D, and then enter a user ID.
	3. Tap 🗹 to save the settings.
Unlock Mode	There are three options: Card, PWD and Face.
	Valid users are the ones that have unlock permission. Doors can be
	unlocked only when the number of users to unlock the doors equals the valid user number.
	• Valid users cannot exceed the total number of users in a group.
Valid User	• If valid users equal total user numbers in a group, doors can only be unlocked by all the users in the group.
	• If valid users are less than the total number of users in a group, doors
	can be unlocked by any users whose number equals the valid user
	number.

<u>Step 3</u> Tap \leftarrow to go back to the previous interface.

Step 4 Tap \checkmark to save the settings.

<u>Step 5</u> Enable the Group Combination.

• means enabled.

means not enabled.

3.8.2.4 Unlock by Monitoring Temperature

Doors can be unlocked by monitoring temperature. To unlock the door, your wrist temperature needs to be monitored first.

<u>Step 1</u> Select Access > Unlock Mode.

Figure 3-11 Unlock by monitoring temperature

← ♠	Unlock Mode	
Unlock Mode		OFF
Unlock by Period		OFF
Group Combination		OFF
Temp Monitoring Mode C	nly	

<u>Step 2</u> Enable **Temp Monitoring Mode Only** function.

means enabled.


• **O**FF means not enabled.

3.8.3 Alarm Configuration

Administrators can manage visitors' unlock permission through alarm configuration. Select **Access > Alarm**. The Alarm interface is displayed.

Figure 3-12 Alarm

ConstructionAnti-passbackImage: ConstructionDuressImage: ConstructionDuressImage: ConstructionIllegal Card Exceeding TimeImage: ConstructionIntrusionImage: ConstructionDoor Sensor Timeout60sDoor Sensor OnImage: Construction				
Duress Image: Card Exceeding Time Illegal Card Exceeding Time Image: Card Exceeding Time Intrusion Image: Card Exceeding Time Door Sensor Timeout 60s	← 🔒	Alarm		
Illegal Card Exceeding Time Image: Card Exceeding Time Intrusion Image: Card Exceeding Time Door Sensor Timeout 60s	Anti-passback			OFF
Intrusion Over Exceeding Time Over	Duress			
Door Sensor Timeout 60s	Illegal Card Exceeding Time			OFF
	Intrusion			OFF
Door Sensor On	Door Sensor Timeout		60s	OFF
	Door Sensor On			OFF



• **O** means not enabled.

Table 3-5 Parameters on the alarm interface	Table 3-5 Parameter	s on the alarm	interface
---	---------------------	----------------	-----------

Parameter	Description
Anti-passback	 After the anti-passback is enabled, users need to verify identities both for entry and exit; otherwise an alarm will be triggered. If a person enters with the identity checked and exits without the identity checked, an alarm will be triggered when the person tries to enter again and the person will have no permission to unlock the door any more. If a person enters without the identity checked, an alarm will be triggered when the person tries to enter again and the person tries to enter the person enters without the identity checked, an alarm will be triggered when the person enters without the identity checked, and alarm will be triggered when the person tries to exit with the identity checked, and the person will have no permission to unlock the door any more.
Duress	An alarm will be triggered when a duress card or duress password is used to unlock the door.
Illegal Card Exceeding Time	After an unauthorized card is used to unlock the door more than 5 times in 50 seconds, an alarm will be triggered.
Intrusion	An intrusion alarm will be triggered if a door is unlocked without having the door contact released.
Door Sensor Timeout	A timeout alarm will be triggered if the time that a user takes to unlock the door exceeds the Door Sensor Timeout time. The Door Sensor Timeout time range is 1–9999 seconds.
Door Sensor On	Only when the Door Sensor On is enabled can the intrusion alarm and door sensor timeout alarm be triggered.

3.8.4 Door Status

There are three options: **NO**, **NC**, and **Normal**.

- NO: If **NO** is selected, the door status is normally open, which means the door will never be closed.
- NC: If **NC** is selected, the door status is normally closed, which means the door will not be unlocked.
- Normal: If **Normal** is selected, the door will be unlocked and locked depending on your settings.

3.8.5 Lock Holding Time

Lock Holding Time is the duration in which the lock is unlocked. If the lock has been unlocked for a period that exceeds the duration, the lock will be automatically locked.

3.9 Network Communication

To make the access controller work normally, you need to configure parameters for network, serial ports and Wiegand ports.

3.9.1 IP Address

3.9.1.1 IP Configuration

Configure an IP address for the access controller to make it be connected to the network. See Figure 3-13 and Table 3-6.



Figure 3-13 IP address configuration

Table 3-6 IP configuration paramete	rs
-------------------------------------	----

Parameter	Description
IP Address/Subnet	The IP address, subnet mask, and gateway IP address should be on
Mask/Gateway IP Address	the same network segment. After configuration, tap \checkmark to save the
Audress	configurations.
DHCP	DHCP (Dynamic Host Configuration Protocol).

Parameter	Description
	When the DHCP is enabled, the IP address can be automatically
	acquired, and the IP address, subnet mask and gateway IP address
	cannot be manually configured.
	P2P is a private network traversal technology which enables user to
P2P	manage devices without requiring DDNS, port mapping or transit
	server.
$\overline{\square}$	·

- Make sure that the computer used to log in to the web is in the same LAN with the device.
- 7-inch model X access controllers of have dual NICs. The default management address for 1000M network port is 192.168.1.108, and for 100M network port is 192.168.2.108.

3.9.1.2 Active Register

By active registering, you can connect the access controller to the management platform, and then you can manage the access controller through the management platform.



Configurations you have made can be cleared on the managing platform, and the access controller can be initialized, you need to protect the platform managing permission in case of data loss caused by improper operation.

For active register parameter, see Table 3-7.

Name	Parameter
Server IP Address	IP address of the managing platform.
Port	Port number of the managing platform.
Device ID	Subordinate device number on the managing platform.

Table 3-7 Active register

3.9.1.3 Wi-Fi

You can connect the access controller to the network through Wi-Fi if the access controller has Wi-Fi function.

3.9.2 Serial Port Settings

Select serial input or serial output according to the use of the external devices.

Select **Connection > Serial Port**, and then the **Serial Port** interface is displayed.

Figure 3-14 Serial port

←)	Serial Port	
Serial Input		~
Serial Output		
OSDP Input		


- Select **Serial Input** when external devices that are with card reading and writing functions are connected to the access controller. **Serial Input** is selected to enable access card information to be sent to the access controller and the management platform.
- For access controllers with face recognition, card reading and writing functions, if you select **Serial Output**, access controller will send lock/unlock information to the access controller. There are two types of lock/unlock information:
 - ♦ User ID
 - ♦ Card No.
- Select OSDP Input when card reader of OSDP protocol is connected to the access controller. The access controller can send card information to the management platform.

3.9.3 Wiegand Configuration

Select Wiegand Input or Wiegand Output accordingly.

Select **Connection > Wiegand**, and then the Wiegand interface is displayed.

Figure 3-15 Wiegand

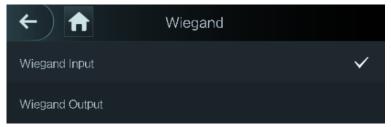

- Select **Wiegand Input** when an external card swipe mechanism is connected to the access controller.
- Select **Wiegand Output** when the access controller works as a reader that can be connected to the controller. See Table 3-8.

Parameter	Description		
	The Wiegand Output Type determines the card number or the digit		
	of the number that can be recognized by the access controller.		
Wiegand Output Type	Wiegand26, three bytes, six digits.		
	Wiegand34, four bytes, eight digits.		
	Wiegand66, eight bytes, sixteen digits.		
Pulse Width	You can set pulse width and pulse interval.		

Table 3-8	Wiegand	output
-----------	---------	--------

Parameter	Description	
Pulse Interval		
Output Data Type	 You can select the types of output data. User ID: If User ID is selected, and then user ID will be output. Card No.: If Card No. is selected, and then card number will be output. 	

3.10 System

3.10.1 Time

You can do date format setting, date setting, time setting, DST setting, NTP check, and time zone settings.

- When you select **Network Time Protocol** (NTP), you need to enable the NTP Check function first. Server IP Address: enter the IP address of the time server, time of the access controller will be synchronized with the time server.
- Port: Enter the port number of the time server.
- Interval (min): NPT check interval. Tap the save icon to save.

3.10.2 Face Parameter

Face ParameterFace Recognition Threshold85Max. Angle of Face Recognition90Pupillary Distance85Recognition Timeout (S)3Invalid Face Prompt Interval (S)3Anti-fake ThresholdImage of the standard of the stand	Figure 3-16 Face parameter	
Max. Angle of Face Recognition90Pupillary Distance85Recognition Timeout (S)3Invalid Face Prompt Interval (S)3Anti-fake ThresholdImage: Image:	← ↑ Face Parameter	
Pupillary Distance85Recognition Timeout (S)3Invalid Face Prompt Interval (S)3Anti-fake ThresholdImage: Compare the state of the state	Face Recognition Threshold	85
Recognition Timeout (S)3Invalid Face Prompt Interval (S)3Anti-fake ThresholdImage: ContemportTemperature MonitoringImage: ContemportTemp Monitoring Distance(cm)5High Temp Threshold37.3Low Temp Threshold35.0Temp Correction Value0.0Temp Monitoring Timeout(s)10Mask modeNot detect	Max. Angle of Face Recognition	90
Invalid Face Prompt Interval (S)3Anti-fake ThresholdImportTemperature MonitoringImportTemp Monitoring Distance(cm)5High Temp Threshold37.3Low Temp Threshold35.0Temp Correction Value0.0Temp Monitoring Timeout(s)10Mask modeNot detect	Pupillary Distance	85
Anti-fake ThresholdImage: Composition of the text of the text of text	Recognition Timeout (S)	3
Temperature MonitoringTemp Monitoring Distance(cm)Temp Monitoring Distance(cm)High Temp Threshold37.3Low Temp ThresholdStopTemp Correction Value0.0Temp Monitoring Timeout(s)Mask modeNot detect	Invalid Face Prompt Interval (S)	3
Temp Monitoring Distance(cm)5High Temp Threshold37.3Low Temp Threshold35.0Temp Correction Value0.0Temp Monitoring Timeout(s)10Mask modeNot detect	Anti-fake Threshold	OFF
High Temp Threshold37.3Low Temp Threshold35.0Temp Correction Value0.0Temp Monitoring Timeout(s)10Mask modeNot detect	Temperature Monitoring	
Low Temp Threshold35.0Temp Correction Value0.0Temp Monitoring Timeout(s)10Mask modeNot detect	Temp Monitoring Distance(cm)	5
Temp Correction Value 0.0 Temp Monitoring Timeout(s) 10 Mask mode Not detect	High Temp Threshold	37.3
Temp Monitoring Timeout(s) 10 Mask mode Not detect	Low Temp Threshold	35.0
Mask mode Not detect	Temp Correction Value	0.0
	Temp Monitoring Timeout(s)	10
Temp Unit ℃	Mask mode	Not detect
	Temp Unit	Ţ

Figure 3-16 Face parameter

Tap a parameter and do configuration, and then tap

Table 3-9 Face parameter

Name	Description
Face Recognition	Face recognition accuracy can be adjusted. The larger the value is,
Threshold	the higher the accuracy will be.

Name	Description	
Max. Angle of Face	Set the control panel shooting angle of profiles. The larger the value	
Recognition	is, the wider range of the profiles will be recognized.	
Pupillary Distance	Pupillary distance is the pixel value of the image between the centers of the pupils in each eye. You need to set an appropriate value so that the access controller can recognize faces as needed. The value changes according to the face sizes and the distance between faces and the lens. The closer the face is to the lens, the greater the value should be. If an adult is 1.5 meters away from the lens, the pupillary distance value can be within 50 to 70.	
Recognition Timeout	When a person who does not have the access permission stands in front of the access controller and gets the face recognized, the controller will prompt that face recognition failed. The prompt interval is called recognition timeout.	
Recognition Interval	When a person who has the access permission stands in front of the access controller and gets the face recognized, the controller will prompt that face recognition succeeded. The prompt interval is the recognition interval.	
Invalid Face Promp Interval	When a face has no access permission stands in front of the access controller, the controller will prompt that the face is invalid. The prompt interval is invalid face prompt interval.	
Anti-fake Threshold	This function prevents people from unlocking by human face images or face models. The larger the value is, the more difficult face images can unlock the door. The recommended value range is above 80.	
Temperature Monitoring	 Set whether to enable the body temperature monitoring. Temp Unit: Select a temperature unit. Temp Monitoring Distance (cm): The value is 5 cm by default. Set other values to enable temperature monitoring within a defined distance ranging from 2 cm – 5 cm. High Temp Threshold: Set the high temperature threshold. The monitored body temperature will be judged as high temperature if it is greater than or equal to the set value. Low Temp Threshold: Set the low temperature threshold. The body temperature will not be monitored if it is less than the set value. Temp Correction Value: This parameter is for testing. The difference of the temperature monitoring environment might cause the temperature deviation between the monitored temperature deviation between the monitored temperature deviation by this parameter according to the comparison between the monitored temperature. For example, if the monitored temperature is 0.5°C lower than the actual temperature, the correction value is set to -0.5°C. 	

Name	Description		
	 Temp Monitoring Timeout(s): Set the temperature monitoring duration. If monitoring time is longer than this value, the display will prompt to start the next temperature monitor. Only the access controller with a temperature monitoring unit supports this parameter. 		
Mask Mode	 No detect: Mask is not detected during face recognition. Mask reminder: Mask is detected during face recognition. If the person is detected without wearing a mask, the system will prompt mask reminder and passage is allowed. Mask intercept: Mask is detected during face recognition. If the person is detected without wearing a mask, the system will prompt mask reminder and passage is not allowed. 		

3.10.3 Image Mode

There are three options:

- Indoor: Select Indoor when the access controller is installed indoors;
- Outdoor: Select **Outdoor** when the access controller is installed outdoors;
- Other: Select **Other** when the access controller is installed at places with backlights like corridors and hallways.

3.10.4 Fill Light Mode Setting

You can select fill light modes according to your needs. There are three modes:

- Auto: When the photo sensor detects that the ambient environment is not dark, the fill light is normally off; otherwise, the fill light will be on.
- NO: The fill light is normally on.
- NC: The fill light is normally closed.

3.10.5 Fill Light Brightness Setting

You can select fill light brightness according to your needs.

3.10.6 Volume Adjustment

Tap or to adjust the volume.

3.10.7 IR Light Brightness Adjustment

The larger the value is, the clearer the images will be; otherwise the unclearer the images will be.

3.10.8 Restore to Factory Settings



- Data will be lost if you restore the access controller to the factory settings.
- After the access controller is restored to the factory settings, IP address will not be changed.

You can select whether to retained user information and logs.

- You can select to restore the access controller to the factory settings with all user information and device information deleted.
- You can select to restore the access controller to the factory settings with user information and device information retained.

3.10.9 Reboot

Select **Setting > Reboot**, tap **Reboot**, and the access controller will be rebooted.

3.11 USB



- Make sure that the USB is inserted before exporting user information and updating. During exporting or updating, do not pull out the USB or do other operations; otherwise the exporting or updating will fail.
- You need to import information from one access controller to the USB before using USB to import information to another access controller.
- USB can also be used to update the program.

3.11.1 USB Export

You can export data from the access controller to the USB after inserting the USB. The data exported is encrypted and cannot be edited.

<u>Step 1</u> Select USB > USB Export.

The **USB Export** interface is displayed.

★ ► USB Export
Select one to export
Select one to export
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥ ●
♥

Figure 3-17 USB export

- <u>Step 2</u> Select the data type that you want to export.
 - The prompt Confirm to export is displayed.
- <u>Step 3</u> Tap **OK**.

Data exported will be saved in the USB.

3.11.2 USB Import

Only data in the USB that was exported from one access controller can be imported into another access controller.

<u>Step 1</u> Select USB > USB Import.

The **USB Import** interface is displayed.

	Figure 3-18 US	B Import
←		3 Import
	Select o	one to import
	=	·D
	User	Face Feature Value
	Ē	@
		T T
	Card	FP

- <u>Step 2</u> Select the data type that you want to import. The prompt **Confirm to import** is displayed.
- Step 3 Tap OK.

Data in the USB flash drive will be imported into the access controller.

3.11.3 USB Update

USB flash drive can be used to update the system.

<u>Step 1</u> Rename the updating file name to "update.bin", and save the "update.bin" file in the root directory of the USB flash drive.

 \square

- Make sure that the computer used to log in to the web is in the same LAN with the device.
- 7-inch model X access controllers of have dual NICs. The default management address for 1000M network port is 192.168.1.108, and for 100M network port is 192.168.2.108.
- <u>Step 2</u> Select USB > USB Update.

The prompt **Confirm to Update** is displayed.

<u>Step 3</u> Tap **OK**.

The update starts, and the access controller reboots after the update is finished.

3.12 Features

You can do settings about privacies, card number reverse, security module, door sensor type, and result feedback. For details of the functions mentioned, see Figure 3-19 and Table 3-10.

Figure 3-19 Features

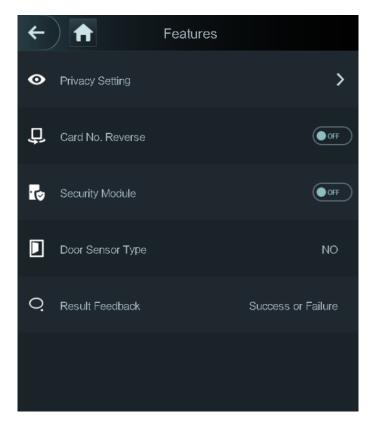


Table 3-10 Feature description

Parameter	Description	
Privacy Setting	See "3.12.1 Privacy Setting" for details.	
	If the third party card reader needs to be connected to the access	
	controller through the wiegand output port, you need to enable the	
Card No. Reverse	Card No. Reverse function; otherwise the communication between	
	the access controller and the third party card reader might fail due to	
	protocol discrepancy.	
	• If the security module is enabled, you need to purchase access	
	control security module separately. The security module needs	
Security Module	separate power supply to provide power.	
	• Once the security module is enabled, the exit button, lock control,	
	firefighting linkage and temperature monitor will be invalid.	
Door Sensor Type	There are two options: NO and NC .	
Result Feedback	Displays whether the unlock succeeded or failed.	

3.12.1 Privacy Setting

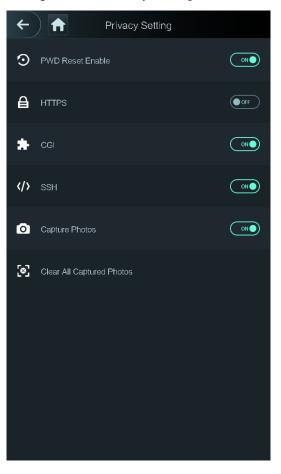


Figure 3-20 Privacy setting

Table 3-11 Features

Parameter	Description		
PWD Reset If the PWD Reset Enable function is enabled, you can reset the pa			
Enable The PWD Reset function is enabled by default.			
	Hypertext Transfer Protocol Secure (HTTPS) is a protocol for secure		
	communication over a computer network.		
	When HTTPS is enabled, HTTPS will be used to access CGI commands;		
HTTPS	otherwise HTTP will be used.		
	When HTTPS is enabled, the access controller will restart automatically.		
	Common Gateway Interface (CGI) offers a standard protocol for web		
	servers to execute programs that execute like console applications running		
CGI	on a server that generates web pages dynamically.		
	When CGI is enabled, CGI commands can be used. The CGI is enabled by		
	default.		
	Secure Shell (SSH) is a cryptographic network protocol for operating		
SSH	network services securely over an unsecured network.		
	When SSH is enabled, SSH provides cryptographic service for the data		
	transmission.		
Capture photo	If you select ON, when a user unlocks the door, the user's photo will be		

Parameter	Description
	automatically taken. This function is ON by default.
Clear all captured photos	Tap the icon, and you can delete all captured photos.

3.12.2 Result Feedback

You can select a result feedback mode as needed.

Mode 1



Figure 3-21 Mode 1

Mode 2



Mode 3

Figure 3-23 Mode 3



Mode 4



Figure 3-24 Mode 4

3.13 Record

You can query all unlocking records.

4	Se:	arch Punch Rec	ords	Q
User	ID. Name	Time	Status V	erify Mode
		09-05 17:21	Failed	Face
1	zxl	09-05 17:19	ок	Face
1	zxl	09-05 17:19	ок	Face
1	zxl	09-05 17:19	ок	Face
1	zxl	09-05 17:19	ок	Face
		09-05 17:18	Failed	Face
		09-05 17:18	Failed	Face
		09-05 17:18	Failed	Face
		09-05 17:18	Failed	Face
		09-05 17:18	Failed	Face
		09-05 17:18	Failed	Face
		09-05 17:18	Failed	Face
	K	1/6	>	>

Figure 3-25 Search punch records

3.14 Auto Test

When you use the access controller for the first time or when the access controller malfunctioned, you can use auto test function to check whether the access controller can work normally. Do actions according to the prompts.

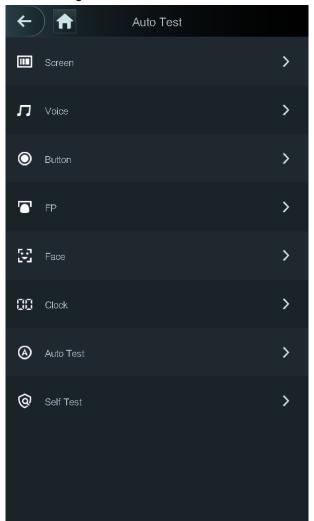


Figure 3-26 Auto test

 \square

When you select Auto Test, the access controller will guide you to do all the auto tests.

3.15 System Info

You can view data capacity, device version, and firmware information of the access controller on the **System Info** interface.

4 Web Operations

The access controller can be configured and operated on the web. Through the web you can set network parameters, video parameters, and access controller parameters; and you can also maintain and update the system.

4.1 Initialization

You need to set a password and an email address before logging in to the web for the first time. <u>Step 1</u> Open IE web browser, and enter the IP address (the default address is 192.168.1.108)

of the access controller in the address bar, and then press Enter.

- Use browser newer than IE 8, otherwise you might not log in to the web.
- Make sure that the computer used to log in to the web is in the same LAN with the device.
- 7-inch model X access controllers of have dual NICs. The default IP address for 1000M network port is 192.168.1.108, and for 100M network port is 192.168.2.108.

Boot Wizard	
① Device Initialization	
Username	admin
New Password	Low Medium High
Confirm Password	Password shall be at least 8 digits, and shall at least include two types, including number, letter and common character
Bind Email	(It will be used to reset password. Please fill in or complete it timely) Next



<u>Step 2</u> Enter the new password, confirm password, enter an email address, and then click **Next**.

 \square

 The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' "; : &). Set a password of high security level according to the password strength prompt.

- For security, keep the password properly after initialization and change the • password regularly.
- When you need to reset the administrator password by scanning the QR code, you need an email address to receive the security code.

```
Step 3 Click Next.
```

ů	
Boot Wizard	
O Device Initialization	—2 Auto Check
Auto Check	
Realize check tips of new version To inform you of the latest firmware upgrades for your device, we need to collect device info such as IP address, device name, firmware version, device SN, etc. All collected info is used only for the purposes of verifying device validity and pushing upgrade notifications.	
	Next

Figure 4-2 Auto check

<u>Step 4</u> You can decide whether to select **Auto Check** or not.

 \square

It is recommended that Auto Check be selected to get the latest program in time. Step 5 Click Next.

Figure 4-3 Finished configuration

Boot Wizard	
O Device Initialization	—— Auto Check
	Complete

<u>Step 6</u> Click **Complete**, and the initialization is completed.

The web login interface is displayed.

4.2 Login

<u>Step 1</u> Open IE web browser, enter the IP address of the access controller in the address bar, and press **Enter**.

 \square

- Use browser newer than IE 8, otherwise you might not log in to the web.
- Make sure that the computer used to log in to the web is in the same LAN with the device.
- 7-inch model X access controllers of have dual NICs. The default management address for 1000M network port is 192.168.1.108, and for 100M network port is 192.168.2.108.

WEB SERVICE	
Username:	
Password:	
	Forget Password?
Login	

Figure 4-4 Login

<u>Step 2</u> Enter the user name and password.

 \square

- The default administrator name is admin, and the password is the login password after initializing the access controller. Modify the administrator regularly and keep it properly for the sake of security.
- If you forget the administrator login password, you can click Forgot password? to reset it. See "4.3 Resetting the Password."


Step 3 Click Login.

The web interface is logged in.

4.3 Resetting the Password

When resetting the password of the admin account, your email address will be needed. <u>Step 1</u> Click **Forgot password?** on the login interface.

The **Tips** interface is displayed.

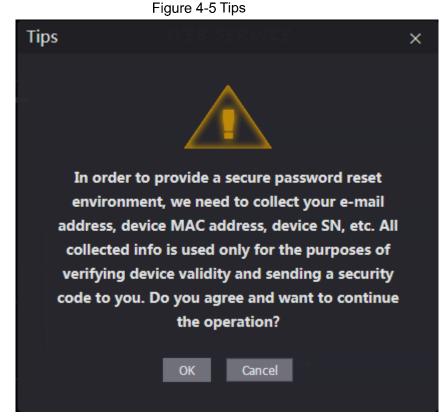

- Step 2 Read the tips.
- Step 3 Click OK.
 - The **Reset Password** interface is displayed.
 - Figure 4-6 Reset Password



Step 4 Scan the QR code on the interface, and you will get the security code.



- At most two security codes will be generated by scanning the same QR code. If security codes become invalid, to get more security codes, refresh the QR code.
- You need to send the content you get after you scanned the QR code to the designated email address, and then you will get the security code.
- Please use the security code within 24 hours after you receive it. Otherwise, it will become invalid.
- If wrong security codes are entered for consecutive five times, the administrator will be frozen for five minutes.
- <u>Step 5</u> Enter the security code you have received.
- Step 6 Click Next.

The Reset Password interface is displayed.

<u>Step 7</u> Reset and confirm the new password.

\square

The password should consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' "; : &).

Step 8 Click OK, and the reset is completed.

4.4 Alarm Linkage

4.4.1 Setting Alarm Linkage

Alarm input devices can be connected to the access controller, and you can modify the alarm linkage parameter as needed.

<u>Step 1</u> Select **Alarm Linkage** on the navigation bar.

The Alarm Linkage interface is displayed.

Figure 4-7 Alarm linkage

Alarm Linkage	-			
Refresh				
Alarm Input	Name	Alarm Input Type	Alarm Output Channel	Modify
1	Zone1	NO	1	1
2	Zone2	NO	1	1

Step 2 Click , and then you can modify alarm linkage parameters.

Figure 4-8 Modifying alarm linkage parameter

Modify		×
Alarm Input		
Name	Zone1	
Alarm Input Type	NO	
Fire Link Enable		
Alarm Output Enable		
Duration (Sec.)	30	(1~300)
Alarm Output Channel	✓ 1 2	
Access Link Enable		
Channel Type	NO	
		OK Cancel

Table 4-1 Alarm linkage parameter description

Parameter	Description		
Alarm Input	You cannot modify the value. Keep it default.		
Name	Enter a zone name.		
	There are two options: NO and NC.		
Alarm Input Type	If alarm input type of the alarm device you purchased is NO, then you		
	should select NO; otherwise you should select NC.		
	If fire link is enabled the access controller will output alarms when fire		
	alarms are triggered. The alarm details will be displayed in the alarm		
Fire Link Enable	log.		
	Alarm output and access link are NO by default if fire link is enabled.		
Alarm Output	The relay can output alarm information (will be sent to the		
Enable	management platform) if the Alarm Output is enabled.		
Duration (Sec.)	The alarm duration, and the range is 1–300 seconds.		
Alarm Output	You can select an alarm output channel according to the alarming		
Channel	device that you have installed. Each alarm device can be regarded as		
Channel	a channel.		
Access Link	After the Access Link is enabled, the access controller will be normally		
Enable	on or normally closed when there are input alarm signals.		
Channel Type	There are two options: NO and NC.		

<u>Step 3</u> Click **OK**, and then the configuration is completed.

 \square

The configuration on the web will be synchronized with the configuration in the client if the access controller is added to a client.

4.4.2 Alarm Log

You can view the alarm type and time range in the Alarm Log interface.

<u>Step 1</u> Select Alarm Linkage > Alarm Log.

The Alarm Log interface is displayed.

Figure 4-9 Alarm log

Alarm Log				
Time Range Type	© 2018-12-03 00:00:00 2018-12-04 0 All • Query			
No.	Event Code		Time	
		No data		
			i∢ ∢ 1/1 ▶ ⊮ Go to	

<u>Step 2</u> Select a time range and alarm type, and then click **Query**.

The query results are displayed.


Figure 4-10 Query results

	Alarm Log		
	Time Range	2018-12-03 00:00:00 2018-12-04 00:00:00	
Ι.	Туре	All Query Find 1 Lo	g Time 2018-12-03 00:00:00 2018-12-04 00:00:00
	No.	Event Code	Time
	1	ChassisIntruded Alarm	2018-12-03 12:03:54

4.5 Data Capacity

You can see how many users, cards and face images the access controller can hold on the **Data Capacity** interface.

Figure 4-11 Data capacity

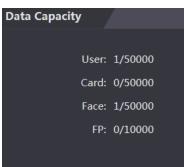

4.6 Video Setting

You can set parameters including data rate, image parameters (brightness, contrast, hue, saturation, and more), and exposure on the **Video Setting** interface.

4.6.1 Data Rate

Video Stand	ard PAL	-	
Channel Id	1	•	
▶ Data Rate	Main Format		
▶ Image	Video Format	1080P	-
	Frame Rate	30	▼
 Exposure 	Bitrate	2Mbps	-
	Extra Format		
	Video Format	VGA	-
	Frame Rate	30	-
	Bitrate	1024Kbps	•

Figure 4-12 Data rate

Table 4-2 Data rate par	rameter description
-------------------------	---------------------

Parameter	Description
Video Standard	There are two options: NTSC and PAL. Select a standard
	according to the video standard of your region.
Channel	There are two options: 1 and 2. 1 is white light camera and 2 is IR
	light camera.

Paramete	ər	Description
	Video Format	There are four options: D1, VGA, 720p and 1080p. Select an option according to the video quality you want.
Main Format	Frame Rate	The rate at which consecutive frames appear on a display. The frame rate range is 1–30fps.
	Bit Rate	The number of bits that are conveyed or processed per unit of time. There are five options: 2Mbps, 4Mbps, 6Mbps, 8Mbps, and 10Mbps.
	Video Format	There are three options: D1, VGA, and QVGA.
Extra	Frame Rate	The rate at which consecutive frames appear on a display. The frame rate range is 1–30fps.
Format	Bit Rate	The number of bits that are conveyed or processed per unit of time. There are options: 512Kbps, 640Kbps, 768Kbps, 896Kbps, 1024Kbps, 1.25Mbps, 1.5Mbps, 1.75Mbps, and 2Mbps.

4.6.2 Image

There are two channels, and you need to configure parameters for each channel.

<u>Step 1</u> Select Video Setting > Video Setting > Image.

Figure 4-13 Image

Video Setting					
					•
	▶ Data Rate	Brightness		50	
	▶ Image	Contrast		50	
	► Exposure	Hue		50	
		Saturation		50	
		SceneMode	Sunny		
		Day/Night	Colorful		
		Mode			
		BackLight Mode	Close		
		Mirror	Enable		
		Flip	🔵 Enable 🔵		
Default					

<u>Step 2</u> Select **Wide Dynamic** in the Backlight Mode.

Table 4-3 Image	parameter description
Tuble + 0 mage	purumeter decomption

Parameter	Description
Brightness	The larger the value is, the brighter the images will be.
	Contrast is the difference in luminance or color that makes an object
Contrast	distinguishable. The larger the contrast value is, the greater the
	brightness and color contrast will be.
Hue	The larger the value is, the deeper the color will be.
Seturation	The larger the value is, the brighter the colors will be.
Saturation	

Parameter	Description
	The value does not change image brightness.
Scene Mode	 Close: Without modes. Auto: The system automatically adjusts scene modes. Sunny: In this mode, image hue will be reduced. Night: In this mode, image hue will be increased.
	Sunny is selected by default.
Day/Night Mode	 Day/Night mode decides the working status of the fill light. Auto: The system automatically adjusts the day/night modes. Colorful: In this mode, images are with colors. Black and white: In this mode, images are in black and white.
Back Light Mode	 Close: Without backlight compensation. BLC: Backlight compensation corrects regions with extremely high or low levels of light to maintain a normal and usable level of light for the object in focus. WDR: In the wide dynamic range mode, the system dims bright areas and compensates dark areas to ensure the definition of objects in the bright areas and dark areas.
	 When human faces are in the backlight, you need to enable WDR. HLC: Highlight compensation is needed to compensate for overexposure of highlights or strong light sources like spotlights, headlights, porch lights, etc. to create an image that is usable and not overtaken by a bright light.
Mirror	When the function is enabled, images will be displayed with left and right side reversed.
Flip	When this function is enabled, images can be flipped over.

4.6.3 Exposure

Table 4-4 Exposure parameter description

Parameter	Description
	• 50Hz: When the utility frequency of alternating current is 50Hz, the
	exposure is automatically adjusted to make sure that there are no
	stripes on images.
Anti-flicker	• 60Hz: When the utility frequency of alternating current is 60Hz, the
Anti-micker	exposure is automatically adjusted to make sure that there are no
	stripes on images.
	• Outdoor: When Outdoor is selected, the exposure mode can be
	switched.
Exposure Mode	• When you select Outdoor in the Anti-flicker drop-down list, you
	can select Shutter Priority as the exposure mode.
	• Exposure modes of different devices might vary, and the actual

Parameter	Description
	product shall prevail.
	You can select from:
	 Auto: The access controller will automatically adjust brightness of images.
	 Shutter Priority: The access controller will adjust image brightness according to shutter exposure value range. If the image brightness is not enough and the shutter value has reached upper or lower limit, the access controller will adjust gain value automatically to get ideal brightness.
	 Manual: You can configure gain and shutter value manually to adjust image brightness.
Shutter	The larger the shutter value is and the shorter the exposure time is, the darker the images will be.
Shutter Value Range	If you select Customized Range , you can customize the shutter value range.
Gain Value Range	When the gain value range is set, video quality will be improved.
Exposure	You can increase video brightness by adjusting exposure
Compensation	compensation value.
3D NR	When 3D Noise Reduction (RD) is enabled, video noise can be reduced, and high definition videos will be produced.
	You can adjust the value of the 3D NR when 3D NR is enabled.
Grade	The larger the value is, the less the noise there will be.


4.6.4 Motion Detection

Set a range in which moving objects can be detected.

<u>Step 1</u> Select Video Setting > Video Setting > Motion Detection.

The Motion Detection interface is displayed.

Figure 4-14 Motion detection

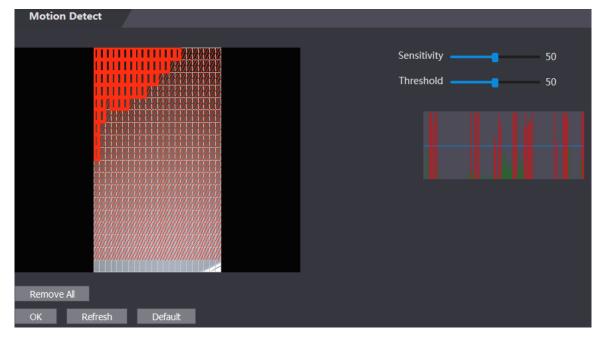


<u>Step 2</u> Press and hold the left mouse button, and then drag the mouse in the red area. The **Motion Detection** area is displayed.

 \square

- The red rectangles are motion detection area. The default motion detection range is all the rectangles.
- To draw a motion detection area, you need to click **Remove All** first.
- The motion detection area you draw will be a non-motion detection area if you draw in the default motion detection area.

Figure 4-15 Motion detection area

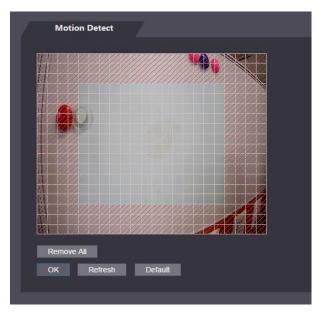

<u>Step 3</u> Set sensitivity and threshold.


 \square

- Sensitivity represents the ability of each grid to sense motion. The larger the value is, the higher the sensitivity is.
- Threshold is the condition of motion detection. When grid number reaches the threshold, motion detection will be triggered. The smaller the value is, the more likely the motion detection will be triggered.
- When grid number is smaller than the threshold, green line will appear; when grid number is more than the threshold, red line will appear. See Figure 4-14.

<u>Step 4</u> Click **OK** to finish the setting.

4.6.5 Volume Setting

You can adjust volume of the access controller speaker.

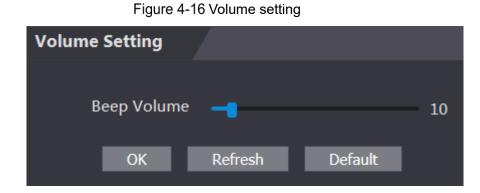

4.6.6 Image Mode

There are three options: indoor, outdoor and other. Select **Indoor** when the access controller is installed indoors; select **Outdoor** when the access controller is installed outdoors; and select **Other** when the access controller is installed at places with backlights like corridors and hallways.




Image Mode	
Image Mode Setting	Indoor 🔺
	Indoor
	Outdoor
	Other

4.7 Face Detect

You can configure human face related parameters on this interface to increase the accuracy of the face recognition.

Step 1 Select Face Detect.

Figure 4-18 Face detect

Face Detect			
	Face Recognition Threshold		85
2 C. 2	Max. Angle of Face Recognition		90
	Anti-fake Threshold	Enable OClose	
all and	Fill Light Brightness Setting		20
	Fill Light Mode Setting	NO NC O Auto	
	Infrared Light		30
	Recognition Timeout (S)	3	(1-6)
	Invalid Face Prompt Interval (S)	3	(1-6)
	Pupillary Distance	85	(0-500)
	Channel Id	1 👻	
Target Filter Min Size 900 * 900	Enable Face Exposure	Enable Close	
Draw Target Remove All	Face Target Brightness		50
Detect Region Remove All	Face Exposure Interval	10	(1-28800)
	Detection Time (S)		
	Temperature Monitoring		
	Temp Unit	۳ 🕶	
	Temp Monitoring Distance(cm)	5	(2-5)
	Temp Monitoring Timeout(s)	10	(5-15)
	High Temp Threshold	37.3	(30-45)
	Low Temp Threshold	35.0	(30-45)
	Temp Correction Value	0.0	(-45-45)
	Mask mode	Not detect 🛛 👻	
		OK Refresh De	efault

<u>Step 2</u> Configure parameters.

Table 4-5 Face detect parameter description

Parameter	Description		
Face Recognition Threshold The larger the value is, the higher the accuracy will be.			
Max. Angle of Face The larger the angle is, the wider range of the profiles Recognition recognized.			
Anti-fake Threshold	This function prevents people from unlocking by human face images or face models. There are two options: Enable and Close .		
Fill Light Brightness Setting			
Fill Light Mode Setting	 There are three fill light modes. NO: Fill light is normally on. NC: Fill light is normally closed. Auto: Fill light will be automatically on when a motion detection event is triggered. When Auto is selected, the fill light will not be on even if Infrared Light value is greater than 19. 		

Parameter	Description			
Infrared Light	Adjust IR brightnees by dragging the scroll bar.			
Recognition Timeout	When a person who does not have the access permission stands in front of the access controller and gets the face recognized, the controller will prompt that face recognition failed. The prompt interval is called recognition timeout.			
Invalid Face Prompt Interval	When a face has no access permission stands in front of the access controller, the controller will prompt that the face is invalid. The prompt interval is invalid face prompt interval.			
Pupillary Distance	Pupillary distance is the pixel value of the image between the centers of the pupils in each eye. You need to set an appropriate value so that the access controller can recognize faces as needed. The value changes according to the face sizes and the distance between faces and the lens. The closer the face is to the lens, the greater the value should be. If an adult is 1.5 meters away from the lens, the pupillary distance value can be within 50 to 70.			
Enable Face	After face exposure is enabled, human face will be clearer when the			
Exposure	access controller is installed outdoors.			
Channel Id	There are two options: 1 and 2. 1 is white light camera and 2 is IR light camera.			
Draw Target	Click Draw Target , and then you can draw the minimum face detection frame. Click Remove All , and you can remove all the frames you drew.			
Detect Region	Click Detect Region , move your mouse, and you can adjust the face detection region. Click Remove All , and you can remove all the detection regions.			
Face Target Brightness The default value is 50. Adjust the brightness as needed.				
Face Exposure Interval	After a face is detected, the access controller will give out light to illuminate the face, and the access controller will not give out light again until the interval you set has passed.			
Temperature MonitoringSet whether to enable the body temperature monitoring.Temperature MonitoringTemp Monitoring Distance (cm): The value is 5 cm by do other values to enable temperature monitoring within distance ranging from 2 cm - 5 cm.High Temp Threshold: Set the high temperature three monitored body temperature will be judged as high temp it is greater than or equal to the set value.Low Temp Threshold: Set the low temperature three monitored body temperature will not be monitored if it is the set value.Temp Correction Value: This parameter is for test difference of the temperature deviation between the temperature and the actual temperature. You can sele				

Parameter	Description				
	 monitored samples for testing, and then correct the temperature deviation by this parameter according to the comparison between the monitored temperature and the actual temperature. For example, if the monitored temperature is 0.5°C lower than the actual temperature, the correction value is set to 0.5°C; if the monitored temperature is 0.5°C higher than the actual temperature, the correction value is set to -0.5°C. Temp Monitoring Timeout(s): Set the temperature monitoring duration. If monitoring time is longer than this value, the display will prompt to start the next temperature monitor. 				
	Only the access controller with a temperature monitoring unit supports				
Mask Mode	 this parameter. No detect: Mask is not detected during face recognition. Mask reminder: Mask is detected during face recognition. If the person is detected without wearing a mask, the system will prompt mask reminder and passage is allowed. Mask intercept: Mask is detected during face recognition. If the person is detected without wearing a mask, the system will prompt mask reminder and passage is allowed. 				

<u>Step 3</u> Click **OK** to finish the setting.

4.8 Network Setting

4.8.1 TCP/IP

You need to configure IP address and DNS server to make sure that the access controller can communicate with other devices.

Make sure that the access controller is connected to the network correctly. <u>Step 1</u> Select Network Setting > TCP/IP.

TCP/IP	
IP Version	IPv4 T
MAC Address	9c:14:63:17:5b:47
Mode	Static ○ DHCP
IP Address	
Subnet Mask	
Default Gateway	
Preferred DNS Server	8.8.8.8
Alternate DNS Server	8.8.4.4
	OK Refresh Default

Figure 4-19 TCP/IP

<u>Step 2</u> Configure parameters.

Table 4-6 TCP/IP

Parameter	Description		
IP Version	There is one option: IPv4.		
MAC Address	MAC address of the access controller is displayed.		
Mode	 Static Set IP address, subnet mask, and gateway address manually. DHCP After DHCP is enabled, IP address, subnet mask, and gateway address cannot be configured. If DHCP is effective, IP address, subnet mask, and gateway address will be displayed automatically; if DHCP is not effective, IP address, subnet mask, and gateway address will all be zero. If you want to see the default IP when DHCP is effective, you need to disable DHCP. 		
Link-local address	Link-local address is only available when IPv6 is selected in the IP version. Unique link-local addresses will be assigned to network interface controller in each local area network to enable communications. The link-local address cannot be modified.		
IP Address	Enter IP address, and then configure subnet mask and gateway address.		
Subnet Mask			
Default Gateway	IP address and gateway address must be in the same network segment.		
Preferred DNS Server	Set IP address of the preferred DNS server.		
Alternate DNS Server	Set IP address of the alternate DNS server.		

Step 3 Click **OK** to complete the setting.

4.8.2 Port

Set the maximum connections clients that the access controller can be connected to and port numbers.

<u>Step 1</u> Select Network Setting > Port.

The Port interface is displayed.

<u>Step 2</u> Configure port numbers. See the following table.

 \square

Except max connection, you need to reboot the access controller to make the configuration effective after modifying values.

Parameter	Description		
	You can set the maximum connections of clients that the access controller		
Max	can be connected to.		
Connection			
	Platform clients like Smart PSS are not counted.		
TCP Port	Default value is 37777.		
HTTP Port	Default value is 80. If other value is used as port number, you need to add		
ΠΠΡΡΟΠ	this value behind the address when logging in through browsers.		
HTTPS Port	Default value is 443.		
RTSP Port	Default value is 554.		

Table 4-7 Port description

<u>Step 3</u> Click **OK** to complete the setting.

4.8.3 Register

When connected to external network, the access controller will report its address to the server that is designated by the user so that clients can get access to the access controller.

<u>Step 1</u> Select Network Setting > Auto Register.

The Auto Register interface is displayed.

<u>Step 2</u> Select **Enable**, and enter host IP, port, and sub device ID.

Description
Server IP address or server domain name.
Server port used for auto registeration.
Access controller ID assigned by the server.

Table 4-8 Auto register description

Step 3 Click **OK** to complete the setting.

4.8.4 P2P

Peer-to-peer computing or networking is a distributed application architecture that partitions tasks or workloads between peers. Users can download mobile application by scanning QR code, and then register an account so that more than one access controller can be managed on

the mobile app. You do not need to apply dynamic domain name, do port mapping or do not need transit server.

 $\underline{\mathbb{N}}$

If you are to use P2P, you must connect the access controller to external network; otherwise the access controller cannot be used.



Figure 4-20 P2P

<u>Step 1</u> Select Network Setting > P2P.

The **P2P** interface is displayed.

- <u>Step 2</u> Select **Enable** to enable P2P function.
- <u>Step 3</u> Click **OK** to complete the setting.

\square

Scan the QR code on your web interface to get the serial number of the access controller.

4.9 Date Setting

You need to set time zone, time, DST, and NTP for the access controller.

 \square

Only access controllers of certain models support this function.

<u>Step 1</u> Select Date Setting.

The Date Setting interface is displayed.

Date Setting		
Time Zone	GMT+08:00	<u>*</u>
System Time	2019-12-07	15 : 15 : 39 Sync with PC
DST	Enable O Close	
Date Setting	O Date Week	
Starting Time	January	▼ 1 ▼ 00 : 00
Ending Time	January	▼ 2 ▼ 00 : 00
NTP Setting		
Server	clock.isc.org	
Port	123	
Update Cycle	60	Min.
	OK Refrest	h Default

Figure 4-21 Date Setting

Step 2 Set parameters.

Table 4-9 Date setting


Parameter	Description			
Time Zone	Select time zone as needed.			
Sustem Time	You can set system time manually, or you can click Sync with PC, to			
System Time	scynchronize access controller time with the computer time.			
	1. Enable DST.			
DST	2. Select Date or Week in Date Setting.			
	3. Set Starting Time and Ending Time.			
	1. Enable NTP Setting.			
	2. Configure parameters.			
	\diamond Server: Enter domain name of the NTP server. The access			
NTP Setting	controller time will be synchronized with the NTP server.			
NTF Setting	\diamond Port: Enter port number of the NTP server.			
	\diamond Update Cycle: Set an update cycle, and then access controller			
	time will be updated accordingly.			
	3. Click OK .			

4.10 Safety Management

4.10.1 IP Authority

Select a cyber security mode as needed.

Figure 4-22 IP authority

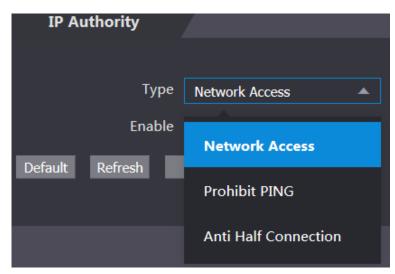

4.10.2 Systems

4.10.2.1 System Service

There are four options: SSH, PWD Reset Enable, CGI, and HTTPS. Refer to "3.12 Features" to select one or more than one of them.

 \square

The system service configuration done on the web page and the configuration on the **Features** interface of the access controller will be synchronized.

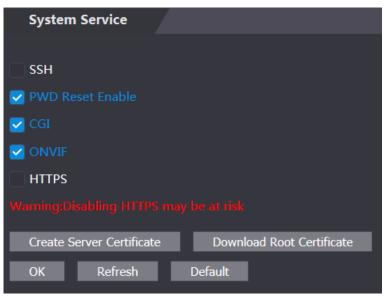


Figure 4-23 System service

4.10.2.2 Creating Server Certificate

Click **Create Server Certificate**, enter needed information, click **Save**, and then the access controller will reboot.

4.10.2.3 Downloading Root Certificate

<u>Step 1</u> Click Download Root Certificate.

Select a path to save the certificate on the **Save File** dialog box.

<u>Step 2</u> Double-click on the **Root Certificate** that you have downloaded to install the certificate. Install the certificate by following the onscreen instructions.

4.11 User Management

You can add and delete users, modify users' passwords, and enter an email address for resetting the password when you forget your password.

4.11.1 Adding Users

Click **Add** on the **User Mgmt.** interface to add users, and then enter username, password, confirmed password, and remark. Click **OK** to complete the user adding.

4.11.2 Modifying User Information

You can modify user information by clicking on the **User Mgmt.** interface.

Figure 4-24	User management
-------------	-----------------

	User Mgmt.	7			
Ι.					
	No.	Username	Remark	Modify	Delete
	1	admin	admin 's account		
	Add Refresh				

4.11.3 Onvif User

Open Network Video Interface Forum (ONVIF), a global and open industry forum with the goal of facilitating the development and use of a global open standard for the interface of physical IP-based security products. When ONVIF is used, administrator, operator, and user have different permission of ONVIF server. Create onvif users as needed.

Figure 4-25 Onvif user

Onvif Use	er			
No.	Username	Group	Modify	Delete
1	admin	admin	1	×
Add Refre	sh			
Kure				

4.12 Maintenance

You can make the access controller reboot itself in idle time to improve the running speed of the access controller. You need to set the auto reboot date and time.

The default reboot time is at 2 O'clock in the morning on Tuesday. Click **Reboot Device**, the access controller will reboot immediately. Click **OK**, the access controller will reboot at 2 O'clock in the morning every Tuesday.

Maintenance				
Auto Reboot	Tuesday	▼ 02	:00	 ~
Reboot De	vice			
ОК	Refresh			
Self Test				
Test				

Figure 4-26 Maintenance

4.13 Configuration Management

You need to do configuration management, select unlock result feedback, Wiegand and serial settings for the access controller.

4.13.1 Config Mgmt.

When more than one access controller needs the same configuration, you can configure parameters for them by importing or exporting configuration files. Figure 4-27 Configuration management

rigato + 27 configuration management					
Config Mgmt.					
Import configuration file	9			Browse	Import configuration
Export configuration					
User	-	USB Import			
User		USB Export			

4.13.2 Features

Select result feedback mode as needed. For details, see "3.12.2 Result Feedback." Figure 4-28 Features

Features					
Result Feedback	Success of	r Failure	•		
Card No. Reverse	C Enable	Close			
Security Module	C Enable	Close			
Door Sensor Type	NC 🧿) NO			
	OK	Refresh		Default	

4.13.3 Wiegand Serial Port Setting

Select Wiegand/serial port setting as needed. For details, see "3.9.2 Serial Port Settings" and "3.9.3 Wiegand Configuration."

Figure 4-29 Wiegand serial port setting

Wiegand serial port setting						
Wiegand	🔘 Wiegan	d Input 🔿 W	iegan	d Output		
Serial Port	Serial Inpu	t	▼			
	OK	Refresh		Default		

4.14 Upgrade

You can select **Auto Check** to upgrade the system automatically. You can also select **Manual Check** to upgrade the system manually.

Figure 4-30 Upgrade

Online Upgrade	
Auto Check OK	
System Version: 1.000.0000000.0.R.20190902	Manual Check
This is the latest version already	

4.15 Version Information

You can view information including MAC address, serial number, MCU version, web version, security baseline version, and system version.

4.16 Online User

You can view username, IP address, and user login time on the Online User interface.

Figure 4-31 Online user

Online User			
No.	Username	IP Address	User Login Time
1	admin	10.33.5.16	2018-12-03 15:34:20
Refresh			

4.17 System Log

You can view and backup the system log on the System Log interface.

Figure 4-32 System log

System Log				
Time Range	© 2018-12-03 00:00:00	2018-12-04 00:00:00		
Туре	All	Query		
No.	Log Time		Username	Log Type
		No data		
Time:				
Username:				
Type: Content:				
Content:				
Backup				i∢ ∢ 1/1 ⊳ ≽i Go to →

4.17.1 Querying Logs

Select a time range and its type, click **Query**, and logs meet the conditions will be displayed.

4.17.2 Backup Logs

Click **Backup** to back up the logs displayed.

4.17.3 Admin Log

Enter Admin ID on the **Admin Log** interface, click **Query**, and then you will see the administrator's operation records.

Adm	in Log			
Admin ID	Query			
No.	Name		Time	Admin ID
		No data		
				i≪ 1/1 ⊳ ≽i Go to
Hover the m	ouse cursor over	, and then you ca	in see detailed ir	nformation of the current
user.				

Figure 4-33 Admin log

4.18 Exit

Click Click OK, and then you will log out the web interface.

5 FAQ

1 The access controller fails to start after power-on.

Check whether the 12V power supply is correctly connected, and whether the power button is pressed.

- Faces cannot be recognized after the access controller powers on.
 Make sure that Face is selected in the unlock mode. See "3.8.2 Unlock".
 Make sure that Face is selected as unlock mode in Access > Unlock Mode > Group Combination. See "3.8.2.3 Group Combination".
- 3 There is no output signal when the access controller and the external controller are connected to the Wiegand port. Check whether the GND cable of access controller and the external controller are connected.
- 4 **Configurations cannot be made after the administrator and password are forgotten.** Delete administrators through the platform, or contact technical support to unlock the access controller remotely.
- 5 User information, and face images cannot be imported into the access controller. Check whether names of XML files and titles of tables were modified because the system will identify the files through their titles.
- 6 When a user's face is recognized, but other users' information is displayed. Make sure that when importing human faces, there are no other people around. Delete the original face, and import it again.

Appendix 1 Notes of Temperature Monitoring

- Warm up the temperature monitoring unit for more than 20 minutes after power-on to enable the temperature monitoring unit to reach thermal equilibrium.
- Install the temperature monitoring unit in an indoor windless environment, and maintain the indoor ambient temperature at 10°C to 40°C.
- Avoid direct sunlight on the temperature monitoring unit.
- Avoid installing the temperature monitoring unit facing at the light source and glass.
- Keep the temperature monitoring unit away from sources of thermal interference.
- The factors such as sunlight, wind, cold air, and air conditioning cold and warm air will affect the surface temperature of human body, which will cause the temperature deviation between the monitored temperature and the actual temperature.
- Sweating is also a way for the body to automatically cool down and dissipate heat, which will also cause the temperature deviation between the monitored temperature and the actual temperature.
- Maintain the temperature monitoring unit regularly (every 2 weeks). Use a soft dust-free cloth to gently wipe the dust on the surface of the temperature sensor and the distance sensor to keep it clean.

Appendix 2 Notes of Face Recording/Comparison

Before Registration

- Glasses, hats, and beards might influence face recognition performance.
- Do not cover your eyebrows when wearing hats.
- Do not change your beard style greatly if you will use the device; otherwise face recognition might fail.
- Keep your face clean.
- Keep the device at least two meters away from light source and at least three meters away from windows or doors; otherwise backlight and direct sunlight might influence face recognition performance of the device.

During Registration

You can register faces through the access controller or through the platform. For registration through the platform, see the platform user manual.

Make your head center on the photo capture frame. A picture of your face will be captured automatically.




Appendix Figure 2-1 Registration

 \square

- Do not shake your head or body, otherwise the registration might fail.
- Avoid two faces appear in the capture frame at the same time.

Face Position


If your face is not at the appropriate position, face recognition effect might be influenced. Appendix Figure 2-2 Appropriate face position

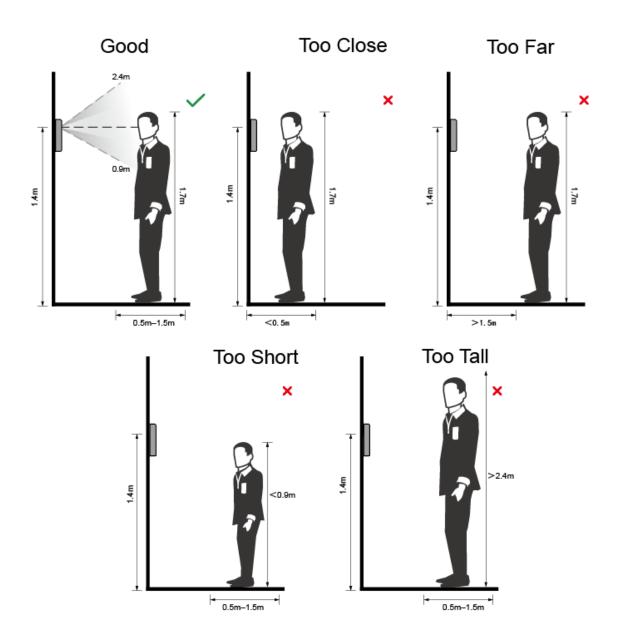

Requirements of Faces


- Make sure that the face is clean and forehead is not covered by hair.
- Do not wear glasses, hats, heavy beards, or other face ornaments that influence face image recording.
- With eyes open, without facial expressions, and make your face toward the center of camera.

• When recording your face or during face recognition, do not keep your face too close to or too far from the camera.

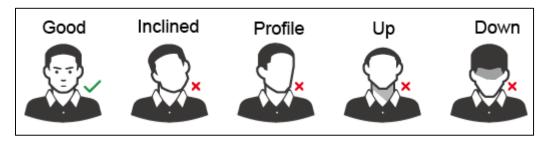

Appendix Figure 2-3 Head position

Appendix Figure 2-4 Face distance

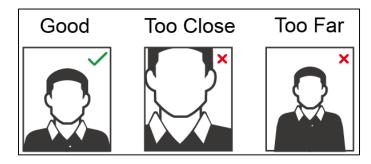

- When importing face images through the management platform, make sure that image resolution is within the range 150 × 300–600 × 1200; image pixels are more than 500 × 500; image size is less than 75 KB, and image name and person ID are the same.
- Make sure that face does not take 2/3 of the whole image area, and the aspect ratio does not exceed 1:2.

Appendix 3 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations on how to create a more secured security system.

Mandatory actions to be taken for basic device network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use overlapped characters, such as 111, aaa, etc.;

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your device (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the device is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

"Nice to have" recommendations to improve your device network security:

1. Physical Protection

We suggest that you perform physical protection to device, especially storage devices. For example, place the device in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable device (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The device supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024~65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the device, thus reducing the risk of ARP spoofing.

8. Assign Accounts and Privileges Reasonably

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

9. Disable Unnecessary Services and Choose Secure Modes

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

10. Audio and Video Encrypted Transmission

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

11. Secure Auditing

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check device log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

12. Network Log

Due to the limited storage capacity of the device, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

13. Construct a Safe Network Environment

In order to better ensure the safety of device and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.

- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.
- Enable IP/MAC address filtering function to limit the range of hosts allowed to access the device.